ICF-PRO70/PRO80

SERVICE MANUAL

REVISED

Photo: ICF-PRO70

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
ICF-PRO80
AEP Model
E Model
ICF-PRO70

SPECIFICATIONS

Circuit system	LW/MW/SW/VHF: Dual conversion superheterodyne . . . (ICF-PRO70 Type 1 and ICF-PRO80) LW/MW/SW: Dual conversion superheterodyne . . . (ICF-PRO70 Type 2–4) FM: Superheterodyne
Frequency coverage	**ICF-PRO70** Type 1: 150 kHz–108 MHz Type 2: 150–29,995 kHz and 87.6–108 MHz Type 3: 150–26,100 kHz and 87.5–108 MHz Type 4: 150–285 kHz, 531–26,100 kHz and 87.6–108 MHz **ICF-PRO80** 150 kHz–108 MHz (without using the FRQ-80 frequency converter) 115.15–223 MHz (using the FRQ-80)
Antennas	SW/VHF/FM: Telescopic antenna . . . (ICF-PRO70 Type 1 and ICF-PRO80) SW/FM: Telescopic antenna . . . (ICF-PRO70 Type 2–4) LW/MW: Built-in ferrite bar antenna External antenna connector: TNC connector . . . (except West Germany model)
Speaker	7 × 3.5 cm
Power output	400 mW (at 10% harmonic distortion)
Output jack	Earphone jack (minijack) (1) 8 ohm Recording output jack (minijack) (1) Output level 0.775 mV (–60 dB) Output impedance 1 kilohm
Power requirements	6 V DC (for radio/computer backup) Four size AA (R6) batteries or BP-23 rechargeable battery pack (optional) DC IN 6 V jack accepts: AC-D4 AC power adaptor (optional) for use on 100, 120, 220 or 240 V AC depending on the model type of the AC-D4 available in your country DCC-127A or DCC-120 car battery cord (optional) for use with 12 V car battery DCC-240 car battery cord (optional) for use with 24 V car battery EBP-6 battery case (optional) using four size C (R14) batteries
Battery life	Approx. 10 hours using Sony SUM-3(NS) batteries
Dimensions	Approx. 90 × 182 × 50 mm (w/h/d) ($3\frac{5}{8} \times 7\frac{1}{4} \times 2$ inches) including projecting parts and controls, not including the telescopic antenna
Weight	Approx. 650 g (1 lb 7 oz) including batteries, shoulder strap and telescopic antenna

FRQ-80 frequency converter (supplied with the ICF-PRO80 only)

Shift frequency	115 MHz
Attenuator	0 dB/–30 dB
Power requirements	3 V DC, two size AA (R6) batteries
Battery life	Approx. 80 hours using Sony SUM-3(NS) batteries
Dimensions	Approx. 40 × 98 × 31 mm (w/h/d) ($1\frac{5}{8} \times 3\frac{7}{8} \times 1\frac{1}{4}$ inches) including projecting parts and controls
Weight	Approx. 120 g (4.2 oz) including batteries

Accessories supplied

Telescopic antenna (1)
Earphone (1)
Shoulder strap (1)
Carrying case (1)
Antenna holder (1)
Antenna plug adaptor (BNC ↔ TNC) (1) . . . (except West Germany model)
FRQ-80 frequency converter (ICF-PRO80 only) (1)
Wave Handbook (1)

PLL SYNTHESIZED RECEIVER

SONY®

使用時は添付資料も参照のこと
Refer to the accompanied documents.

FEATURES

WORLD-WIDE FREQUENCY COVERAGE

No band selector is provided.
The entire frequency range is tuned in consecutively. The detection mode is set automatically according to the frequency range to which the tuned frequency belongs.

Selectable detection modes
(Except ICF-PRO70 West Germany and Saudi Arabia model)
The entire frequency coverage is divided into 2 to 4 ranges depending on the model type, and the detection modes, FM, NARROW FM, AM WIDE, AM NARROW and SSB* can be selected for each range.

* SSB = Single Side Band

Frequency converter supplied for wider coverage (ICF-PRO80 only)
By attaching the supplied FRQ-80 frequency converter, 115.15-223 MHz can also be received.

VERSATILE TUNING MODES

Direct tuning (Page 6) by inputting a frequency to be tuned in	• When you know the frequency of the station
Memory tuning (Page 7) by simply pressing one button to tune in the stored station	• For daily listening to your favorite station
Manual tuning (Page 8) by scanning frequencies step by step at a determined interval	• When you do not know the frequency of the station • To tune in precisely a station located by scan tuning or limited scan tuning precisely
Scan tuning (Page 9) by automatically scanning the entire frequency coverage	• When you do not know the frequency of the station
Limited scan tuning (Page 10) by automatically scanning the frequency coverage you have defined	• When you know the frequency range in which the desired station is located (e.g. FM or MW radio broadcasting range, an SW meter band).
Memory scan tuning (Page 10) by automatically scanning the stored (up to 10) stations	• To choose a station from among those stored in a certain memory page
Program memory scan tuning (Page 11) by automatically scanning only the stations you have programmed among all stored in memory (up to 40 stations) in the order programmed	• To choose a station from among those having the specified conditions (e.g. FM broadcasting stations)
Priority tuning (Page 12) by tuning in the specified station every 3 seconds	• To catch a radio communication when you are not sure when it will take place.

CONVENIENT FUNCTIONS

Memory of up to 40 stations (Page 7)	Up to 40 stations can be stored on 4 memory pages (10 stations for each page) and tuned in instantly.
Three scan modes selectable (Page 9)	Scanning can be stopped at the first-located station, or be resumed after each station located has been received for several seconds or until the signal of the station stops.
Memory search (Page 7)	The frequencies of the stations stored on one page are displayed in sequence while your desired station is kept tuned in.
Program memory search (Page 11)	The frequencies of the stations programmed are displayed in sequence while your desired station is kept tuned in.
Memory protection (Page 7)	The memory of one page (10 stations stored) is locked so that it cannot be changed inadvertently.
Key protection (Page 8)	The buttons on the front panel are locked so that they cannot be operated by accident.
Squelch control (Page 9)	The receivable signal level can be adjusted so that scanning stops at stations with stronger signals only and noise is suppressed while tuning and while no station signal is present.
Fine tuning (Page 13)	AM (LW, MW and SW) and SSB stations can be tuned in precisely.

TABLE OF CONTENTS

Section *Title* *Page*

Specifications 1
Features 2

1. GENERAL

Notes on Model Types and Receivable Frequencies 3
To Change the MW Tuning Interval 3
To Erase All Memory 3
Location and Function of Controls 4
Direct Tuning 6
Memory Tuning 7
Manual Tuning 8
Scan Tuning 9
Limited Scan Tuning 10
Memory Scan Tuning 10
Program Memory Scan Tuning 11
Priority Tuning 12
To Select the Detection Mode 12
Fine Tuning 13
To Convert the Frequency Coverage (ICF-PRO80 only) 14

2. ELECTRICAL ADJUSTMENTS

Reference-Frequency Oscillator (7.2 MHz) Adjustment 16
VCO1 PD-Voltage Adjustment 17
FM-L Tracking Adjustment 17
VCO2 PD-Voltage Adjustment 18
FM-H Tracking Adjustment 18
FM IF Adjustment 19
Second Local Oscillator Adjustment 19
AM 1st and 2nd IF Adjustment 20
NARROW-FM Detector Adjustment 20
AM AGC Adjustment 21

3. DIAGRAMS

IC Block Diagrams 21
Semiconductor Lead Layouts 22
3-1. Signal, PLL Section Printed Wiring Boards 23
3-2. Schematic Diagram 27
3-3. Converter Board Schematic Diagram . . . 30
3-4. Control Section Printed Wiring Boards . . 30

4. EXPLODED VIEWS 33

5. ELECTRICAL PARTS LIST 36

NOTES ON MODEL TYPES AND RECEIVABLE FREQUENCIES

The ICF-PRO70/PRO80 is available in various models which differ mainly in their frequency coverage to match the regulations of different countries.

Model type	Frequency coverage
ICF-PRO70	
Type 1 (Swiss, E (except Saudi Arabia) model)	150 kHz – 108 MHz: LW/MW/SW/VHF/FM
Type 2 (AEP (except Swiss and West Germany) model)	150 kHz – 29,995 kHz: LW/MW/SW; 87.6 MHz – 108 MHz: FM
Type 3 (West Germany model)	150 kHz – 26,100 kHz: LW/MW/SW; 87.5 MHz – 108 MHz: FM
Type 4 (Saudi Arabia model)	150 kHz – 285 kHz: LW; 531 kHz – 26,100 kHz: MW/SW; 87.6 MHz – 108 MHz: FM
ICF-PRO80	
Without using the supplied frequency converter	150 kHz – 108 MHz: LW/MW/SW/VHF/FM
Using the converter	115.15 MHz – 223 MHz: AIR/PSB/TV (VHF)

Although the models differ in some minor parts in relation to the difference in frequency coverage, the operating procedures of all the units are identical. The differences are clearly described in the text as required.
The photos and illustrations used in this manual represent a typical model.

TO CHANGE THE MW TUNING INTERVAL

The MW tuning interval is factory preset to 9 kHz or 10 kHz to match the local frequency allocation system.*
If you use the receiver in an area where the frequency allocation system is based on the other interval, change the position of the MW CH STEP selector in the battery compartment as follows.

1 Remove the battery case.

2 Switch the MW CH STEP selector.

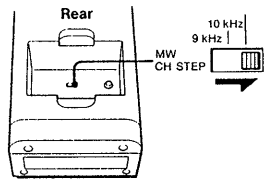

3 Replace the battery case and close the lid.

TO ERASE ALL MEMORY

The stations, program, scan mode, etc. stored in the memory are retained even if the power is once turned off or the batteries are replaced (within 3 minutes). To erase all the memory to initialize the unit, press the RESET button in the battery compartment.

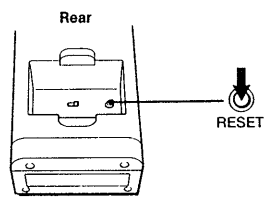

* The illustrations used in this manual show 9 kHz setting.

LOCATION AND FUNCTION OF CONTROLS

For details on the use of each control, refer to the pages indicated in the black circles.

A

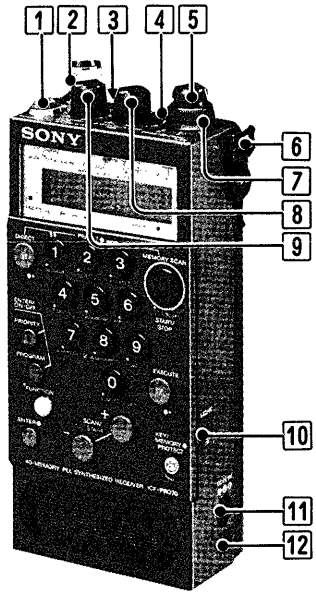

B

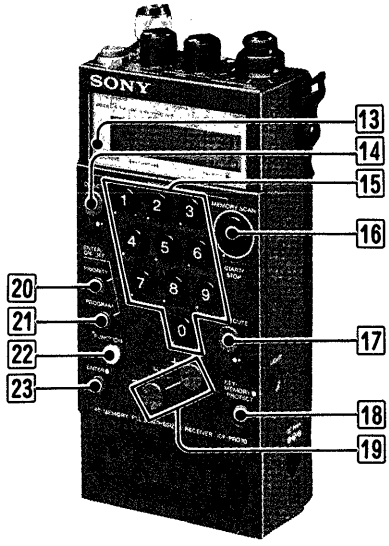

Front (Photos A and B)

1 POWER switch

2 Antenna connector

3 (earphone) jack (minijack)
Connect an earphone or an external speaker.

4 (recording output) jack (minijack)

5 FINE/SSB control ⓭
Used for AM and SSB fine tuning.
FINE: When AM WIDE or AM NARROW detection mode is selected, press FUNCTION + ⑥ so that the "FINE" indicator appears and fine tune with this control.
SSB: When SSB detection mode is selected, fine tune with this control.*

* SSB mode is not provided with the ICF-PRO70 type 4 model.

6 Loop for shoulder strap

7 PAGE selector ❼
Select memory page, 1 to 4.

8 SQL (squelch) control ❾
Adjust the squelch level.
AUTO (depressed): The signal (and noise) with a lower level than the factory-preset level is cut.
MANUAL (released): Adjust manually the level of the signal you want to receive.

9 VOLUME/TONE control
Functions as a volume control and a tone control.
VOLUME: Turn to adjust the volume.
TONE: Depress (LOW) to emphasize bass, and press to release (HIGH) to emphasize treble.
The volume can be adjusted in either the depressed or released position.

10 LIGHT button
Press to illuminate the display window for approximately 10 seconds. If any button on the front panel is pressed, the illumination will remain for 10 seconds more.

11 DC IN 6 V (external power input) jack
Connect the optional AC power adaptor or car battery cord.

12 Battery case (rear)

13 RECEIVE indicator
Lights red when a signal or noise is received.

14 DIRECT button ❻
Press to start direct tuning.
This button is also used in combination with FUNCTION or ENTER.

15 Number buttons
Press to recall the stored station (memory tuning). ❼
Press to input the frequency of a station for direct tuning. ❻
These buttons are also used in combination with FUNCTION, ENTER, PROGRAM or PRIORITY.

16 MEMORY SCAN button ❿ ⓫
Press to start memory scan tuning (with PROGRAM OFF) and program memory scan tuning (with PROGRAM ON).
This button is also used in combination with FUNCTION.

17 EXECUTE button ❻
Press this button to tune in the frequency for direct tuning.
This button is also used in combination with FUNCTION or ENTER.

18 KEY/MEMORY PROTECT button ❽
Press to activate the key protection function (i.e. the indicator appears). The buttons on the front panel are locked and no longer function. Press again to deactivate the key protection function.
This button is also used in combination with ENTER.

19 SCAN +/− buttons
Used for manual tuning. ❽
This button is also used to start scan tuning and limited scan tuning. ❾ ❿

20 PRIORITY button ⓬
Press to activate priority tuning (i.e. PRIORITY indicator appears). Press again to deactivate it.

21 PROGRAM button ⓫
Press to activate program memory scan tuning and program memory search (i.e. PROGRAM indicator appears). Press again to deactivate it.

22 FUNCTION button
When a button with a yellow dot is pressed with this button, the function of the button changes to that indicated on the panel together with the yellow dot.

Buttons to be pressed	Function
FUNCTION + ① (SCAN 1) + ② (SCAN 2) + ③ (SCAN 3)	To select the scan mode for scan, limited scan, memory scan and program memory scan tuning. ❾
FUNCTION + ④ (FM) + ⑤ (AM WIDE) + ⑦ (NARROW FM)* + ⑧ (AM NARROW) + ⑨ (SSB)**	To select the detection mode. ⓬ ⓭
FUNCTION + ⑥ (FINE ON/OFF)	Press to activate AM fine tuning (i.e. FINE indicator appears). Press again to deactivate it. ⓭
FUNCTION + ⓪ (LIMIT ON/OFF)	Press to activate limited scan tuning (i.e. the limited scan indicator appears). Press again to deactivate it. ❿
FUNCTION + DIRECT (L1) + EXECUTE (L2)	To display the preset limit frequency. ❿
FUNCTION + MEMORY SCAN (SEARCH)	To activate the memory search function (with PROGRAM OFF) or program memory search function (with PROGRAM ON). ❼ ⓫

* NARROW FM is not provided with the ICF-PRO70 type 3 and type 4 models.
** SSB is not provided with the ICF-PRO70 type 4 model.

Note: For power switch (West Germany model only)

There are two power switches in West Germany model.

1. POWER switch (S203)
2. Switch in antenna connector (S102)

Therefore, power is supplied by installing a telescopic antenna in the antenna connector (S102 turns ON) and turning the POWER switch on.

C

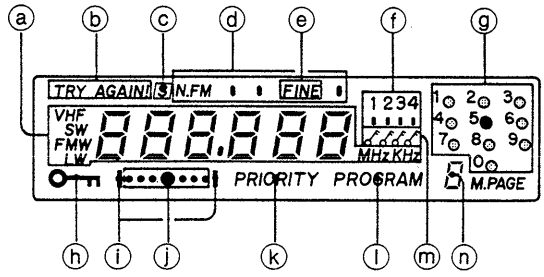

23 ENTER button

When a button with a white dot is pressed with this button, the function of the button changes to that indicated on the panel in white.

Buttons to be pressed	Function
ENTER + ① - ⓪ (PRESET)	To store the station being tuned in on the number buttons ❼
ENTER + DIRECT (L1) + EXECUTE (L2)	To store the limit frequency. ❿
ENTER + KEY/MEMORY PROTECT (MEMORY PROTECT)	Press to activate the memory protection function (i.e. 🔑 indicator appears below the PAGE selector setting indicator). Press again to deactivate it. ❼

Display window (illustration C)

ⓐFrequency being received
ⓑTRY AGAIN indicator
ⓒS (frequency shift) indicator (ICF-PRO80 only)
ⓓDetection mode indicator
ⓔFINE (fine tuning) indicator
ⓕPAGE selector setting indicator
ⓖMemory station indicator
The dot lights to show that the station stored on the corresponding number button is being received.
ⓗKey protection indicator
ⓘLimited scan indicator
ⓙScan mode indicator
ⓚPRIORITY indicator
ⓛPROGRAM indicator
ⓜMemory protection indicator
ⓝMemory page indicator

Abbreviations and symbols used in this manual

DIRECT ○	□ and ○ represent a button.
FUNCTION + 1 ○ + 1	+ indicates that the latter button is pressed while the former button is kept pressed.
DIRECT → 1 ○ → 1	→ indicates that the latter button is pressed after the former button.
Beep!	Indicates that operation is accepted.
Honk!	Indicates that operation is rejected.

DIRECT TUNING

If you know the frequency of a station to be received, you can tune in the station easily by inputting its frequency.

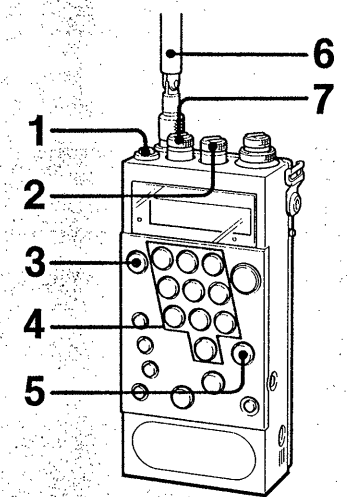

1 Depress POWER.

2 Set SQL to MIN.

3 Press DIRECT.

DIRECT

Display window

4 Input the frequency of the station with the number buttons.

① ② ④ ②

5 Press EXECUTE.

EXECUTE Beep!

6 Adjust the antenna.

7 Adjust VOLUME.

After listening, press to release POWER.

TO INPUT A FREQUENCY

Normally, input the frequency in kHz.	88.5 MHz (=88,500 kHz)	DIRECT → 8 → 8 → 5 → 0 → 0 → EXECUTE Beep! → FM 88.500 MHz
Righthand 000 can be omitted.	2,000 kHz	DIRECT → 2 → EXECUTE Beep! → SW 2000 kHz
	20,000 kHz	DIRECT → 2 → 0 → EXECUTE Beep! → SW 20000 kHz
	90 MHz	DIRECT → 9 → 0 → EXECUTE Beep! → FM 90.000 MHz
	108 MHz	DIRECT → 1 → 0 → 8 → EXECUTE Beep! → FM 108.000 MHz

When you input a wrong frequency	——	Press DIRECT and input the correct frequency. (TRY AGAIN! will disappear after about 5 seconds and the previous station will return.)
When a honk sounds	0 is pressed first or more than 6 digits are input.	
When TRY AGAIN! indication blinks	A frequency beyond the receivable frequency coverage has been input.*	

* For the receivable frequency coverage of each model, see page 3.

When reception is unsatisfactory

• See page 12.

Notes

- After pressing a button, press the next button within 5 seconds. If you do not, the previous station will return.
- With direct tuning, the frequency is displayed in steps of the following intervals.

Frequency coverage	Interval
150 - 528 kHz	3 kHz
531 - 1,602 kHz	9 kHz*
1,605 - 45,995 kHz	5 kHz
50 - 75.995 MHz	5 kHz**
76 - 108 MHz	50 kHz

If you input a frequency between intervals, the frequency at the interval just below will be tuned in and displayed. For example, if you input 92.540 MHz, 92.500 MHz will be tuned in and displayed.

* The MW tuning interval can be changed to 10 kHz. See page 3.

** When the detection mode is FM, the interval of this range will be 50 kHz.

MEMORY TUNING

Up to 40 stations can be stored on 1 to 4 memory pages (10 stations on each page) and tuned in by pressing a button.
The frequency and the detection mode of each station can be stored.

TO STORE A STATION

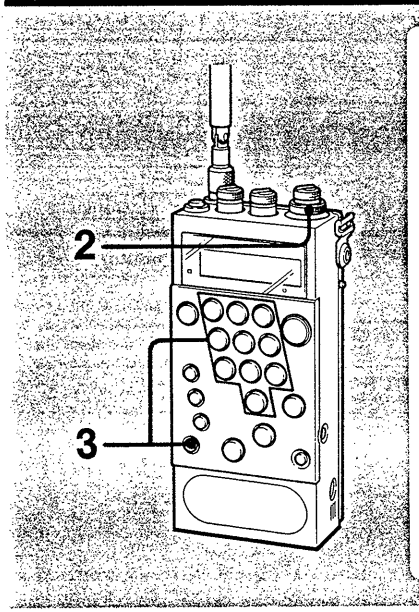

1 Tune in the desired station by direct, manual, scan or limited scan tuning.
If necessary, select the appropriate detection mode. (See page 12.)

2 Select the memory page on which the station is to be stored with PAGE.

PAGE selector setting indicator



3 Keeping ENTER pressed, press one of the number buttons.

Button on which the station is stored



Memory page

Repeat steps 2 and 3 for each number button and for each memory page.

MEMORY TUNING

1 Depress POWER.

2 Set SQL to MIN.

3 Set PAGE to the memory page on which the desired station is stored.

4 Press the number button.

MEMORY SEARCH—To display the data of stored stations successively

You can check the stations stored on one memory page while you are listening to your desired program.

1 Select the memory page with PAGE.

2 **Keeping FUNCTION pressed,** repeatedly press MEMORY SCAN momentarily or press it for more than 0.5 second and release.



The data of the stored stations will be displayed in the sequence
①→②→...→⓪→①→...

3 Release FUNCTION to return the display to the station being received.

MEMORY PROTECTION—To prevent accidental erasing of the memory

Using this function, new stations cannot be committed to memory on one memory page.

To activate the memory protection function

1 Select the memory page with PAGE.

2 Keeping ENTER pressed, press KEY/MEMORY PROTECT.

Memory protection indicator

When the memory protection indicator is displayed, a new station cannot be committed to memory on that page. When ENTER and a number button are pressed, a honk sounds.

To disactivate the memory protection function, select the memory page and press ENTER + KEY/MEMORY PROTECT so that the 🔑 indicator disappears.

Note
The memory protection function remains activated after the power is once turned off.

MANUAL TUNING

Use manual tuning when you do not know the frequency of the station you want to tune in, or when you want to tune in a station more precisely after scan tuning or limited scan tuning.

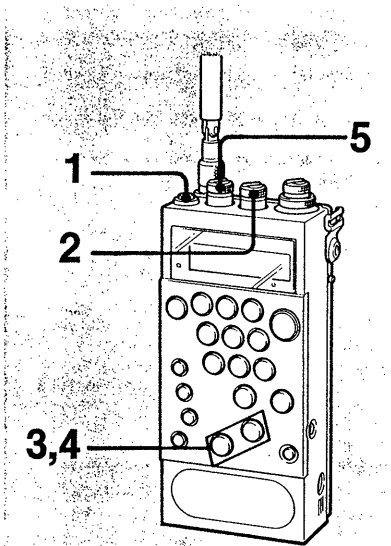

1 Depress POWER.

2 Set SQL to MIN.

3 Keep SCAN + or – pressed until the desired station is received.

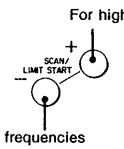

4 Repeatedly press SCAN + or – momentarily to tune in the station precisely.

5 Adjust VOLUME.

After listening, press to release POWER.

During manual tuning, the frequency is increased or decreased by the intervals shown in direct tuning (page 6). A beep will sound when the interval is changed with SCAN +/– kept depressed.

While SCAN +/– is kept depressed, the frequency changes continuously even if a station is tuned in.

KEY PROTECTION—To avoid accidental operation of the buttons

With the key protection function engaged, the buttons on the front panel will not operate even if they are pressed inadvertently. This is convenient when you carry the set.

To activate the key protection function
Press KEY/MEMORY PROTECT.

To deactivate the key protection function
Press KEY/MEMORY PROTECT so that 🔑 indicator disappears.

Note
The key protection function will be deactivated when the PAGE selector is turned or the power is disconnected.

SCAN TUNING

The stations in the entire receivable frequency coverage can be scanned. Scanning stops automatically when a station is received.

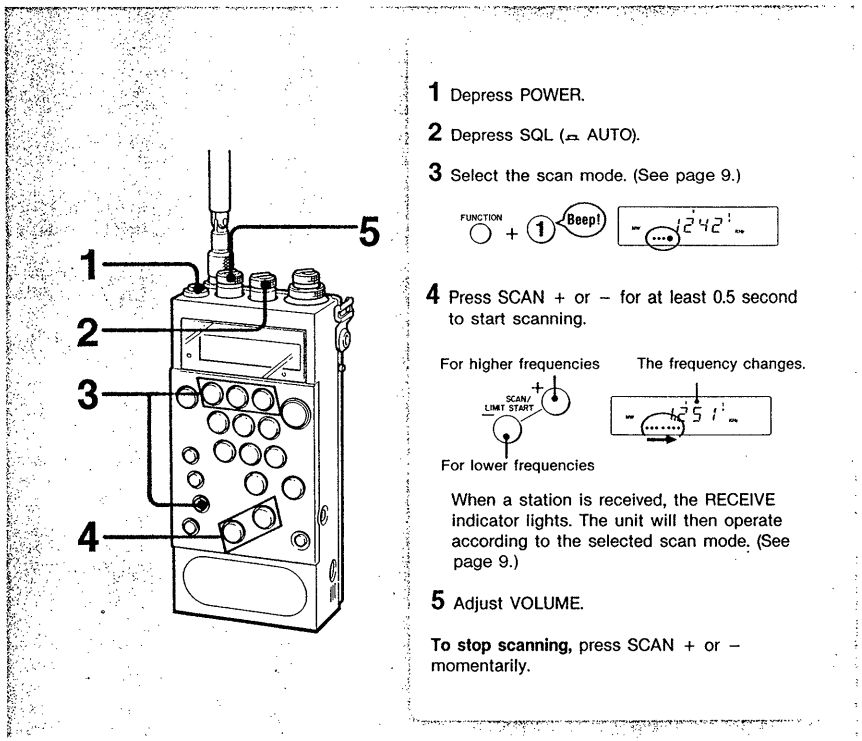

1 Depress POWER.

2 Depress SQL (⏢ AUTO).

3 Select the scan mode. (See page 9.)

FUNCTION ○ + ① Beep!

4 Press SCAN + or − for at least 0.5 second to start scanning.

For higher frequencies

SCAN/ LIMIT START

For lower frequencies

The frequency changes.

When a station is received, the RECEIVE indicator lights. The unit will then operate according to the selected scan mode. (See page 9.)

5 Adjust VOLUME.

To stop scanning, press SCAN + or − momentarily.

TO SELECT THE SCAN MODE

There are three scan modes for scan, limited scan, memory scan and program memory scan tuning which differ in the operation of the unit after the first station is located. Select the desired scan mode.

Scan mode	When the first station is located	How to set	Scan mode indicator
SCAN 1	Scanning stops and the first station is received continuously.	FUNCTION ○ + ①	•••●
SCAN 2	The station is received for 2 seconds and scanning is resumed.	FUNCTION ○ + ②	•••●••• (during reception)
SCAN 3	The station is received until the station signal stops and then scanning is resumed.	FUNCTION ○ + ③	•●• (during reception)

HOW TO USE THE SQUELCH CONTROL

The SQL control adjusts the level of the signal (and noise) so that the signal (and noise) below the adjusted level is suppressed. A station with a lower level signal will not be heard when selected by direct or memory tuning, or scanning will not stop at such a station.

Adjustment and function of the SQL control		When to use
⏢ AUTO SQL	Signal below the factory-preset level will be suppressed.	Normally set to this position.
⏢ MANUAL MIN	Turn towards MIN to receive even weaker signal.	• When scanning does not stop • When a station is not received by direct or memory tuning
⏢ MANUAL MAX	Turn towards MAX to receive stronger signals only.	• When scanning does not begin • To suppress noise during the interval between broadcasts

If scanning stops a little before or after a station
Tune in the frequency precisely by manual tuning.

If scanning will not start or will not stop at all
Adjust SQL. See page 9.

If an unintended frequency range is scanned
If the I I (limited scan) indicator is displayed, limited scan tuning is activated (page 10). Press FUNCTION + ⓪ so that the limited scan indicator disappears.

During scan tuning, the frequency is increased or decreased by the intervals shown in direct tuning (page 6). A beep will sound when the interval is changed with SCAN +/− kept depressed.

Note
Turn SQL little by little by observing the RECEIVE indicator. Be careful not to turn it too much.

LIMITED SCAN TUNING

The stations in the desired frequency range can be scanned by defining the upper limit and lower limit frequencies of the scanning.

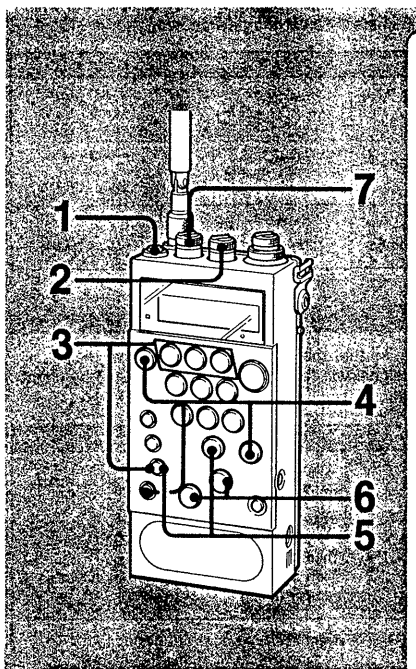

1 Depress POWER.

2 Depress SQL (⏛ AUTO).

3 Select the scan mode. See page 9.
Keeping FUNCTION pressed, press 1 (2 or 3).

4 Store the lower and upper limit frequencies.
e.g. To scan between 531 - 1,602 kHz
① Tune in the lower limit frequency (531 kHz) with direct tuning.
② Keeping ENTER pressed, press DIRECT.



Displayed while ENTER and DIRECT are pressed.

The lower limit frequency is now stored.
③ Tune in the upper limit frequency (1,602 kHz), and keeping ENTER pressed, press EXECUTE.



The upper limit frequency is now stored.

5 Set to limited scan mode.



Limited scan indicator

6 Press SCAN + or − for at least 0.5 second to start scanning.

When a station is received, the RECEIVE indicator lights. The unit will then operate according to the selected scan mode. (See page 9.)

7 Adjust VOLUME.

To stop scanning, press SCAN + or − momentarily.

To disengage the limited scan mode, keep FUNCTION pressed and press ⓪ so that the limited scan indicator disappears.

To check the stored lower and upper limit frequencies
Keeping FUNCTION pressed, press DIRECT or EXECUTE. While the buttons are pressed, the lower or upper limit frequency is displayed in the window.

Notes
- The upper limit frequency can be stored on DIRECT, and the lower limit frequency on EXECUTE, or vice versa.
- The limited scan mode and the memory of the lower and upper limit frequencies remain even if the power is once turned off.

MEMORY SCAN TUNING

The stations stored on one of the four memory pages can be scanned in the sequence ①→②→...→⓪, repeatedly.

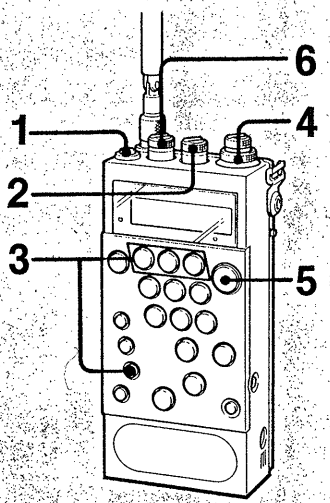

1 Depress POWER.

2 Depress SQL (⏛ AUTO).

3 Select the scan mode. See page 9.
Keeping FUNCTION pressed, press 1 (2 or 3).

4 Select the desired memory page with the PAGE selector.



5 Repeatedly press MEMORY SCAN momentarily, or press it for at least 0.5 second and release it.



The stored stations will be scanned continuously in the sequence 1 to 0.

When a station is received, the RECEIVE indicator lights. The unit will then operate according to the selected scan mode. (See page 9.)

6 Adjust VOLUME.

To stop scanning, press MEMORY SCAN momentarily.

If scanning will not start or will not stop at all
Adjust SQL. See page 9.

If scanning is carried out in an unintended sequence
If the PROGRAM indicator is displayed, program memory scan tuning is activated (page 11). Press PROGRAM so that the PROGRAM indicator disappears.

PROGRAM MEMORY SCAN TUNING

Only required stations among the stored 40 stations can be scanned in the required sequence repeatedly.

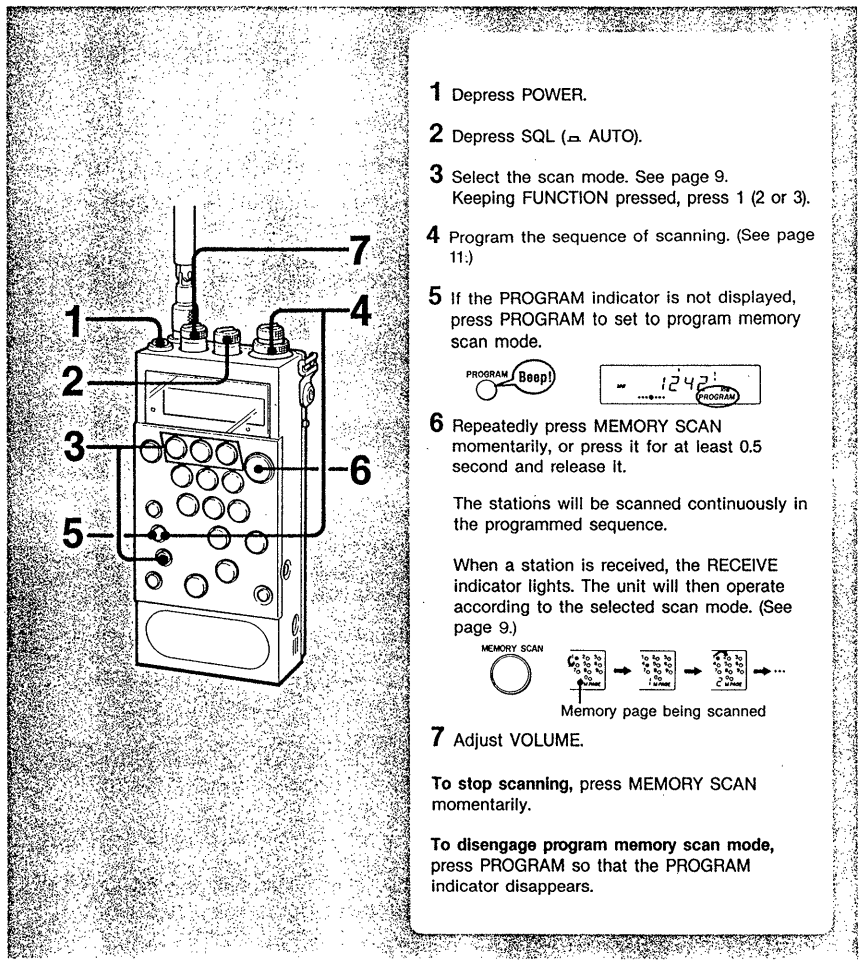

1 Depress POWER.

2 Depress SQL (⊓ AUTO).

3 Select the scan mode. See page 9.
Keeping FUNCTION pressed, press 1 (2 or 3).

4 Program the sequence of scanning. (See page 11.)

5 If the PROGRAM indicator is not displayed, press PROGRAM to set to program memory scan mode.

6 Repeatedly press MEMORY SCAN momentarily, or press it for at least 0.5 second and release it.

The stations will be scanned continuously in the programmed sequence.

When a station is received, the RECEIVE indicator lights. The unit will then operate according to the selected scan mode. (See page 9.)

Memory page being scanned

7 Adjust VOLUME.

To stop scanning, press MEMORY SCAN momentarily.

To disengage program memory scan mode, press PROGRAM so that the PROGRAM indicator disappears.

TO PROGRAM STATIONS

1 Store stations on the number buttons. See page 7.

2 Keeping PROGRAM pressed, press the number buttons in the desired sequence. To program stations on two or more memory pages, switch the PAGE selector as required.

Keep PROGRAM pressed throughout the programming.



The memory station indicators and memory page indicator appear to indicate the programmed buttons.



Up to 40 stations can be programmed in the sequence you press the number buttons.

3 Release PROGRAM.

PROGRAM MEMORY SEARCH—To display the data of the programmed stations successively

You can check the programmed stations while you are listening to your desired station.

1 Press PROGRAM to display the PROGRAM indicator.

2 Keeping FUNCTION pressed, repeatedly press MEMORY SCAN momentarily or press it for more than 0.5 second and release.



The data of the stations will be displayed successively in the programmed sequence.

3 Release FUNCTION to return the display to the station being received.

If scanning will not start or will not stop at all
Adjust SQL. See page 9.

The factory-preset program

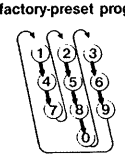

and pages 1 to 4.

Notes
- The same number button can be programmed twice or more. Each pressing is counted as one station. However, do not press the same number button twice in succession, as programming fails.
- Program memory scan mode and the memory of the programmed sequence remain even if the power is turned off.

PRIORITY TUNING

If a certain station stored is designated as the priority station, the unit automatically tunes to the station every 3 seconds to check whether there is a signal or not. If there is a signal, the priority station is tuned in continuously.

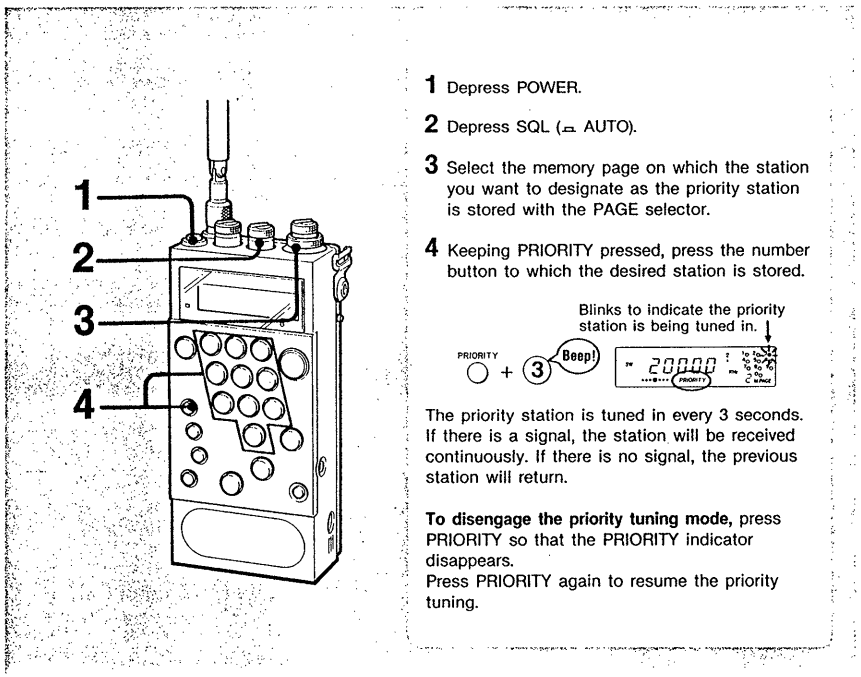

1 Depress POWER.

2 Depress SQL (⏢ AUTO).

3 Select the memory page on which the station you want to designate as the priority station is stored with the PAGE selector.

4 Keeping PRIORITY pressed, press the number button to which the desired station is stored.

The priority station is tuned in every 3 seconds. If there is a signal, the station will be received continuously. If there is no signal, the previous station will return.

To disengage the priority tuning mode, press PRIORITY so that the PRIORITY indicator disappears.
Press PRIORITY again to resume the priority tuning.

Notes
- A beep will sound when the priority station is tuned in.
- Priority tuning mode and the memory of the priority station remains even if the power is turned off.

TO SELECT THE DETECTION MODE

Several detection modes depending on the model type can be selected for each frequency range indicated by I to IV in the following tables.

ICF-PRO70 Type 1 and ICF-PRO80

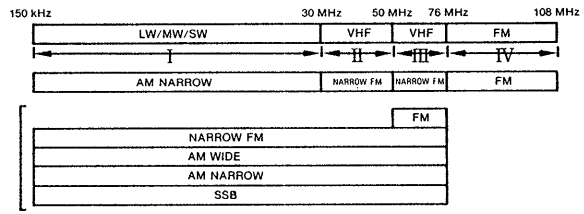

ICF-PRO70 Type 2

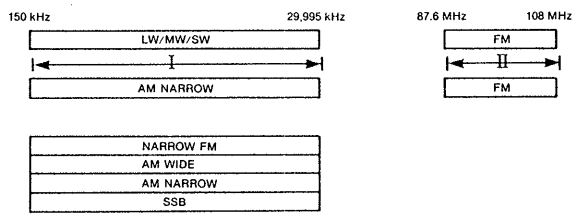

ICF-PRO70 Type 3

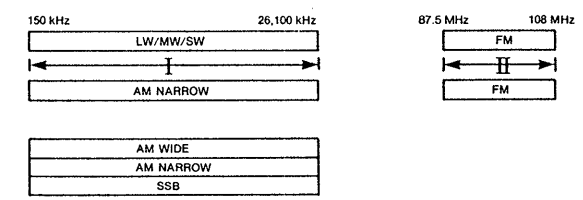

ICF-PRO70 Type 4

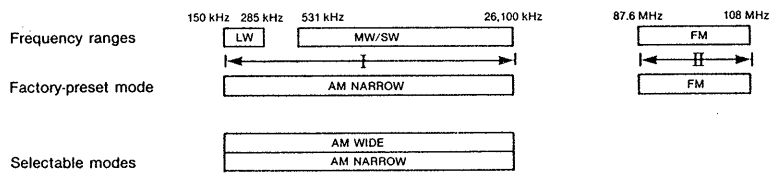

If the detection mode is incorrect

- VHF communications cannot be received with AM WIDE, AM NARROW or SSB mode. If they are received with FM mode, the sound volume becomes very low.
- SSB communications can be received with SSB mode only.

Notes

- The stations stored on the number buttons can be tuned in with their own detection mode stored.
- When a stored station is tuned in, the detection mode of the corresponding frequency range is automatically set to the stored mode. If necessary, reset the detection mode after listening to that particular station.

TO SELECT THE DETECTION MODE

To select the detection mode

1 Tune in a frequency within the frequency range for which the detection mode is to be changed.

2 Keeping FUNCTION pressed, press number button 4, 5, 7, 8 or 9.

Detection mode indicator

Buttons to be pressed	Detection mode	When to use
FUNCTION + ④	FM	To receive FM broadcasts, and TV (VHF) sound
FUNCTION + ⑤	AM WIDE	To receive AM (LW, MW and SW) broadcasts, normally set to this mode for dynamic sound.
FUNCTION + ⑦	NARROW FM	To receive VHF communications, etc. (not provided with the ICF-PRO70 Type 3 and 4)
FUNCTION + ⑧	AM NARROW	When AM (LW, MW and SW) reception is interrupted or noisy, this mode may improve the reception.
FUNCTION + ⑨	SSB	To receive SSB communications (not provided with the ICF-PRO70 Type 4)

Other stations in the same frequency range will also be tuned in with direct, scan or limited scan tuning, with the selected detection mode.

FINE TUNING

AM (LW/MW/SW) FINE TUNING

Fine tune an AM station in the AM WIDE or AM NARROW detection mode.

1 Tune in the desired station.

2 Keeping FUNCTION pressed, press ⑥.

Fine tuning indicator



3 Turn FINE/SSB for the best possible reception. Fine tuning range is approximately ± 3.5 kHz.

To disengage fine tuning mode, keep FUNCTION pressed and press ⑥ so that the FINE indicator disappears.

SSB FINE TUNING

In SSB mode, fine tuning is necessary for each station received.

1 Select the SSB detection mode and tune in the desired station.

2 Turn FINE/SSB for the best possible reception. Fine tuning range is approximately ± 3.5 kHz.

Notes

- The FINE indicator appears only when FUNCTION + ⑥ are pressed in AM WIDE or AM NARROW mode.
- The FINE/SSB control functions only when the FINE or SSB indicator is displayed.

TO CONVERT THE FREQUENCY COVERAGE (ICF-PRO80 only)

The supplied FRQ-80 frequency converter shifts the frequency coverage of the receiver by 115 MHz, i.e. to 115.15-223 MHz, to allow reception of air band, PSB (Public Service Band) and TV VHF channels. etc.

INSTALLATION OF THE FREQUENCY CONVERTER

1 Insert the two optional size AA (R6) batteries into the converter.

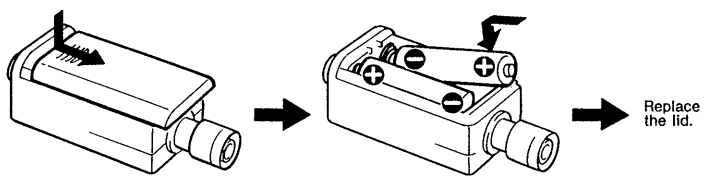

2 Detach the telescopic antenna from the receiver.

3 Attach the telescopic antenna to the frequency converter, and then the converter to the antenna connector.

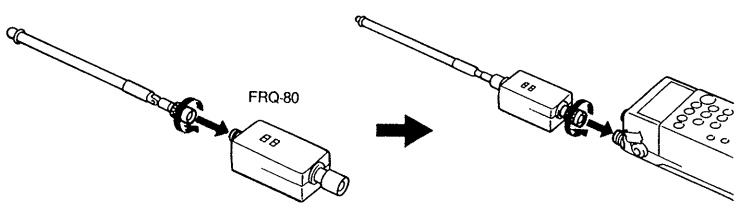

TO SHIFT THE FREQUENCY DISPLAY

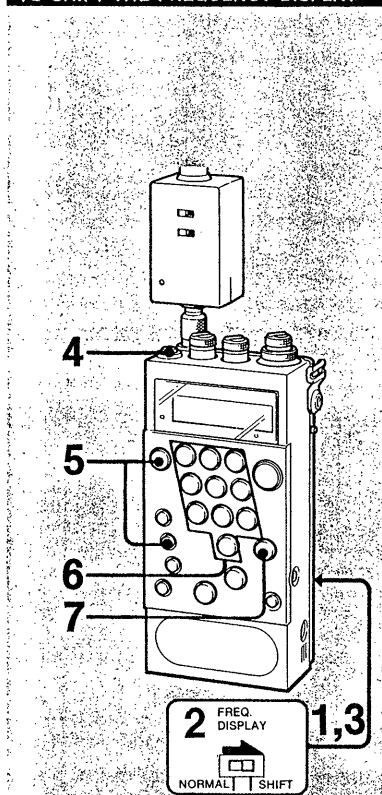

1 Remove the battery case from the battery compartment of the receiver.

2 Set FREQ.DISPLAY inside the battery compartment to SHIFT.

3 Replace the battery case.

4 Depress POWER.
The [S] (shift) indicator and a frequency shifted by 100 MHz will appear in the window.



5 Keeping PROGRAM pressed, press DIRECT.
The [S] indicator will blink.



6 While the [S] indicator is blinking, input the frequency to be shifted by the converter, 115 MHz, with the number buttons.



7 Press EXECUTE.



Now the frequencies 115.150-223.000 MHz can be displayed to match the received station frequencies.

Battery life
Approximately 80 hours of converter operation can be expected with the Sony SUM-3(NS) batteries.
When the POWER indicator on the converter becomes dim, replace both batteries.

Note
When the converter is not be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.

To check the shifted frequency
Keeping FUNCTION pressed, press KEY/MEMORY PROTECT. While the buttons are pressed, the shifted frequency is displayed in the window.

TUNING

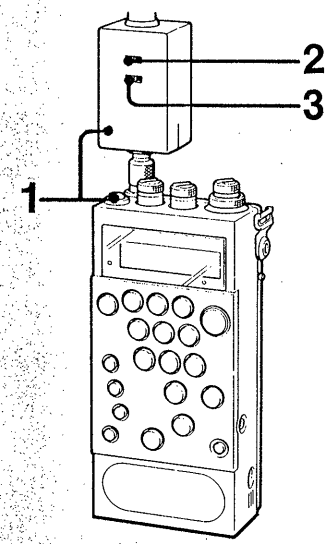

1 Depress POWER on the receiver.
The converter will be turned on automatically and the POWER indicator on the converter will light.

2 Set the ATTENUATOR selector on the converter to 0 dB.

3 Set the FILTER selector on the converter according to the frequency of the station to be tuned in.
115.15–174 MHz: for 115.15–174 MHz reception (air band, PSB, etc.)
174–223 MHz: for 174–223 MHz reception (TV channels, etc.)

4 Tune in the desired station with any of the tuning methods on pages 6-12.
If necessary, select the appropriate detection mode. See "To select the detection mode" on page 15.

After listening, press to turn off POWER.

To select the detection mode

The selectable detection modes in the 115.15–223 MHz range are as follows:

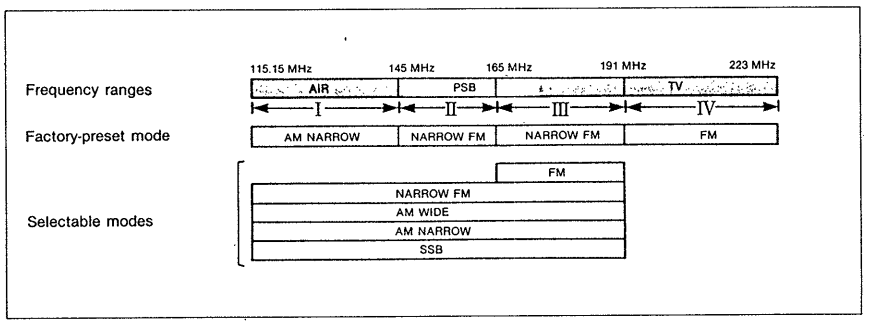

- When tuning in airband, PSB and TV stations, set to the following detection modes.
  Air band (118–136 MHz) → AM NARROW
  PSB (146–174 MHz) → NARROW FM
  TV (174–223 MHz) → FM
- For other types of broadcasts and radio communications, set to the appropriate detection mode.

To resume the original frequency coverage of the receiver

Detach the converter from the antenna connector and replace the telescopic antenna. Set FREQ. DISPLAY inside the battery compartment to NORMAL.

Special notes on tuning in the shifted frequency coverage

Direct tuning

With the converter installed, always input 6 digits of the frequency for direct tuning. Righthand 000 cannot be omitted.

Memory tuning and memory scan tuning

Store the stations in the 115.15–174 MHz range and those in the 174–223 MHz range on separate memory pages. If they are stored in a mixed manner on one page, memory scanning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

Program memory scan tuning

Do not program the stations in the 115.15–174 MHz range and those in the 174–223 MHz range in a mixed manner. Otherwise, program memory scan tuning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

For improved reception

If the received sound is distorted or noisy due to interference from an adjacent station, set ATTENUATOR on the converter to –30 dB.

Tuning intervals in the 115.15–223 MHz range

Frequency coverage	Interval
115.150–115.528 MHz	3 kHz
115.531–116.602 MHz	9 kHz*
116.605–160.995 MHz	5 kHz
165.000–190.995 MHz	5 kHz**
191–223 MHz	50 kHz

* The tuning interval can be changed to 10 kHz. See page 3.
** When the detection mode is FM, the interval of this range will be 50 kHz.

SECTION 2
ELECTRICAL ADJUSTMENT

Note: Standard power-supply voltage is 6 VDC unless other wise noted.
Be sure to perform the "VCO1 PD-Voltage Adjustment" and "VCO2 PD-Voltage Adjustment" when the "FM-L Tracking Adjustment" and "FM-H Tracking Adjustment" are performed respectively.

Before Adjustment: (West Germany model only)

Solder the lead as shown below and then turn the POWER switch on because there are two power switches in West Germany model. (Refer to page 5 for details.)
After adjustment, unsolder the lead.

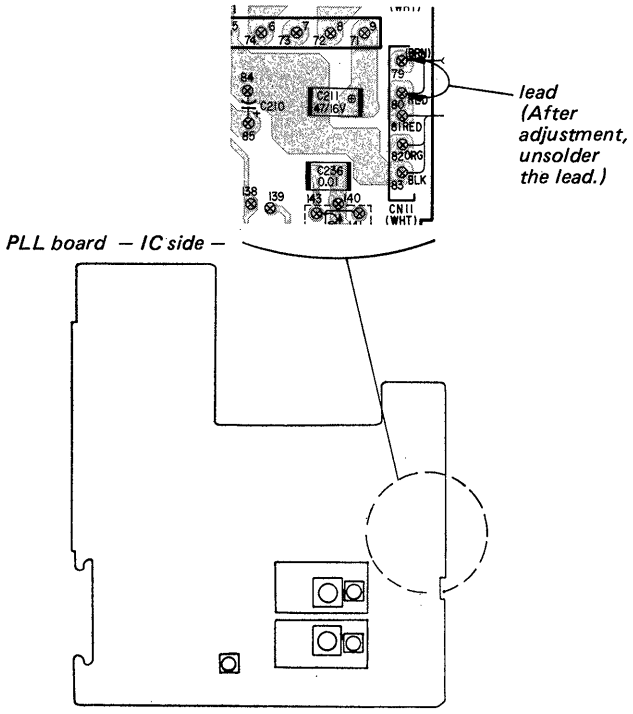

FM RF SSG Connecting Portion

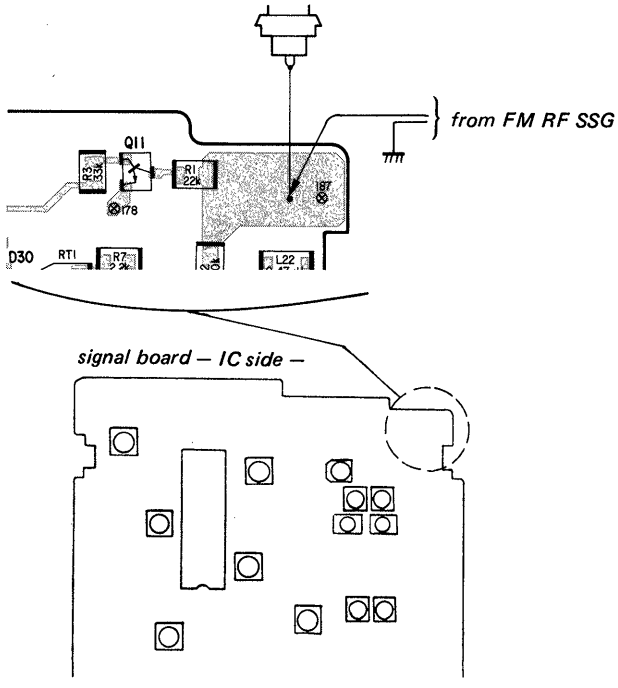

Reference-Frequency Oscillator (7.2 MHz) Adjustment

Procedure:

1. Connect a frequency counter to the point Ⓐ (output of the VCO).
2. Set the receiving frequency of the receiver to 108 MHz.
3. Adjust CT201 so that the reading on the frequency counter becomes in 118.7 MHz ±100 Hz.

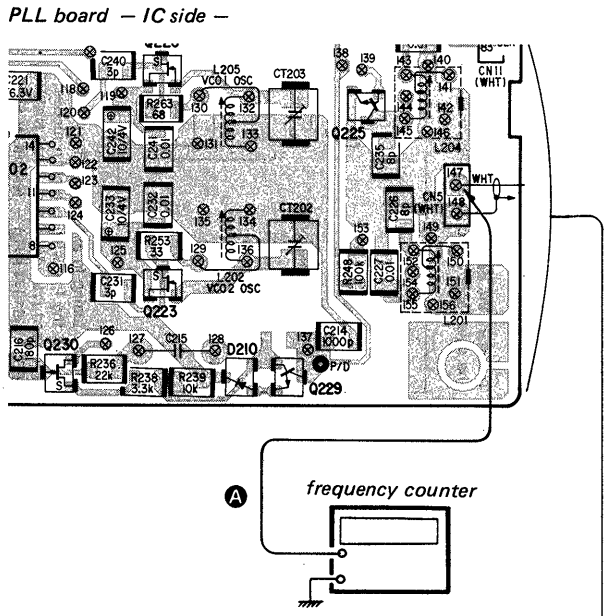

Adjustment Location:

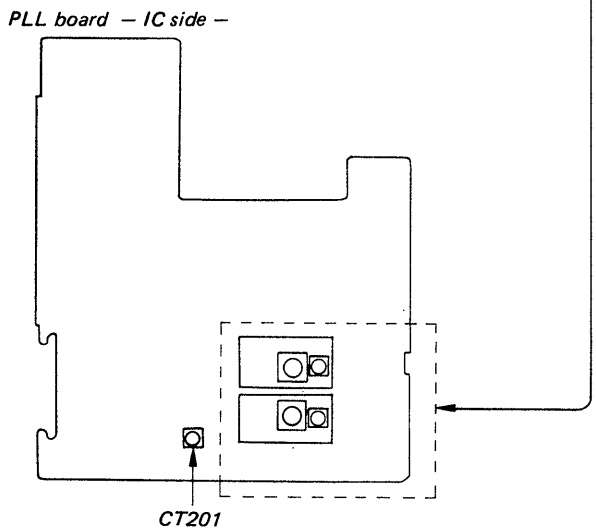

VCO1 PD-Voltage Adjustment

Note: Be sure to perform the "FM-L Tracking Adjustment" when this adjustment is performed. . . . (ICF-PRO70 Type 1 and ICF-PRO80 only)

Procedure:

1. Set the receiving frequency of the receiver to 150 kHz.
2. Set CT203 to a slightly meshed position.
3. Adjust L205 so that the reading on the VTVM connected to the point Ⓐ (PD test point) becomes in 1.35 V ±0.05 VDC.
4. Change the receiving frequency of the receiver as shown on Table 1 and confirm the reading on the VTVM.

Table 1

	Receiving frequency	Reading on VTVM
ICF-PRO70 Type 1 and ICF-PRO80	75.95 MHz, and set the detection mode to the WIDE FM	14 V ±1 VDC
ICF-PRO70 Type 2, Type 3, and Type 4	26.1 MHz	12 V ±1 VDC

PLL board – IC side –

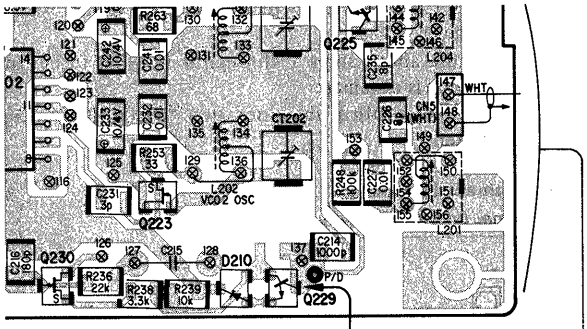

Ⓐ

VTVM (DCV range)

Adjustment Location:

PLL board – IC side –

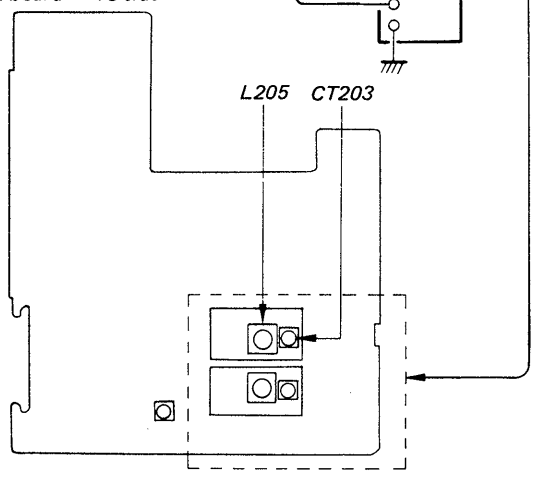

FM-L Tracking Adjustment (ICF-PRO70 Type 1 and ICF-PRO80 only)

Procedure:

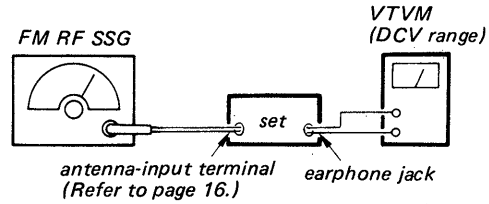

1. Set the frequencies of the SSG and the receiver to 55 MHz.
2. Adjust L3 and T2 to obtain a maximum signal output on the VTVM.
3. Change the frequencies of the SSG and the receiver to 70 MHz.
4. Adjust CT203 and CT2 so that the reading on the VTVM becomes in maximum.
5. Repeat the above steps 1 through 4 several times until no further improvements is obtained.
6. Perform and confirm the prior step "VCO1 PD-Voltage Adjustment".

Adjustment Location:

signal board – IC side –

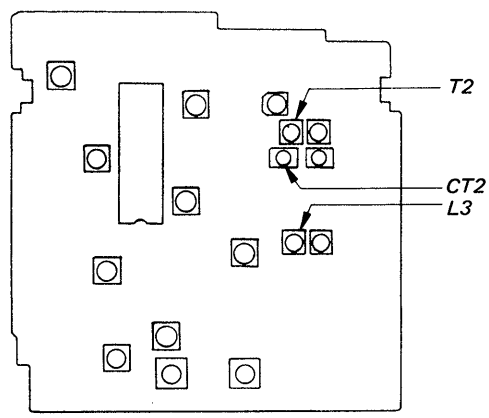

PLL board – IC side –

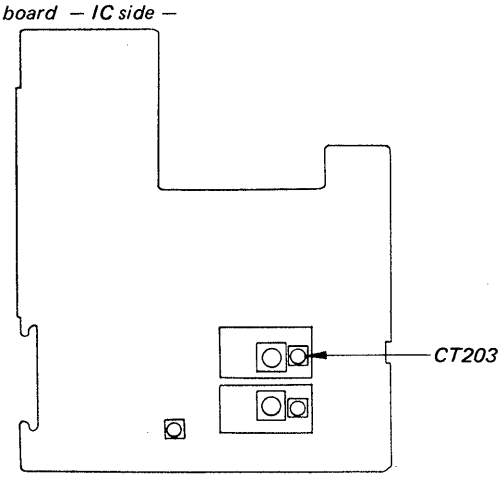

VCO2 PD-Voltage Adjustment

Note: Be sure to perform the "FM-H Tracking Adjustment" when this adjustment is performed.

Procedure:

1. Set the receiving frequency of the receiver as shown on Table 2.

Table 2

	Receiving frequency	Reading on VTVM
ICF-PRO70 Type 1 and ICF-PRO80	30 MHz	1.35 V ±0.1VDC
ICF-PRO70 Type 2, Type 3, and Type 4	87.6 MHz	3.6 V ± 0.3 VDC

2. Set CT202 to its half-meshed or slightly-meshed position.
3. Adjust L202 so that the reading on the VTVM connected to the point Ⓐ (PD test point) becomes as shown on Table 2.
4. Change the receiving frequency of the receiver as shown on Table 3 and confirm the reading on the VTVM.

Table 3

	Receiving frequency	Reading on VTVM
ICF-PRO70 Type 1 and ICF-PRO80	75.995 MHz, and set the detection mode to the NARROW FM	14 V ±1 VDC
ICF-PRO70 Type 2, Type 3, and Type 4	108 MHz	9.5 V ±1 VDC

PLL board – IC side –

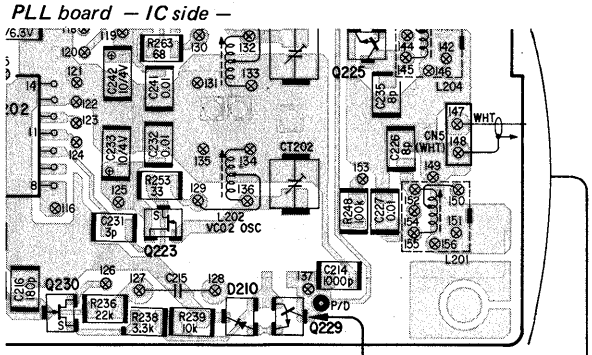

Adjustment Location:

PLL board – IC side –

Ⓐ

VTVM (DCV range)

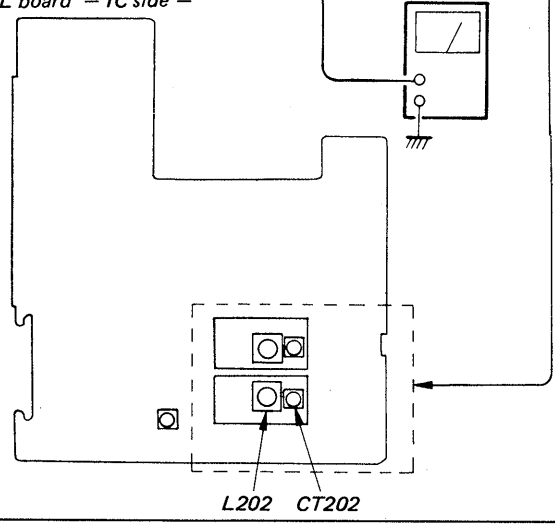

FM-H Tracking Adjustment

Procedure:

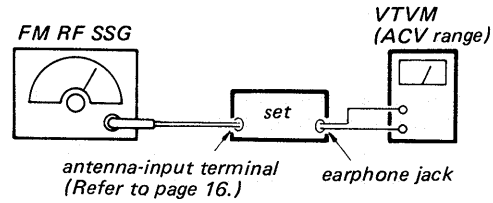

1. Set the receiving frequency of the receiver as shown on Table 4.

Table 4

	Receiving frequency
ICF-PRO70 Type 1 and ICF-PRO80	80 MHz
ICF-PRO70 Type 2, Type 3, and Type 4	87.6 MHz

2. Adjust L2 and T1 to obtain a maximum signal-output on the VTVM.
3. Change the receiving frequency of the receiver to 105 MHz.
4. Adjust CT202 and CT1 to obtain a maximum signal-output level.
5. Repeat the above steps 1 through 4 until no futher improvements is obtained.
6. Perform and confirm the prior step "VCO2 PD-Voltage Adjustment".

Adjustment Location:

signal board – IC side –

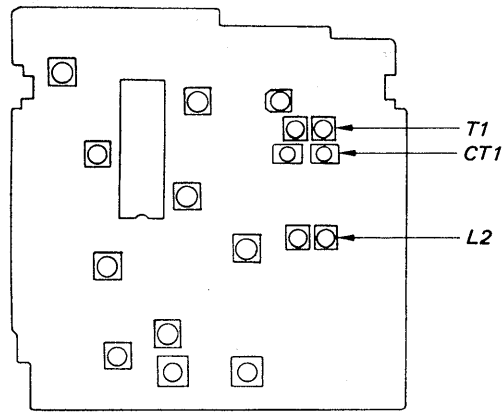

PLL board – IC side –

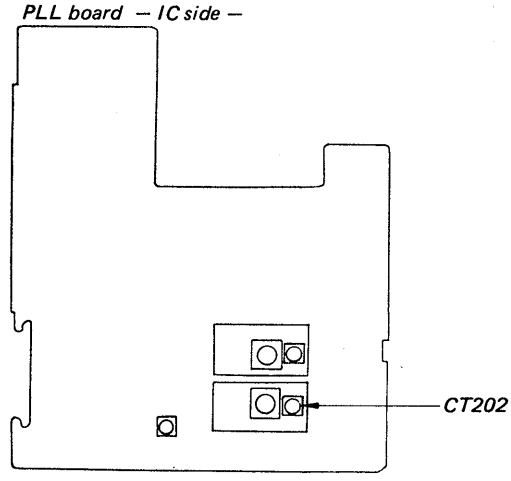

FM IF Adjustment

Procedure:

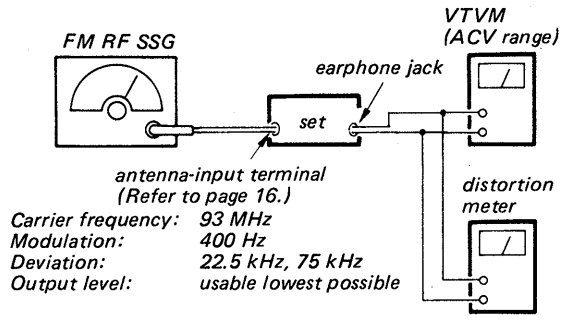

1. Set the frequencies of the SSG and the receiver to 93 MHz.
2. Set the deviation of the SSG to 22.5 kHz.
3. Adjust T3 to obtains a maximum signal-output level on the VTVM.
4. Set the output attenuator of the SSG to 60 dB and the deviation to 75 kHz.
5. Adjust L15 to obtain a minimum distortion of the output signal.

Adjustment Location:

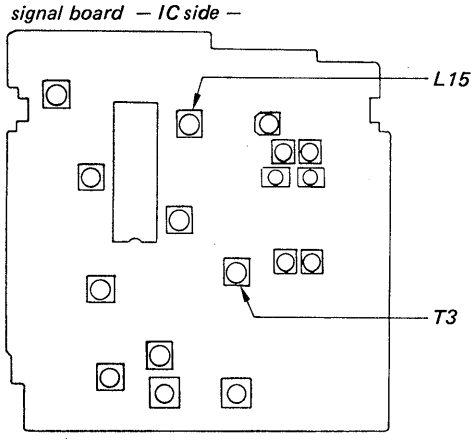

Second Local Oscillator Adjustment

Procedure:

1. Set the receiving frequency of the receiver to 11.8 MHz, and the detection mode to the AM NARROW and turn the FINE switch off.
2. Connect a high-input impedance frequency counter to the point Ⓑ.
3. Adjust L19 so that the reading on the frequency counter becomes in 55.390 MHz ±100 Hz.
4. Turn the FINE switch on and adjust the FINE control to both FINE MIN and FINE MAX ends. The frequency readings at both ends should be ±3.5 to ±4.5 kHz when referred to that obtained in the step 3 above.

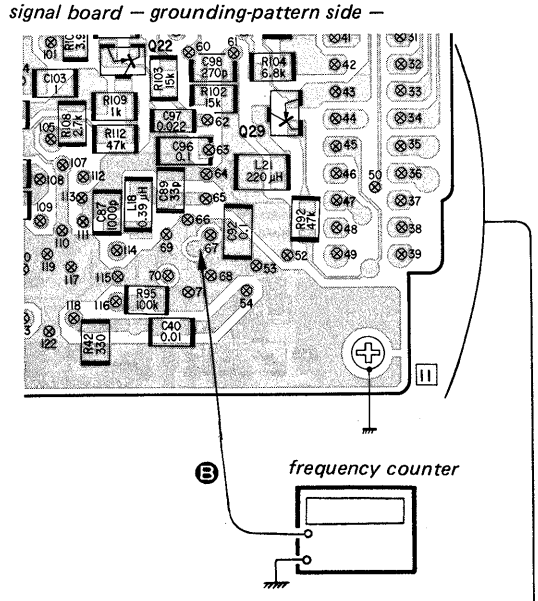

Adjustment Location:

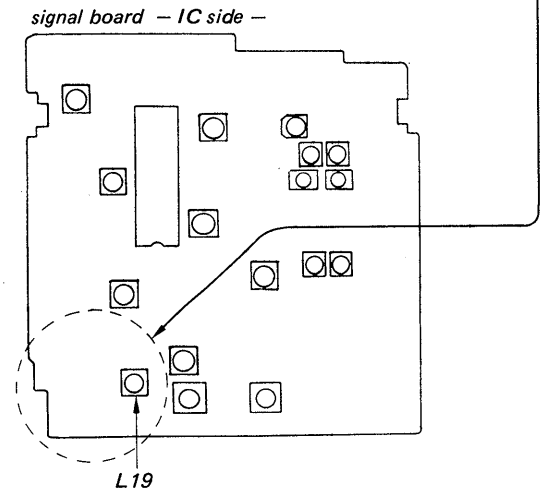

AM 1st and 2nd IF Adjustment

Procedure:

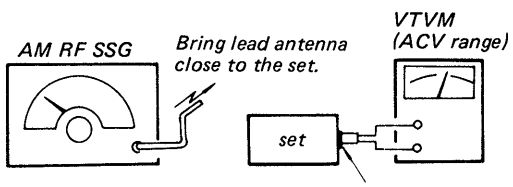

Modulation: 400 Hz, 30%
Output level: usable lowest possible

1. AM 1st IF Adjustment:
   a) Set the frequencies of the SSG and the receiver to 11,800 kHz, and set the detection mode of the receiver to the AM NARROW.
   b) Adjust T8 and T9 to obtain a maximum output level.
2. AM 2nd IF Adjustment:
   a) Set the frequencies of the SSG and the receiver to 11,800 kHz, and set the detection mode of the receiver to the AM NARROW.
   b) Adjust T10 (455 kHz), T11 (AM detector) and T13 (2nd mixer) to obtain a maximum output signal level.

Adjustment Location:

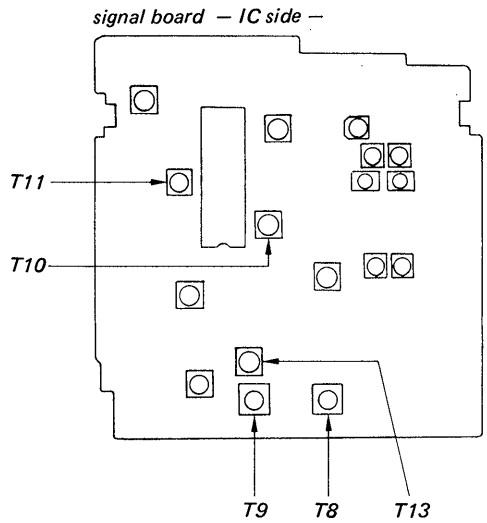

NARROW-FM Detector Adjustment (Except ICF-PRO70 Type 3 and Type 4)

Procedure:

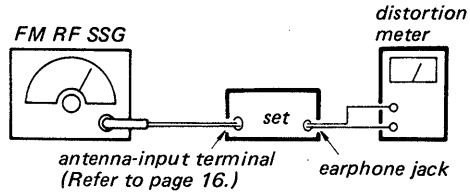

Modulation: 400 Hz
Deviation: 3.5 kHz
Output level: 60 dB

1. Set the frequencies of the SSG and the receiver to 11,800 kHz and the detection mode of the receiver to the FM NARROW.
2. Adjust L20 to obtain a minimum distortion of about 1% of the output signal.

Adjustment Location:

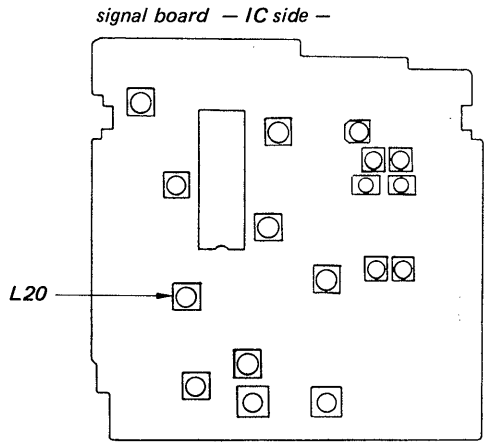

REVISED

SECTION 3
DIAGRAMS

AM AGC Adjustment

Procedure:

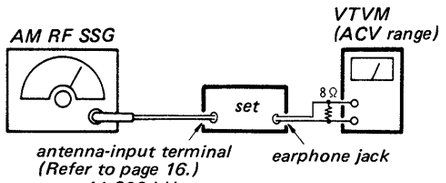

Frequency: 11,800 kHz
Modulation: no modulation
Output level: 44 dB

1. Set the frequencies of the SSG and the recevier to 11,800 kHz, and the detection mode of the receiver to the AM NARROW.
2. Adjust the VOLUME control to obtain an output level of approximately 50 mW (0.64 V) across the 8-ohm load.
3. Turn RT1 clockwise in more than one turn and obtain the point where the noise-output level is maximum and the signal-to-noise ratio is approximately 20 dB. This point is the slotted open area of RT1 and the resistance is infinite.
4. Turn RT1 counterclockwise from the point obtained in step 3 above and obtain a point where the noise-output level is minimum, and where the signal-to-noise ratio is approximately some 40 to 50 dB.
5. Further slightly turn RT1 counterclockwise from the minimum-noise point obtained in step 4 above, and set RT1 at the point where the noise level increases in 1 to 2 dB.

Adjustment Location:

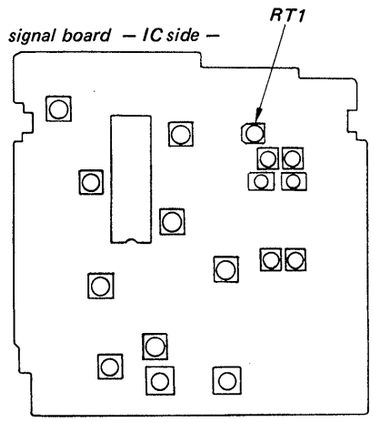

• IC BLOCK DIAGRAMS

IC1 TA7761F

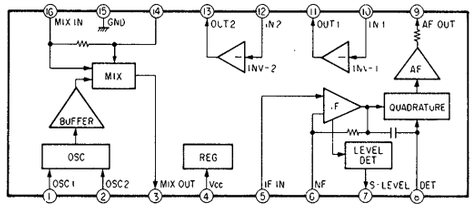

IC2 TA7758P

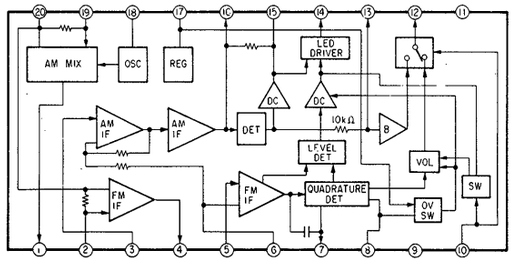

IC3 μPC358G2

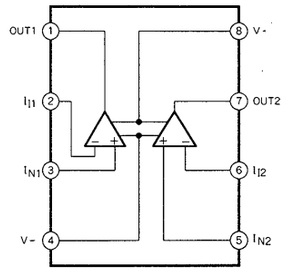

IC201 LA4145

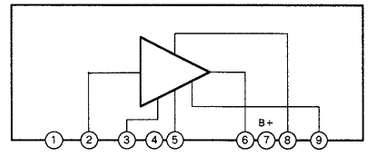

IC202 CXD1118M

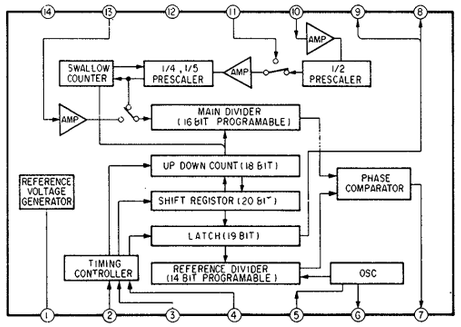

IC203 LA5003M

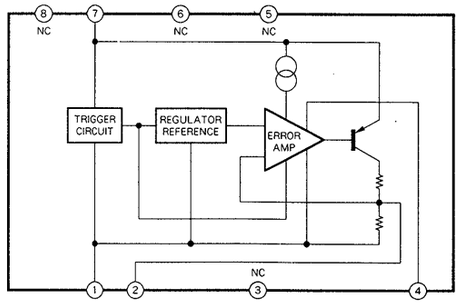

• Semiconductor Lead Layouts

TA7761F



LA5003M
μPC358G2



CXD1118M
TC4016BF

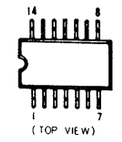

TA7758P

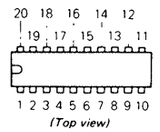

LA4145



μPD7508G-798-00
μPD7508G-E64-00

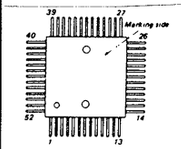

μPD7514G-296-12
μPD7514G-423-12

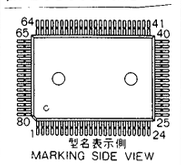

μPC1651G

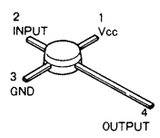

GL1PR51



TLG123A
TLR124

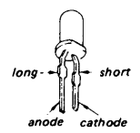

TLR209



1SS279

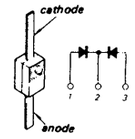

1S2837
HSM2693



1T33



1SS123



SVC203



1SS193
RD16M-B
SB01-05CP



1S2835

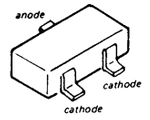

ND487C1-3R



2SK360D



2SK210GR

2SK94
2SK508-K51
2SK613-3

FMW1



2SA812
2SB624-BV4
2SC1623
2SC2223
2SC2813-Q4
2SC3624A-L16
2SD596
2SD1048
DTC124XK



3-1. SIGNAL, PLL SECTION PRINTED WIRING BOARDS

- **See pages 30 to 32 for Control Section Printed Wiring Boards.**
- **See page 22 for Semiconductor Lead Layouts.**

Note:

- Color code or sleeving over the end of the jacket.

- ○—: parts extracted from the component side.
- ●—: parts extracted from the conductor side.
- ■ : part mounted on the conductor side.
- [-]: indicates side identified with part number.
- ⊗ : Through hole.

• SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	E-21	IC1	I-15	Q215	G-13
D3	F-18	IC2	F-16	Q216	G-2
D4	F-21	IC3	E-16	Q218	D-3
D5	G-21	IC201	G-6	Q219	E-4
D6	F-22	IC202	I-4	Q220	E-3
D7	G-22	IC203	F-3	Q221	G-3
D8	H-21	IC701	C-16	Q222	J-9
D11	F-19			Q223	J-5
D12	J-16	Q1	G-19	Q224	I-10
D13	H-19	Q2	G-22	Q225	I-6
D14	H-21	Q3	H-22	Q226	H-5
D15	I-19	Q4	G-21	Q227	I-10
D16	I-21	Q5	G-21	Q228	H-11
D17	I-19	Q6	J-21	Q229	J-6
D18	I-21	Q7	I-22	Q230	J-5
D19	I-22	Q8	I-18	Q231	J-11
D20	J-19	Q9	I-19	Q232	J-3
D21	J-16	Q10	J-19	Q501	G-11
D22	I-17	Q11	E-18	Q502	H-10
D23	I-16	Q12	H-18	Q701	B-25
D24	G-17	Q13	J-22	Q702	B-17
D25	G-14	Q21	H-16	Q703	A-22
D26	F-15	Q22	H-24		
D27	F-25	Q23	H-24		
D28	G-15	Q24	G-17		
D29	E-16	Q26	E-25		
D30	F-18	Q27	E-26		
D31	E-17	Q28	G-14		
D32	B-8	Q29	I-25		
D201	H-2	Q30	H-25		
D203	H-2	Q31	G-23		
D204	J-8	Q32	F-23		
D205	I-9	Q33	E-23		
D206	J-10	Q35	F-22		
D207	I-8	Q201	G-9		
D208	I-9	Q202	F-12		
D209	I-10	Q203	F-12		
D210	J-6	Q204	G-12		
D211	J-11	Q205	G-12		
D212	J-3	Q206	G-12		
D303	B-8	Q207	F-12		
D501	G-11	Q208	F-13		
D502	G-4	Q209	F-13		
D701	C-14	Q210	G-3		
D702	B-24	Q211	G-13		
D703	C-17	Q212	F-2		
D704	D-22	Q214	F-3		

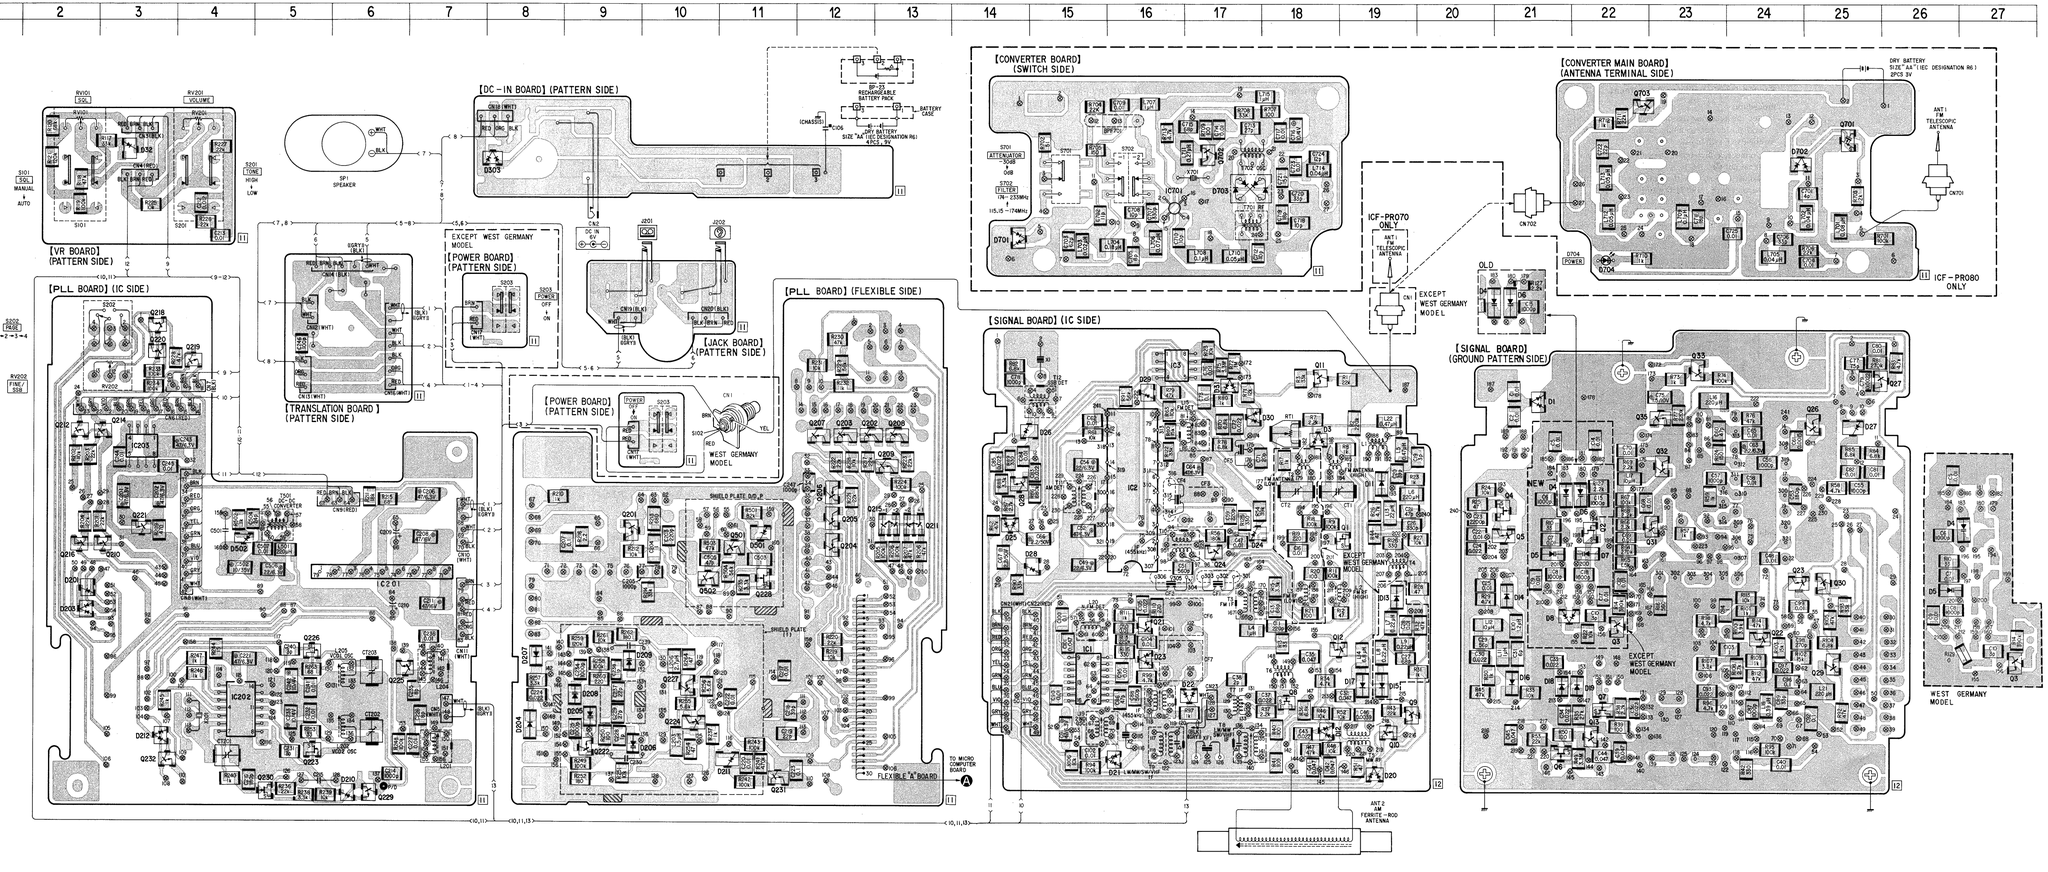

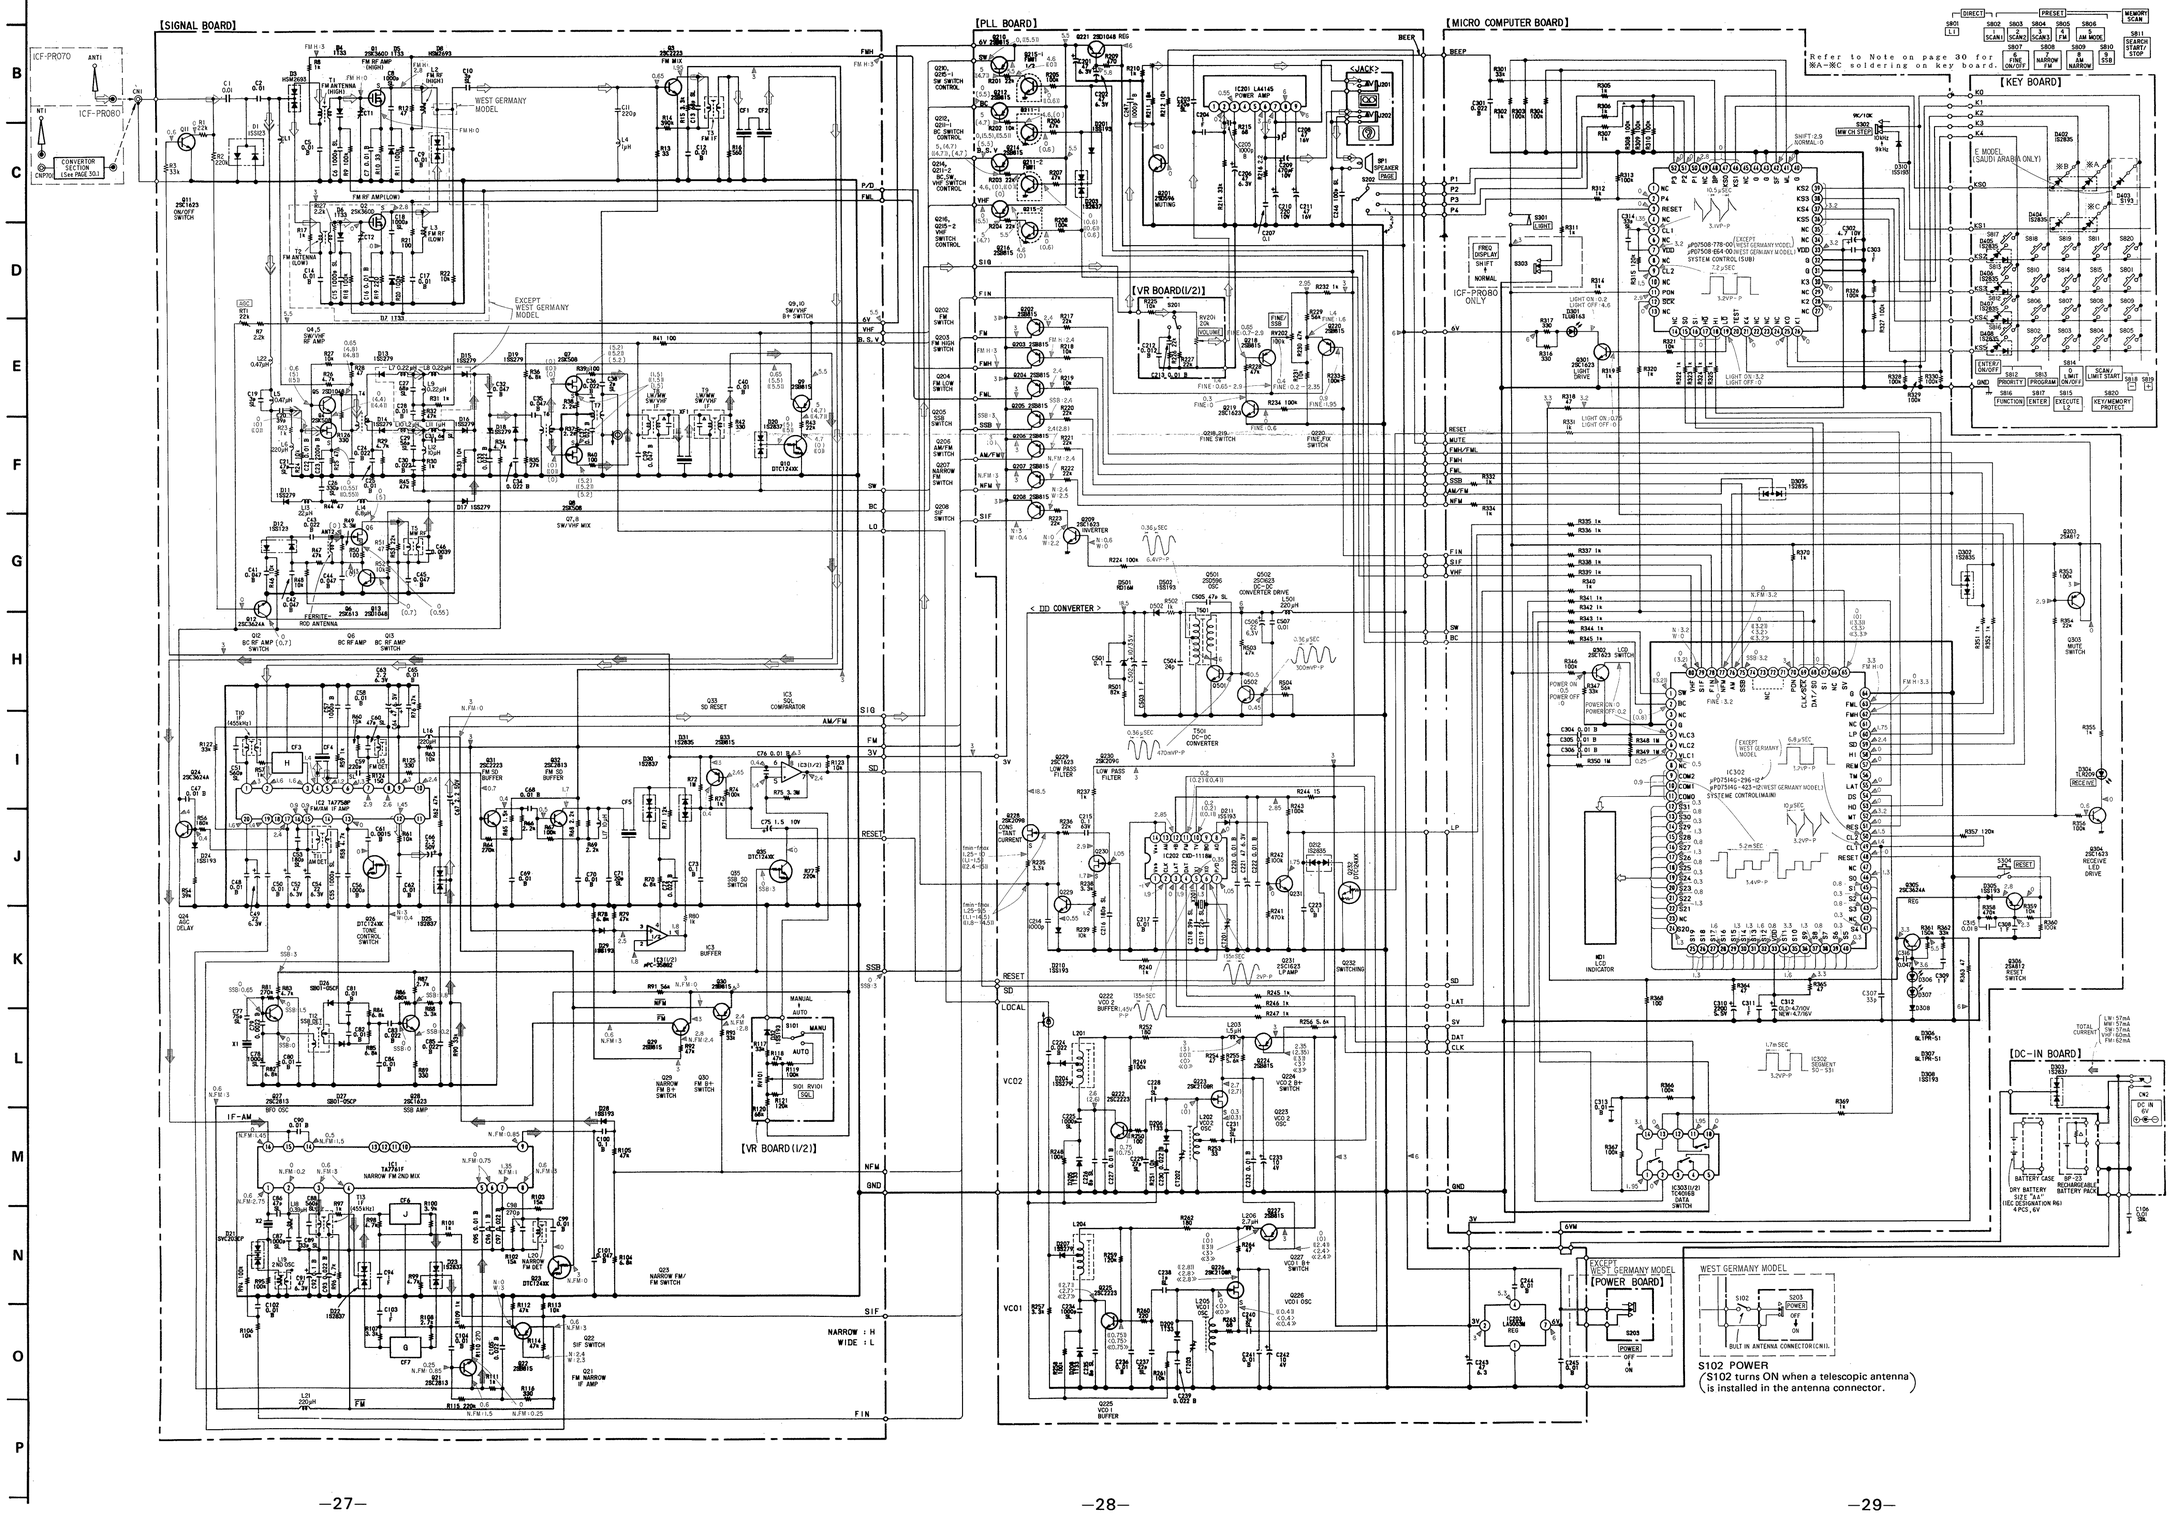
【SIGNAL BOARD】
【PLL BOARD】
【MICRO COMPUTER BOARD】
【KEY BOARD】
【DC-IN BOARD】
【VR BOARD(1/2)】
【VR BOARD(1/21】
ICF-PRO70
ICF-PRO80
ANT1
CONVERTER SECTION (See PAGE 30)
WEST GERMANY MODEL
EXCEPT WEST GERMANY MODEL
FM RF AMP (HIGH)
FM RF AMP(LOW)
FM MIX
FM IF AMP
IF-AM
IC1 TA7358F NARROW FM 2ND MIX
IC2 TA7758P FM/AM IF AMP
IC3 SQL COMPARATOR
IC3(1/2) μPC-358G2
IC4 BUFFER
IC201 LA4445 POWER AMP
IC202 CXD-1118M
IC302 μPD754G-296-12 μPD754G-423 SYSTEME CONTROL(MAIN)
IC303(1/2) μPD4538 DATA SWITCH
IC302 SEGMENT SO~S31
<JACK>
SP1 SPEAKER 8Ω
SHIFT-2.9 NORMAL-0
9K/10K MW CH STEP
E MODEL (SAUDI ARABIA ONLY)
LIGHT ON-0.2 LIGHT OFF-4.6
LIGHT ON-3.2 LIGHT OFF-0
LIGHT ON-0.2 LIGHT OFF-0
ICF-PRO80 ONLY
FREQ DISPLAY SHIFT NORMAL
EXCEPT (μPD7508-778-001 WEST GERMANY VCOS) (μPD7508-654-001 WEST GERMANY MODEL) SYSTEM CONTROL(SUB)
Refer to Note on page 30 for 96A~9C soldering on key board.
DIRECT
PRESET
MEMORY SCAN
SCAN1
SCAN2
SCAN3
FINE ON/OFF
NARROW FM
AM NARROW
SUB
SEARCH START/ STOP
ENTER
FUNCTION
PRIORITY
PROGRAM
LIMIT ON/OFF
SCAN LIMIT START
KEY MEMORY PROTECT
EXECUTE L2
POWER BOARD
S102 POWER
(S102 turns ON when a telescopic antenna is installed in the antenna connector.
BUILT IN ANTENNA CONNECTOR(CN11).
DRY BATTERY SIZE "AA" (IEC DESIGNATION R6) 4PCS, 6V
RECHARGEABLE BATTERY PACK
BATTERY CASE
TOTAL CURRENT
LCD INDICATOR
FERRITE-ROD ANTENNA
BC RF AMP SWITCH
BC RF AMP
BC RF AMP SWITCH
SW/VHF RF AMP
SW/VHF MIX
SW/MW SW/VHF
SW/VHF BY SWITCH
SSB AMP
BFO OSC
2ND OSC
NARROW FM DET
FM NARROW IF AMP
SIF SWITCH
NARROW FM/ FM SWITCH
FM IF AMP
FM BUFFER
FM SQ BUFFER
FM SQ SWITCH
TONE CONTROL SWITCH
SW/ VHF SWITCH
SW SWITCH
SW VHF SWITCH
FM H SWITCH
FM L SWITCH
SSB SWITCH
AM/FM SWITCH
NARROW SWITCH
BC SWITCH
VHF SWITCH
FM BUFFER
FM SQ RESET
FM MIX
FM H-3
FM H-0
FM L
P/D
FML
AM
VHF
B.S.V
FIN
FM
FM H-3
FM H
FM L
SSB
AM/FM
NFM
SW
BC
LO
SIG
AM/FM
FM
3V
SD
RESET
SSB
SSB-3
RESET
SD
LOCAL
VCO2
NFM
GND
SIF
NARROW : H WIDE : L
FIN
BEEP
P1
P2
P3
P4
6V
RESET
MUTE
FMH/FML
FMH
FML
SSB
AM/FM
NFM
FIN
SIF
VHF
SW
BC
LP
SD
LAT
SV
DAT
CLK
6VM
3V
GND
KS0
KS1
KS2
KS3
KS4
KS5
KS6
KS7
KS8
KS9
KS10
KS11
KS12
KS13
KS14
KS15
KS16
KS17
KS18
KS19
KS20
KS21
KS22
KS23
KS24
KS25
KS26
KS27
KS28
KS29
KS30
KS31
KS32
KS33
KS34
KS35
KS36
KS37
KS38
KS39
KS40
KS41
KS42
KS43
KS44
KS45
KS46
KS47
KS48
KS49
KS50
KS51
KS52
KS53
KS54
KS55
KS56
KS57
KS58
KS59
KS60
KS61
KS62
KS63
KS64
KS65
KS66
KS67
KS68
KS69
KS70
KS71
KS72
KS73
KS74
KS75
KS76
KS77
KS78
KS79
KS80
KS81
KS82
KS83
KS84
KS85
KS86
KS87
KS88
KS89
KS90
KS91
KS92
KS93
KS94
KS95
KS96
KS97
KS98
KS99
KS100
KS101
KS102
KS103
KS104
KS105
KS106
KS107
KS108
KS109
KS110
KS111
KS112
KS113
KS114
KS115
KS116
KS117
KS118
KS119
KS120
KS121
KS122
KS123
KS124
KS125
KS126
KS127
KS128
KS129
KS130
KS131
KS132
KS133
KS134
KS135
KS136
KS137
KS138
KS139
KS140
KS141
KS142
KS143
KS144
KS145
KS146
KS147
KS148
KS149
KS150
KS151
KS152
KS153
KS154
KS155
KS156
KS157
KS158
KS159
KS160
KS161
KS162
KS163
KS164
KS165
KS166
KS167
KS168
KS169
KS170
KS171
KS172
KS173
KS174
KS175
KS176
KS177
KS178
KS179
KS180
KS181
KS182
KS183
KS184
KS185
KS186
KS187
KS188
KS189
KS190
KS191
KS192
KS193
KS194
KS195
KS196
KS197
KS198
KS199
KS200
KS201
KS202
KS203
KS204
KS205
KS206
KS207
KS208
KS209
KS210
KS211
KS212
KS213
KS214
KS215
KS216
KS217
KS218
KS219
KS220
KS221
KS222
KS223
KS224
KS225
KS226
KS227
KS228
KS229
KS230
KS231
KS232
KS233
KS234
KS235
KS236
KS237
KS238
KS239
KS240
KS241
KS242
KS243
KS244
KS245
KS246
KS247
KS248
KS249
KS250
KS251
KS252
KS253
KS254
KS255
KS256
KS257
KS258
KS259
KS260
KS261
KS262
KS263
KS264
KS265
KS266
KS267
KS268
KS269
KS270
KS271
KS272
KS273
KS274
KS275
KS276
KS277
KS278
KS279
KS280
KS281
KS282
KS283
KS284
KS285
KS286
KS287
KS288
KS289
KS290
KS291
KS292
KS293
KS294
KS295
KS296
KS297
KS298
KS299
KS300
KS301
KS302
KS303
KS304
KS305
KS306
KS307
KS308
KS309
KS310
KS311
KS312
KS313
KS314
KS315
KS316
KS317
KS318
KS319
KS320
KS321
KS322
KS323
KS324
KS325
KS326
KS327
KS328
KS329
KS330
KS331
KS332
KS333
KS334
KS335
KS336
KS337
KS338
KS339
KS340
KS341
KS342
KS343
KS344
KS345
KS346
KS347
KS348
KS349
KS350
KS351
KS352
KS353
KS354
KS355
KS356
KS357
KS358
KS359
KS360
KS361
KS362
KS363
KS364
KS365
KS366
KS367
KS368
KS369
KS370
KS371
KS372
KS373
KS374
KS375
KS376
KS377
KS378
KS379
KS380
KS381
KS382
KS383
KS384
KS385
KS386
KS387
KS388
KS389
KS390
KS391
KS392
KS393
KS394
KS395
KS396
KS397
KS398
KS399
KS400
KS401
KS402
KS403
KS404
KS405
KS406
KS407
KS408
KS409
KS410
KS411
KS412
KS413
KS414
KS415
KS416
KS417
KS418
KS419
KS420
KS421
KS422
KS423
KS424
KS425
KS426
KS427
KS428
KS429
KS430
KS431
KS432
KS433
KS434
KS435
KS436
KS437
KS438
KS439
KS440
KS441
KS442
KS443
KS444
KS445
KS446
KS447
KS448
KS449
KS450
KS451
KS452
KS453
KS454
KS455
KS456
KS457
KS458
KS459
KS460
KS461
KS462
KS463
KS464
KS465
KS466
KS467
KS468
KS469
KS470
KS471
KS472
KS473
KS474
KS475
KS476
KS477
KS478
KS479
KS480
KS481
KS482
KS483
KS484
KS485
KS486
KS487
KS488
KS489
KS490
KS491
KS492
KS493
KS494
KS495
KS496
KS497
KS498
KS499
KS500
KS501
KS502
KS503
KS504
KS505
KS506
KS507
KS508
KS509
KS510
KS511
KS512
KS513
KS514
KS515
KS516
KS517
KS518
KS519
KS520
KS521
KS522
KS523
KS524
KS525
KS526
KS527
KS528
KS529
KS530
KS531
KS532
KS533
KS534
KS535
KS536
KS537
KS538
KS539
KS540
KS541
KS542
KS543
KS544
KS545
KS546
KS547
KS548
KS549
KS550
KS551
KS552
KS553
KS554
KS555
KS556
KS557
KS558
KS559
KS560
KS561
KS562
KS563
KS564
KS565
KS566
KS567
KS568
KS569
KS570
KS571
KS572
KS573
KS574
KS575
KS576
KS577
KS578
KS579
KS580
KS581
KS582
KS583
KS584
KS585
KS586
KS587
KS588
KS589
KS590
KS591
KS592
KS593
KS594
KS595
KS596
KS597
KS598
KS599
KS600
KS601
KS602
KS603
KS604
KS605
KS606
KS607
KS608
KS609
KS610
KS611
KS612
KS613
KS614
KS615
KS616
KS617
KS618
KS619
KS620
KS621
KS622
KS623
KS624
KS625
KS626
KS627
KS628
KS629
KS630
KS631
KS632
KS633
KS634
KS635
KS636
KS637
KS638
KS639
KS640
KS641
KS642
KS643
KS644
KS645
KS646
KS647
KS648
KS649
KS650
KS651
KS652
KS653
KS654
KS655
KS656
KS657
KS658
KS659
KS660
KS661
KS662
KS663
KS664
KS665
KS666
KS667
KS668
KS669
KS670
KS671
KS672
KS673
KS674
KS675
KS676
KS677
KS678
KS679
KS680
KS681
KS682
KS683
KS684
KS685
KS686
KS687
KS688
KS689
KS690
KS691
KS692
KS693
KS694
KS695
KS696
KS697
KS698
KS699
KS700
KS701
KS702
KS703
KS704
KS705
KS706
KS707
KS708
KS709
KS710
KS711
KS712
KS713
KS714
KS715
KS716
KS717
KS718
KS719
KS720
KS721
KS722
KS723
KS724
KS725
KS726
KS727
KS728
KS729
KS730
KS731
KS732
KS733
KS734
KS735
KS736
KS737
KS738
KS739
KS740
KS741
KS742
KS743
KS744
KS745
KS746
KS747
KS748
KS749
KS750
KS751
KS752
KS753
KS754
KS755
KS756
KS757
KS758
KS759
KS760
KS761
KS762
KS763
KS764
KS765
KS766
KS767
KS768
KS769
KS770
KS771
KS772
KS773
KS774
KS775
KS776
KS777
KS778
KS779
KS780
KS781
KS782
KS783
KS784
KS785
KS786
KS787
KS788
KS789
KS790
KS791
KS792
KS793
KS794
KS795
KS796
KS797
KS798
KS799
KS800
KS801
KS802
KS803
KS804
KS805
KS806
KS807
KS808
KS809
KS810
KS811
KS812
KS813
KS814
KS815
KS816
KS817
KS818
KS819
KS820
KS821
KS822
KS823
KS824
KS825
KS826
KS827
KS828
KS829
KS830
KS831
KS832
KS833
KS834
KS835
KS836
KS837
KS838
KS839
KS840
KS841
KS842
KS843
KS844
KS845
KS846
KS847
KS848
KS849
KS850
KS851
KS852
KS853
KS854
KS855
KS856
KS857
KS858
KS859
KS860
KS861
KS862
KS863
KS864
KS865
KS866
KS867
KS868
KS869
KS870
KS871
KS872
KS873
KS874
KS875
KS876
KS877
KS878
KS879
KS880
KS881
KS882
KS883
KS884
KS885
KS886
KS887
KS888
KS889
KS890
KS891
KS892
KS893
KS894
KS895
KS896
KS897
KS898
KS899
KS900
KS901
KS902
KS903
KS904
KS905
KS906
KS907
KS908
KS909
KS910
KS911
KS912
KS913
KS914
KS915
KS916
KS917
KS918
KS919
KS920
KS921
KS922
KS923
KS924
KS925
KS926
KS927
KS928
KS929
KS930
KS931
KS932
KS933
KS934
KS935
KS936
KS937
KS938
KS939
KS940
KS941
KS942
KS943
KS944
KS945
KS946
KS947
KS948
KS949
KS950
KS951
KS952
KS953
KS954
KS955
KS956
KS957
KS958
KS959
KS960
KS961
KS962
KS963
KS964
KS965
KS966
KS967
KS968
KS969
KS970
KS971
KS972
KS973
KS974
KS975
KS976
KS977
KS978
KS979
KS980
KS981
KS982
KS983
KS984
KS985
KS986
KS987
KS988
KS989
KS990
KS991
KS992
KS993
KS994
KS995
KS996
KS997
KS998
KS999
KS1000

3-3. CONVERTER BOARD SCHEMATIC DIAGRAM (ONLY FOR ICF-PRO80) ● See pages 25, 26 for Printed Wiring Boards.

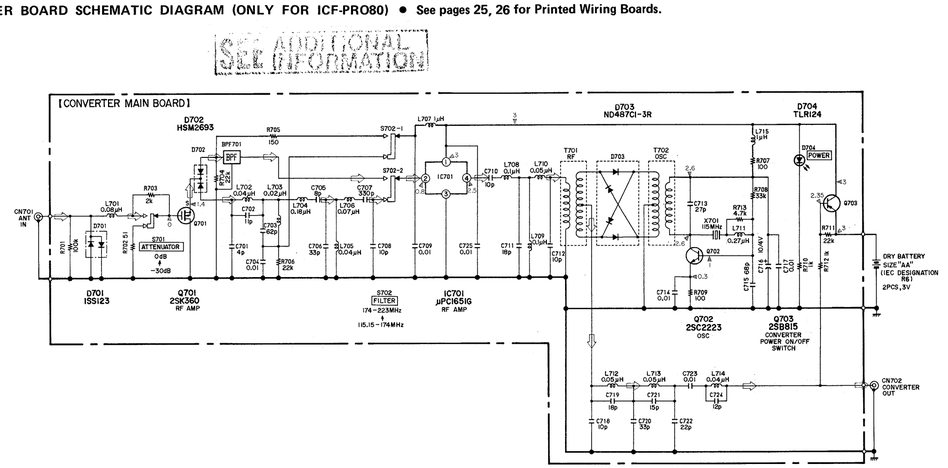



Note:

- **All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.**
- **All resistors are in Ω and ¼ W or less unless otherwise specified.**
- Signal path:
  ⇨ : FM signal path.
  ⇨ : MW signal path.
  ⇨ : SW, VHF signal path.
- △ : internal component.
- ═══ : B+ bus.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under detuned conditions with a VOM (50 kΩ/V).
  no mark: FM [ ]: BC N, FM: NARROW FM
  ( ): VHF < >: MW N: AM NARROW
  (( )): SW << >>: LW W: AM WIDE
- Voltage variations may be noted due to normal production tolerances.
- Power voltage is 6 V and fed with regulated dc power supply from battery terminal.
- Waveforms are taken to ground in no-signal mode by using oscilloscope.
  Voltage variations may be noted due to normal production tolerances.

- Switch

Ref. No.	Switch	Position
S101	SOL	MANUAL
S102	POWER (West Germany model only)	OFF
S201	TONE	HIGH
S202	PAGE	1
S203	POWER	ON
S301	LIGHT	OFF
S302	MW CH STEP	9 kHz
S303	FREQ DISPLAY	NORMAL
S304	RESET	OFF
S701	ATTENUATOR	−30 dB
S702	FILTER	115.15–174 MHz
S801	DIRECT L1	OFF
S802	1, SCAN 1	OFF
S803	2, SCAN 2	OFF
S804	3, SCAN 3	OFF
S805	4, FM	OFF
S806	5, AM WIDE	OFF
S807	6, FINE ON/OFF	OFF
S808	7, NARROW FM	OFF
S809	8, AM NARROW	OFF
S810	9, SSB	OFF
S811	MEMORY SCAN, SEARCH START/STOP	OFF
S812	PRIORITY	OFF
S813	PROGRAM	OFF
S814	0, LIMIT ON/OFF	OFF
S815	EXECUTE L2	OFF
S816	FUNCTION	OFF
S817	ENTER	OFF
S818	SCAN/LIMIT START, −	OFF
S819	SCAN/LIMIT START, +	OFF
S820	KEY/MEMORY PROTECT	OFF

3-4. CONTROL SECTION PRINTED WIRING BOARDS

- **See page 22 for Semiconductor Lead Layouts.**
- **See pages 27 to 29 for Schematic Diagram.**

● SEMICONDUCTOR LOCATION

Ref. No.	Location
D301	C-18
D302	E-14
D304	C-6
D305	F-9
D306	G-15
D307	G-15
D308	G-15
D309	E-14
D310	H-8
D401	C-3
D402	H-5
D403	I-5
D404	C-2
D405	C-3
D406	C-4
D407	C-2
D408	D-3
IC301	G-9
IC302	D-9
IC303	F-10
Q301	F-8
Q302	D-15
Q303	F-14
Q304	E-16
Q305	F-15
Q306	E-9

Note:
※A – ※C are soldered, or not by receivable frequency coverage of the set as shown below.
Refer to "NOTES ON MODEL TYPES AND RECEIVABLE FREQUENCIES" on page 3 for each type of ICF-PRO70.

		※A	※B	※C
ICF-PRO70	TYPE 1	X	X	○
	TYPE 2	○	X	○
	TYPE 3	X	○	○
	TYPE 4	X	○	X
ICF-PRO80		X	X	○

○: soldered X: unsoldered

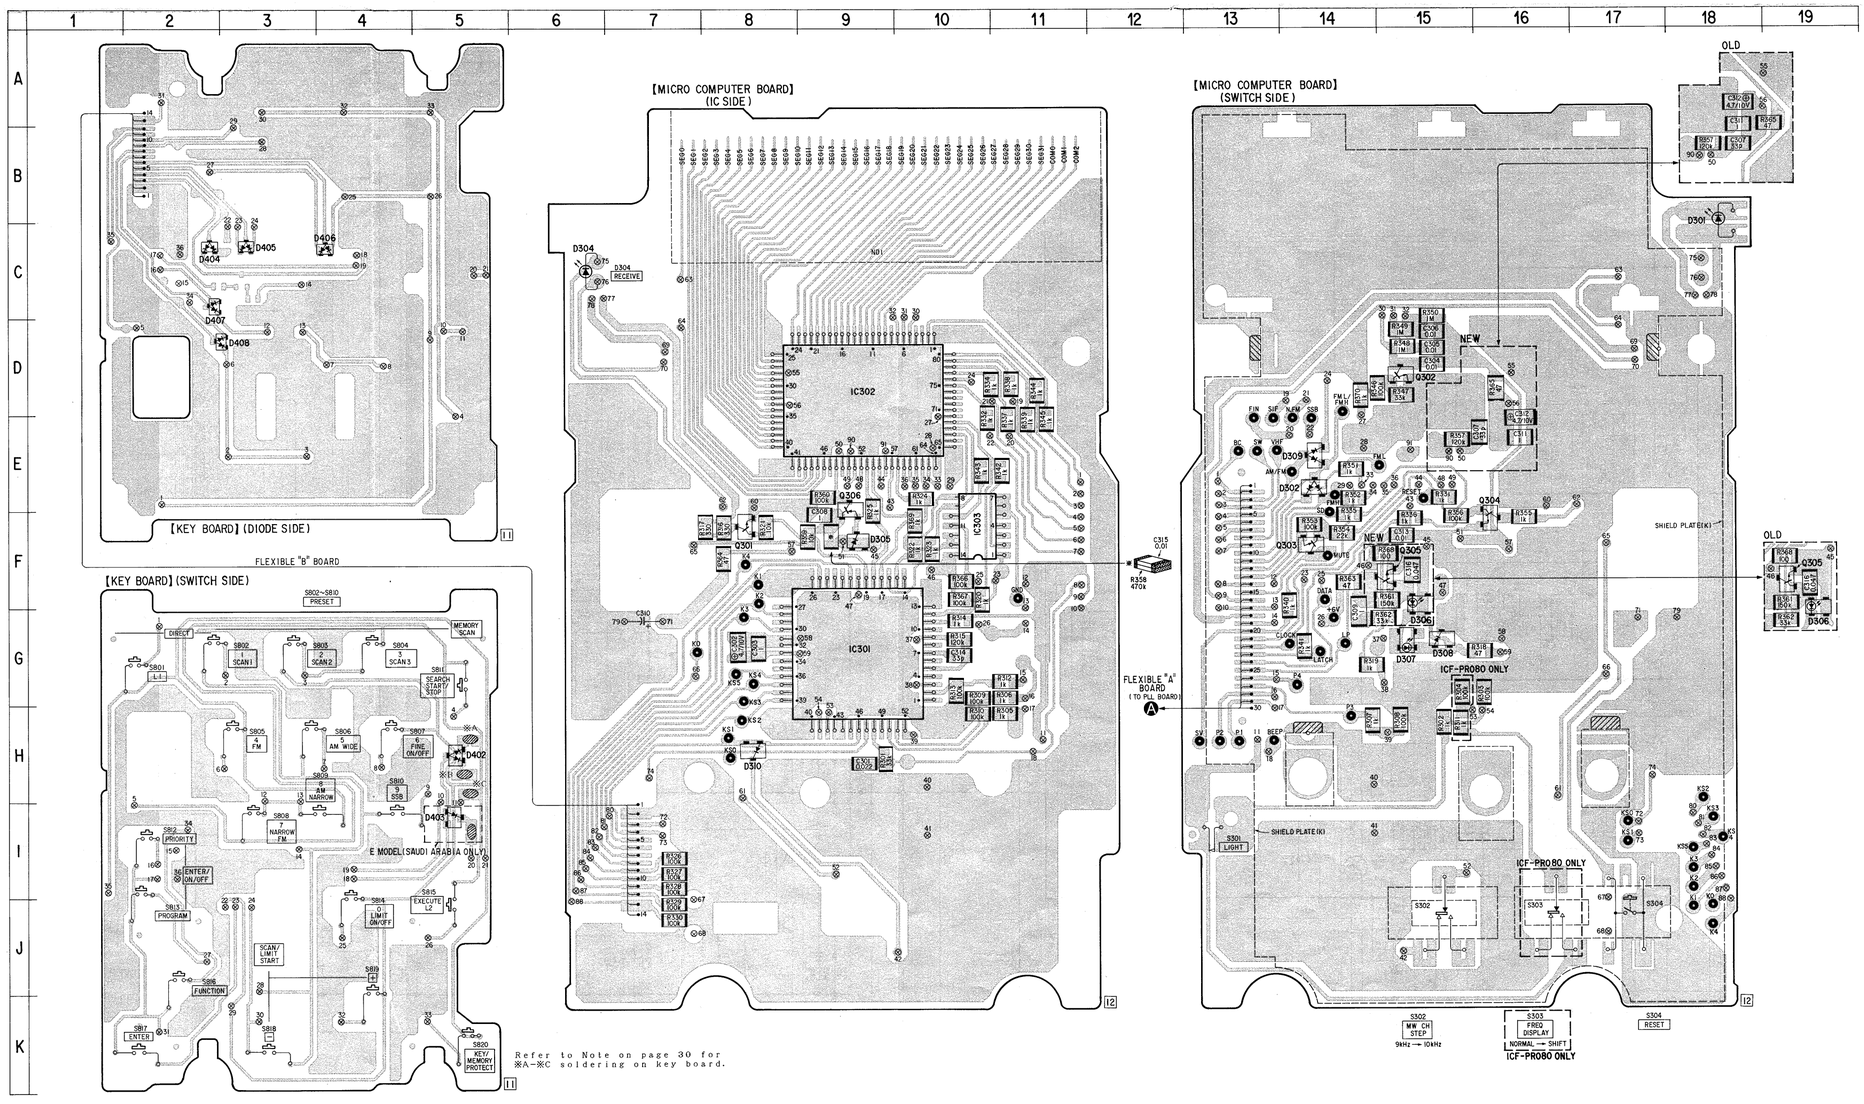

SECTION 4

EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts
  Example:
  (RED) . . . KNOB, BALANCE (WHITE)
  ↑ Cabinet's Color ↑ Parts' Color

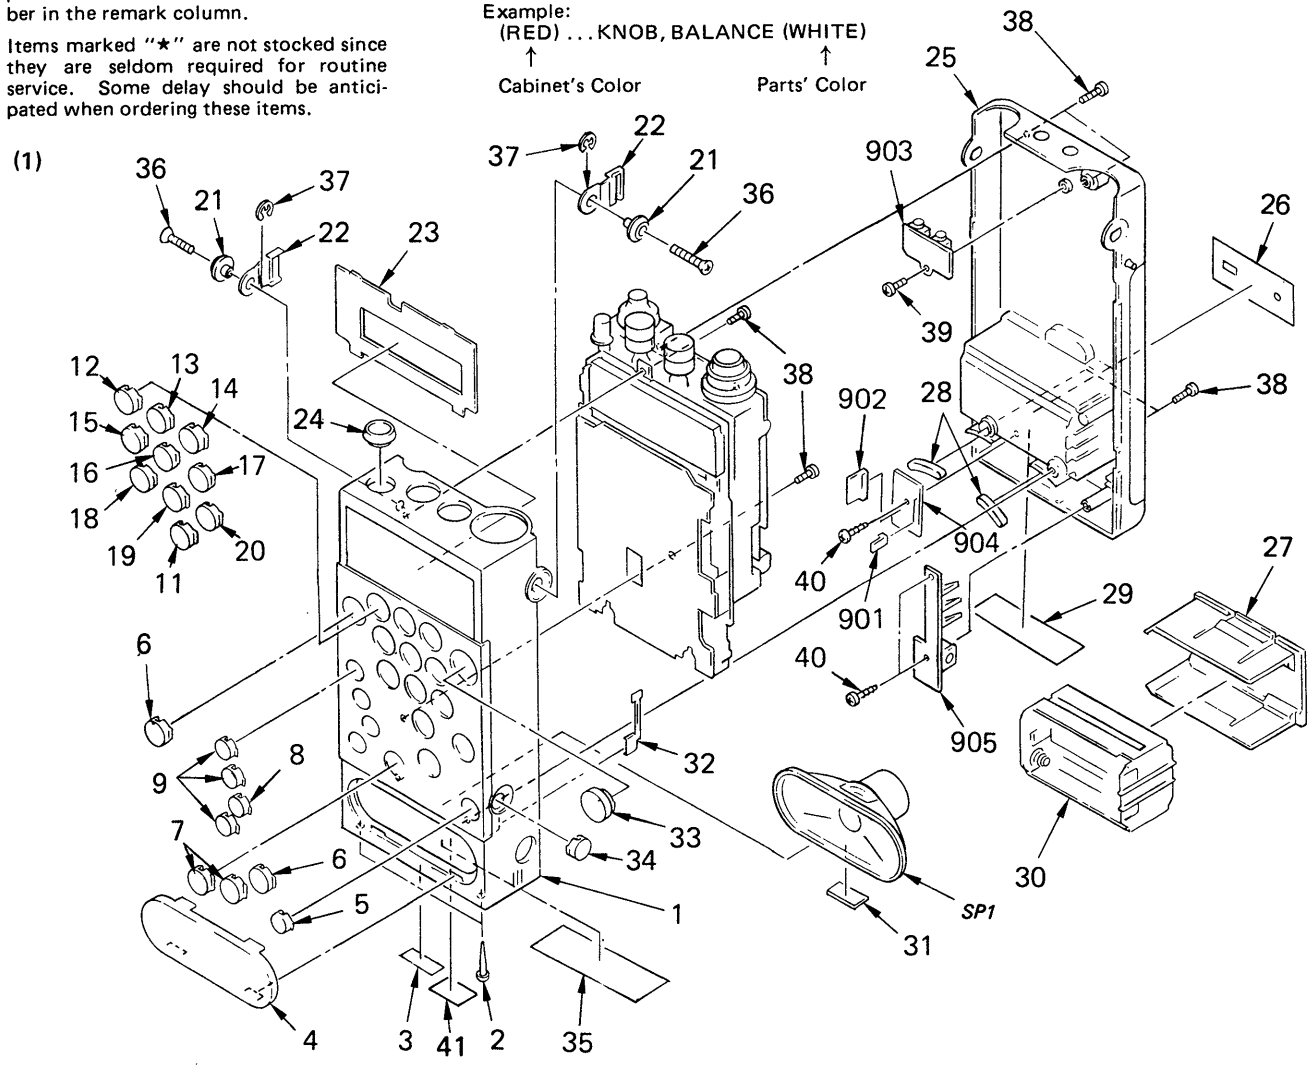

No.	Part No.	Description	Remarks
1	X-3893-707-1	(ICF-PRO70:Saudi Arabia) ...CABINET (FRONT) ASSY	
	X-3898-203-1	(ICF-PRO80).....CABINET (FRONT) ASSY	
	X-3898-204-1	(ICF-PRO70:E,AEP)...CABINET (FRONT) ASSY	
	X-3897-305-1	(ICF-PRO70:West Germany) ...CABINET (FRONT) ASSY	
2	3-427-542-00	STOPER	
3	*3-701-999-00	LABEL, SERIAL NUMBER	
4	3-898-226-01	PANEL, SPEAKER	
5	3-893-717-01	BUTTON, KP	
6	3-893-704-01	BUTTON (B), MEMORY	
7	3-893-704-11	BUTTON (B), MEMORY	
8	3-893-716-21	BUTTON, DOUBLE KEY	
9	3-893-716-11	BUTTON, DOUBLE KEY	
11	3-893-703-01	BUTTON (A), MEMORY (0)	
12	3-893-703-11	BUTTON (A), MEMORY (1)	
13	3-893-703-21	BUTTON (A), MEMORY (2)	
14	3-893-703-31	BUTTON (A), MEMORY (3)	
15	3-893-703-41	BUTTON (A), MEMORY (4)	
16	3-893-703-51	BUTTON (A), MEMORY (5)	
17	3-893-703-61	BUTTON (A), MEMORY (6)	
18	3-893-703-71	BUTTON (A), MEMORY (7)	
19	3-893-703-81	BUTTON (A), MEMORY (8)	
20	3-893-703-91	BUTTON (A), MEMORY (9)	
21	3-893-726-01	COLLAR, BELT	
22	3-893-730-01	BRACKET, BELT	
23	3-898-227-01	(ICF-PRO70:E,ICF-PRO80)....PLATE, BACK	
	3-898-227-21	(ICF-PRO70:Saudi Arabia)...PLATE, BACK	
	3-898-227-31	(ICF-PRO70:AEP).....PLATE, BACK	
	3-898-227-12	(ICF-PRO70:West Germany)...PLATE, BACK	
24	3-893-728-01	RING, POWER	
25	3-898-224-01	LID, REAR, CABINET	
26	*3-898-203-01	(ICF-PRO70)...LABEL, SWITCH	
	*3-898-204-01	(ICF-PRO80)...LABEL, SWITCH	
27	3-893-706-01	HOLDER, BATTERY	
28	3-881-931-00	CUSHION, SPEAKER	
29	3-893-722-01	PLATE, BLIND	
30	X-3564-820-0	HOLDER ASSY, BATTERY	
31	9-911-838-XX	CUSHION, SPEAKER	
32	*3-898-215-01	SPRING (2)	
33	3-893-715-01	BUTTON, S/S	
34	3-893-717-11	BUTTON, KP	
35	*3-898-205-01	(ICF-PRO70)...LABEL, MODEL NUMBER (E)	
	*3-898-202-01	(ICF-PRO80)...LABEL, MODEL NUMBER (U)	
36	7-621-662-80	SCREW +RK 2.6X12	
37	7-624-109-04	STOP RING 5.0, TYPE -E	
38	7-621-284-30	SCREW +P 2.6X8	
39	7-621-259-25	SCREW +P 2.6X4	
40	7-685-134-19	SCREW +P 2.6X8 TYPE2 SLIT	
901	*1-560-456-00	PIN, CONNECTOR 2P	
902	*1-560-591-00	PIN, CONNECTOR 7P	
904	*1-622-289-11	PC BOARD, TRANSLATION	
905	*1-622-288-11	PC BOARD, DC-IN	
SP1	1-503-374-11	SPEAKER	

(2)

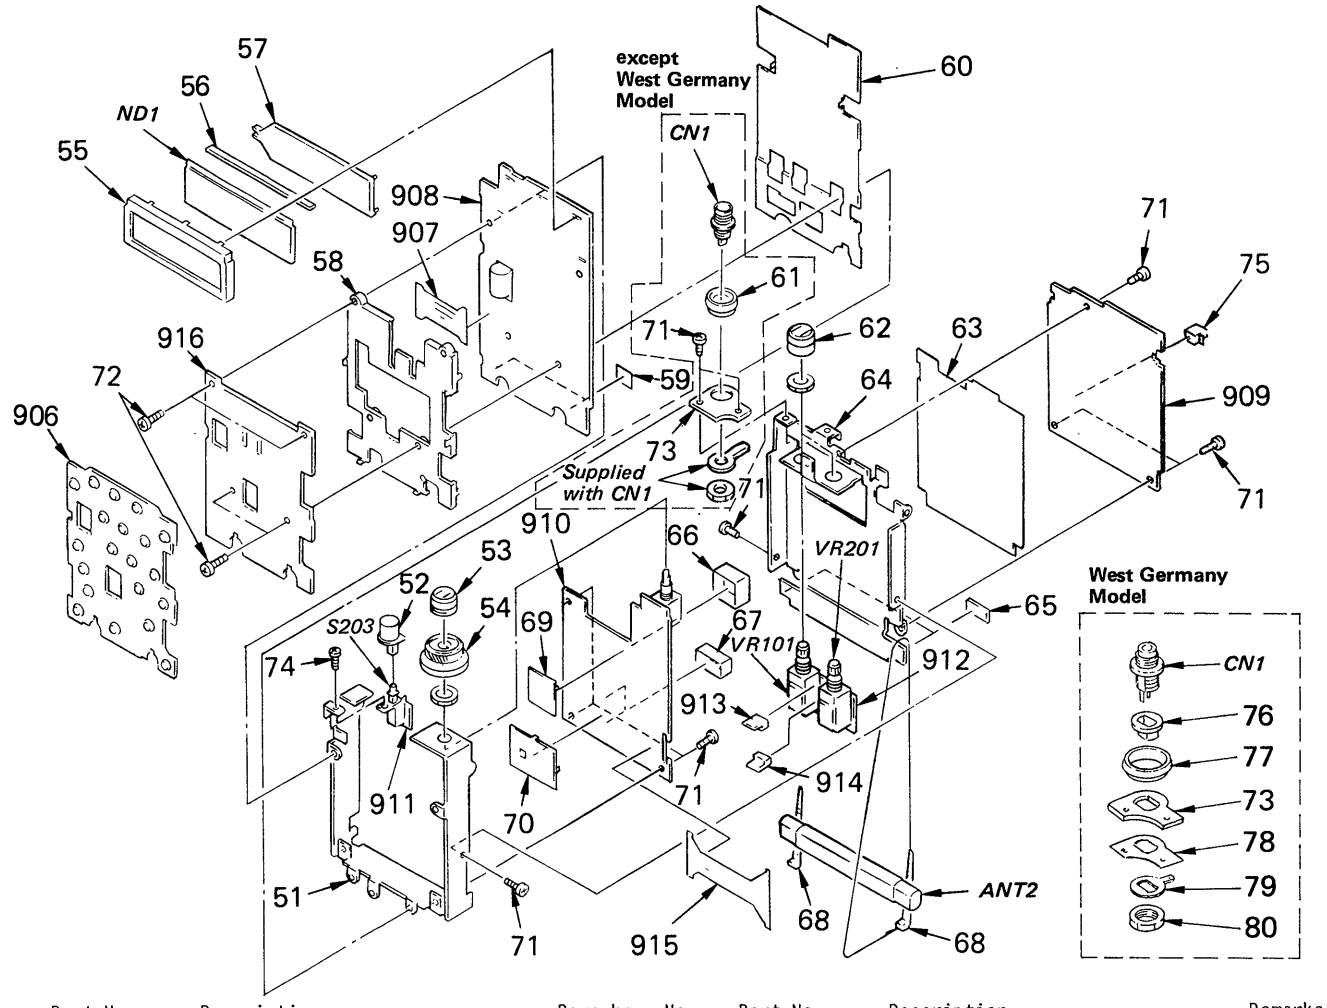

No.	Part No.	Description	Remarks
51	*3-893-712-01	CHASSIS (B)	
52	3-893-714-01	BUTTON (POWER)	
53	3-898-213-01	KNOB (FINE)	
54	3-898-214-01	KNOB (PAGE)	
55	*3-898-216-01	HOLDER, LCD	
56	1-535-656-11	CONDUCTOR, CONNECTOR	
57	*3-893-721-01	CHIP, ILLUMINATION	
58	*3-898-223-01	SPACER	
59	*3-893-763-01	SPACER, PC BOARD	
60	*X-3893-701-1	PLATE (K) ASSY, SHIELD	
61	3-893-719-01	RING, ANTENNA	
62	3-893-713-01	KNOB (A)	
63	*3-893-755-01	INSULATOR (C)	
64	*3-893-711-01	CHASSIS (A)	
65	9-911-838-XX	CUSHION, SPEAKER	
66	*3-898-220-01	PLATE, SHIELD, D/D,M	
67	*3-898-218-01	PLATE (2), SHIELD	
68	*3-671-893-00	CLAMP (LOW TYPE)	
69	*X-3898-202-1	PLATE (D/D,P) ASSY, SHIELD	
70	*X-3898-201-1	PLATE (1) ASSY, SHIELD	
71	7-621-259-25	SCREW +P 2.6X4	
72	7-621-284-30	SCREW +P 2.6X8	
73	*3-893-720-01	HOLDER, ANTENNA	
74	7-621-255-25	SCREW +P 2X4	
75	*3-893-770-01	CASE (CF), SHIELD	
76	3-893-782-01	(West Germany)...COLLAR	
77	3-893-783-01	(West Germany)...RING, ANTENNA	
78	3-893-781-01	(West Germany)...SPACER	
79	3-893-784-01	(West Germany)...LUG	
80	3-897-115-01	(West Germany)...NUT, VOLUME	

No.	Part No.	Description	Remarks
903	*1-622-287-11	PC BOARD, JACK	
906	1-571-044-11	SWITCH, RUBBER KEY (S801-820)	
907	1-622-336-11	PC BOARD, FLEXIBLE (B)	
908	A-3661-044-A	(ICF-PRO80)...MOUNTED PCB, MICRO COMPUTER	
	A-3661-045-A	(ICF-PRO70:EXCEPT West Germany) ...MOUNTED PCB, MICRO COMPUTER	
	A-3661-075-A	(ICF-PRO70:West Germany) ...MOUNTED PCB, MICRO COMPUTER	
909	A-3660-680-A	(EXCEPT West Germany) ...MOUNTED PCB, SIGNAL	
	A-3660-718-A	(West Germany)...MOUNTED PCB, SIGNAL	
910	A-3661-043-A	MOUNTED PCB, PLL	
911	*1-622-285-11	PC BOARD, POWER	
912	*1-622-286-11	PC BOARD, VR	
913	*1-560-466-00	PIN, CONNECTOR 3P	
914	*1-560-466-00	PIN, CONNECTOR 3P	
915	1-622-335-11	PC BOARD, FLEXIBLE (A)	
916	*1-622-284-11	PC BOARD, KEY	
ANT2	1-402-272-11	ANTENNA, FERRITE-ROD	
CN1	*1-563-956-11	(EXCEPT West Germany)...SOCKET, CONNECTOR	
CN1	*1-565-451-11	(West Germany) ...SOCKET, CONNECTOR (WITH SWITCH S102)1P	
RV101	1-230-538-11	RES, VAR, CARBON (WITH SW) 50K (SQL)	
RV201	1-237-670-11	RES, VAR, CARBON (WITH SW) 20K (VOLUME,TONE)	
S203	1-554-957-11	SWITCH, PUSH (1 KEY)(POWER)	

(3) Applicable to ICF-PRO80

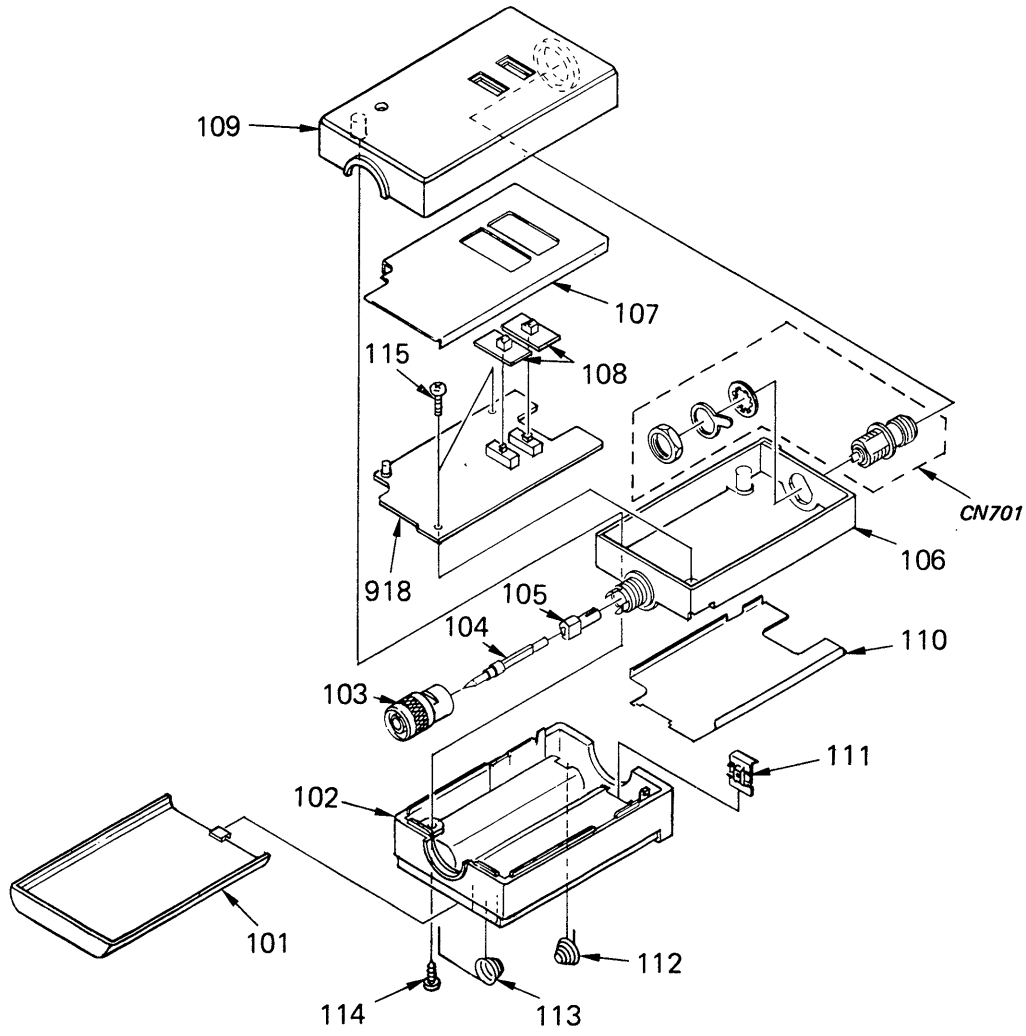

No.	Part No.	Description	Remarks
101	3-898-234-01	(ICF-PRO80)...LID, BATTERY CASE	
102	3-898-242-01	(ICF-PRO80)...COVER (B)	
103	*3-898-239-01	(ICF-PRO80)...SHELL, TNC-P	
104	*3-898-237-01	(ICF-PRO80)...CONTACT	
105	*3-898-238-01	(ICF-PRO80)...SLEEVE	
106	*X-3898-205-1	(ICF-PRO80)...CHASSIS ASSY	
107	*3-898-231-01	(ICF-PRO80)...PLATE (A), SHIELD	
108	3-898-235-01	COVER, SWITCH	
109	3-898-241-01	(ICF-PRO80)...COVER (A)	

No.	Part No.	Description	Remarks
110	*3-898-232-01	(ICF-PRO80)...PLATE (B), SHIELD	
111	3-898-229-01	(ICF-PRO80)...TERMINAL BOARD, PLUS	
112	3-898-230-01	(ICF-PRO80)...SPRING	
113	3-898-243-01	(ICF-PRO80)...SPRING	
114	7-685-134-19	SCREW +P 2.6X8 TYPE2 SLIT	
115	7-621-259-25	SCREW +P 2.6X4	
918	A-3665-026-A	(ICF-PRO80)...MOUNTED PCB, CONVERTER	
CN701	*1-563-956-21	(ICF-PRO80)...SOCKET, CONNECTOR	

SECTION 5
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μF, PF: μμF.

RESISTORS
- All resistors are in ohms.
- F: nonflammable

COILS
- MMH: mH, UH: μH

SEMICONDUCTORS
In each case, U: μ, for example:
UA...: μA..., UPA...: μPA...,
UPC...: μPC, UPD...: μPD...

Ref.No.	Part No.	Description
901	*1-560-456-00	PIN, CONNECTOR 2P
902	*1-560-591-00	PIN, CONNECTOR 7P
903	*1-622-287-11	PC BOARD, JACK
904	*1-622-289-11	PC BOARD, TRANSLATION
905	*1-622-288-11	PC BOARD, DC-IN
906	1-571-044-11	SWITCH, RUBBER KEY (S801-820)
907	1-622-336-11	PC BOARD, FLEXIBLE (B)
908	A-3661-045-A	(ICF-PRO70:EXCEPT West Germany) ...MOUNTED PCB, MICRO COMPUTER
	A-3661-044-A	(ICF-PRO80) ...MOUNTED PCB, MICRO COMPUTER
	A-3661-075-A	(ICF-PRO70:West Germany) ...MOUNTED PCB, MICRO COMPUTER
909	A-3660-680-A	(EXCEPT West Germany) ...MOUNTED PCB, SIGNAL
	A-3660-718-A	(West Germany)...MOUNTED PCB, SIGNAL
910	A-3661-043-A	MOUNTED PCB, PLL
911	*1-622-285-11	PC BOARD, POWER
912	*1-622-286-11	PC BOARD, VR
913	*1-560-466-00	PIN, CONNECTOR 3P
914	*1-560-466-00	PIN, CONNECTOR 3P
915	1-622-335-11	PC BOARD, FLEXIBLE (A)
916	*1-622-284-11	PC BOARD, KEY
918	A-3665-026-A	(ICF-PRO80)...MOUNTED PCB, CONVERTER
ANT1	1-501-377-11	(EXCEPT West Germany) ...ANTENNA, TELESCOPIC
ANT1	1-501-412-11	(West Germany)...ANTENNA, TELESCOPIC
ANT2	1-402-272-11	ANTENNA, FERRITE-ROD
BPF701	1-235-763-11	(ICF-PRO80)...FILTER, BAND PASS
C1	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C2	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C5	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C6	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C7	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C8	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C9	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C10	1-163-086-00	CERAMIC CHIP 3PF 0.25PF 50V
C11	1-163-125-00	CERAMIC CHIP 220PF 5% 50V
C12	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C13	1-163-113-00	CERAMIC CHIP 68PF 5% 50V
C14	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V
C15	1-163-141-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.001MF 5% 50V
C16	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V
C17	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V
C18	1-163-141-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.001MF 5% 50V
C19	1-163-086-00	CERAMIC CHIP 3PF 0.25PF 50V
C20	1-163-107-00	CERAMIC CHIP 39PF 5% 50V
C21	1-163-109-00	CERAMIC CHIP 47PF 5% 50V
C22	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C23	1-163-013-00	CERAMIC CHIP 0.0022MF 10% 50V
C24	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C25	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C26	1-163-129-00	CERAMIC CHIP 330PF 5% 50V
C27	1-163-113-00	(EXCEPT West Germany) ...CERAMIC CHIP 68PF 5% 50V
C28	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V
C29	1-163-111-00	CERAMIC CHIP 56PF 5% 50V
C30	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C31	1-163-089-00	CERAMIC CHIP 6PF 0.25PF 50V
C32	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C33	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C34	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C35	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C36	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C37	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C38	1-163-085-00	CERAMIC CHIP 2PF 0.25PF 50V
C39	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C40	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C41	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C42	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C43	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C44	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C45	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C46	1-163-016-00	CERAMIC CHIP 0.0039MF 10% 50V
C47	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C48	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C49	1-124-778-00	ELECT 22MF 20% 6.3V
C50	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C51	1-163-135-00	CERAMIC CHIP 560PF 5% 50V
C52	1-126-205-00	ELECT 47MF 20% 6.3V
C53	1-163-123-00	CERAMIC CHIP 180PF 5% 50V
C54	1-124-778-00	ELECT 22MF 20% 6.3V
C55	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C56	1-163-141-00	CERAMIC CHIP 0.001MF 10% 50V
C57	1-163-141-00	CERAMIC CHIP 0.001MF 10% 50V
C58	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C59	1-163-125-00	CERAMIC CHIP 220PF 5% 50V
C60	1-163-109-00	CERAMIC CHIP 47PF 5% 50V
C61	1-163-145-00	CERAMIC CHIP 0.0015MF 10% 50V

Ref.No.	Part No.	Description		
C62	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C63	1-135-099-00	TANTAL. CHIP 2.2MF	10%	6.3V
C64	1-126-205-00	ELECT 47MF	20%	6.3V
C65	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C66	1-126-195-00	ELECT 2.2MF	20%	50V
C67	1-126-195-00	ELECT 2.2MF	20%	50V
C68	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C69	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C70	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C71	1-163-100-00	CERAMIC CHIP 20PF	5%	50V
C72	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C73	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V
C74	1-162-611-00	CERAMIC CHIP 1MF		25V
C75	1-135-095-00	TANTAL. CHIP 1.5MF	10%	10V
C76	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C77	1-163-114-00	CERAMIC CHIP 75PF	5%	50V
C78	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C79	1-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V
C80	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C81	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C82	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C83	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C84	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C85	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C86	1-163-109-00	CERAMIC CHIP 47PF	5%	50V
C87	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C88	1-163-135-00	CERAMIC CHIP 560PF	5%	50V
C89	1-163-105-00	CERAMIC CHIP 33PF	5%	50V
C90	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C91	1-126-205-00	ELECT 47MF	20%	6.3V
C92	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V
C93	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C94	1-162-638-11	CERAMIC CHIP 1MF		16V
C95	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C96	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V
C97	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C98	1-163-127-00	CERAMIC CHIP 270PF	5%	50V
C99	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C100	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V
C101	1-163-809-11	CERAMIC CHIP 0.047MF	10%	25V
C102	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C103	1-162-611-00	CERAMIC CHIP 1MF		25V
C104	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C105	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C106	1-161-051-00	CERAMIC 0.01MF	20%	25V
C201	1-126-205-11	ELECT 47MF	20%	6.3V
C202	1-126-205-11	ELECT 47MF	20%	6.3V
C203	1-163-125-00	CERAMIC CHIP 220PF	5%	50V
C204	1-162-611-00	CERAMIC CHIP 1MF		25V
C205	1-163-141-00	CERAMIC CHIP 0.001MF	10%	50V
C206	1-126-205-11	ELECT 47MF	20%	6.3V
C207	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V
C208	1-126-204-11	ELECT 47MF	20%	16V
C209	1-124-472-11	ELECT 470MF	20%	10V
C210	1-126-176-11	ELECT 220MF	20%	10V
C211	1-126-204-11	ELECT 47MF	20%	16V
C212	1-163-022-00	CERAMIC CHIP 0.012MF	10%	50V
C213	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V

Ref.No.	Part No.	Description		
C214	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C215	1-130-768-00	FILM 0.1MF	10%	63V
C216	1-163-123-00	CERAMIC CHIP 180PF	5%	50V
C217	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C218	1-163-107-00	CERAMIC CHIP 39PF	5%	50V
C219	1-163-101-00	CERAMIC CHIP 22PF	5%	50V
C220	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C221	1-126-205-00	ELECT 47MF	20%	6.3V
C222	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C223	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V
C224	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C225	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C226	1-163-091-00	CERAMIC CHIP 8PF	0.25PF	50V
C227	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C228	1-163-083-00	CERAMIC CHIP 1PF	0.25PF	50V
C229	1-163-103-00	CERAMIC CHIP 27PF	5%	50V
C230	1-161-055-00	CERAMIC 0.022MF	20%	25V
C231	1-163-086-00	CERAMIC CHIP 3PF	0.25PF	50V
C232	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C233	1-135-104-00	TANTAL. CHIP 10MF	10%	4V
C234	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C235	1-163-091-00	CERAMIC CHIP 8PF	0.25PF	50V
C236	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C237	1-163-101-00	CERAMIC CHIP 22PF	5%	50V
C238	1-163-083-00	CERAMIC CHIP 1PF	0.25PF	50V
C239	1-161-055-00	CERAMIC 0.022MF	20%	25V
C240	1-163-086-00	CERAMIC CHIP 3PF	0.25PF	50V
C241	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C242	1-135-157-21	TANTAL. CHIP 10MF	10%	4V
C243	1-126-205-00	ELECT 47MF	20%	6.3V
C244	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C245	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C246	1-163-117-00	CERAMIC CHIP 100PF	5%	50V
C247	1-163-141-00	CERAMIC CHIP 0.001MF	10%	50V
C301	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C302	1-135-096-21	TANTAL. CHIP 4.7MF	10%	10V
C303	1-162-611-00	CERAMIC CHIP 1MF		25V
C304	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C305	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C306	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C307	1-163-105-00	CERAMIC CHIP 33PF	5%	50V
C308	1-162-611-00	CERAMIC CHIP 1MF		25V
C309	1-162-611-00	CERAMIC CHIP 1MF		25V
C310	1-126-166-11	ELECT 2200MF		5.5V
C311	1-162-611-00	CERAMIC CHIP 1MF		25V
C312	1-135-096-21	TANTAL. CHIP 4.7MF	10%	10V
C313	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C314	1-163-105-00	CERAMIC CHIP 33PF	5%	50V
C315	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C316	1-163-809-11	CERAMIC CHIP 0.047MF	10%	25V
C501	1-130-768-00	FILM 0.1MF	10%	63V
C502	1-126-200-00	ELECT 10MF	20%	35V
C503	1-162-611-00	CERAMIC CHIP 1MF		25V
C504	1-163-102-00	CERAMIC CHIP 24PF	5%	50V
C505	1-163-109-00	CERAMIC CHIP 47PF	5%	50V
C506	1-124-778-00	ELECT 22MF	20%	6.3V
C507	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V

Ref.No.	Part No.	Description		
C701	1-163-087-00	(ICF-PRO80) ...CERAMIC CHIP 4PF	0.25PF	50V
C702	1-163-094-00	(ICF-PRO80) ...CERAMIC CHIP 11PF	5%	50V
C703	1-163-112-00	(ICF-PRO80) ...CERAMIC CHIP 62PF	5%	50V
C704	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V
C705	1-163-091-00	(ICF-PRO80) ...CERAMIC CHIP 8PF	0.25PF	50V
C706	1-163-105-00	(ICF-PRO80) ...CERAMIC CHIP 33PF	5%	50V
C707	1-163-129-00	(ICF-PRO80) ...CERAMIC CHIP 330PF	5%	50V
C708	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V
C709	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V
C710	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V
C711	1-163-099-00	(ICF-PRO80) ...CERAMIC CHIP 18PF	5%	50V
C712	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V
C713	1-163-103-00	(ICF-PRO80) ...CERAMIC CHIP 27PF	5%	50V
C714	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V
C715	1-163-113-00	(ICF-PRO80) ...CERAMIC CHIP 68PF	5%	50V
C716	1-135-157-21	(ICF-PRO80) ...TANTAL. CHIP 10MF	20%	4V
C717	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V
C718	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V
C719	1-163-099-00	(ICF-PRO80) ...CERAMIC CHIP 18PF	5%	50V
C720	1-163-105-00	(ICF-PRO80) ...CERAMIC CHIP 33PF	5%	50V
C721	1-163-097-00	(ICF-PRO80) ...CERAMIC CHIP 15PF	5%	50V
C722	1-163-101-00	(ICF-PRO80) ...CERAMIC CHIP 22PF	5%	50V
C723	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V
C724	1-163-095-00	(ICF-PRO80) ...CERAMIC CHIP 12PF	5%	50V
C725	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V
CF1	1-567-389-11	FILTER, CERAMIC		
CF2	1-567-389-11	FILTER, CERAMIC		
CF3	1-567-844-11	FILTER, CERAMIC		
CF4	1-567-389-11	FILTER, CERAMIC		
CF5	1-527-483-00	FILTER, CERAMIC		
CF6	1-567-846-11	FILTER, CERAMIC		
CF7	1-567-845-11	FILTER, CERAMIC		
CN1	*1-563-956-11	(EXCEPT West Germany)..SOCKET, CONNECTOR		
CN1	*1-565-451-11	(West Germany) ... SOCKET, CONNECTOR (WITH SWITCH S102)1P		
CN2	1-507-954-11	JACK, EXTERNAL POWER (DC IN 6V)		
CN701	*1-563-956-21	(ICF-PRO80)...SOCKET, CONNECTOR		

Ref.No.	Part No.	Description
CT1	1-141-347-11	CAP, VAR, TRIMMER (CHIP)
CT2	1-141-347-11	(EXCEPT West Germany) ...CAP, VAR, TRIMMER (CHIP)
CT201	1-141-311-11	CAP, VAR, TRIMMER (CHIP)
CT202	1-141-311-11	CAP, VAR, TRIMMER (CHIP)
CT203	1-141-347-11	CAP, VAR, TRIMMER (CHIP)
D1	8-719-101-23	DIODE 1SS123
D3	8-719-941-25	DIODE HSM2693
D4	8-713-300-00	DIODE 1T33
D5	8-713-300-00	DIODE 1T33
D6	8-713-300-00	(EXCEPT West Germany)...DIODE 1T33
D7	8-713-300-00	(EXCEPT West Germany)...DIODE 1T33
D8	8-719-941-25	(EXCEPT West Germany)...DIODE HSM2693
D11	8-719-123-79	DIODE 1SS279
D12	8-719-101-23	DIODE 1SS123
D13	8-719-123-79	(EXCEPT West Germany)...DIODE 1SS279
D14	8-719-123-79	DIODE 1SS279
D15	8-719-123-79	(EXCEPT West Germany)...DIODE 1SS279
D16	8-719-123-79	DIODE 1SS279
D17	8-719-123-79	DIODE 1SS279
D18	8-719-123-79	DIODE 1SS279
D19	8-719-123-79	DIODE 1SS279
D20	8-719-100-05	DIODE 1S2837
D21	8-719-939-00	DIODE SVC203CP
D22	8-719-100-05	DIODE 1S2837
D23	8-719-100-05	DIODE 1S2837
D24	8-719-801-48	DIODE 1SS193
D25	8-719-100-05	DIODE 1S2837
D26	8-719-938-72	DIODE SB01-05CP
D27	8-719-938-72	DIODE SB01-05CP
D28	8-719-801-48	DIODE 1SS193
D29	8-719-801-48	DIODE 1SS193
D30	8-719-100-05	DIODE 1S2837
D31	8-719-100-03	DIODE 1S2835
D32	8-719-801-48	DIODE 1SS193
D201	8-719-801-48	DIODE 1SS193
D203	8-719-100-05	DIODE 1S2837
D204	8-719-123-79	DIODE 1SS279
D205	8-713-300-00	DIODE 1T33
D206	8-713-300-00	DIODE 1T33
D207	8-719-123-79	DIODE 1SS279
D208	8-713-300-00	DIODE 1T33
D209	8-713-300-00	DIODE 1T33
D210	8-719-801-48	DIODE 1SS193
D211	8-719-801-48	DIODE 1SS193
D212	8-719-100-03	DIODE 1S2835
D301	8-719-920-05	DIODE TLG123A
D302	8-719-100-03	DIODE 1S2835
D303	8-719-100-05	DIODE 1S2837
D304	8-719-800-67	DIODE TLR209
D305	8-719-801-48	DIODE 1SS193
D306	8-719-940-16	DIODE GL1PR51
D307	8-719-940-16	DIODE GL1PR51
D308	8-719-801-48	DIODE 1SS193
D309	8-719-100-03	DIODE 1S2835
D310	8-719-801-48	DIODE 1SS193
D402	8-719-100-03	DIODE 1S2835

REVISED

Ref.No.	Part No.	Description
D403	8-719-801-48	(ICF-PRO70:Saudi Arabia)...DIODE 1SS193
D404	8-719-100-03	DIODE 1S2835
D405	8-719-100-03	DIODE 1S2835
D406	8-719-100-03	DIODE 1S2835
D407	8-719-100-03	DIODE 1S2835
D408	8-719-100-03	DIODE 1S2835
D501	8-719-106-98	DIODE RD16M-B3
D502	8-719-801-48	DIODE 1SS193
D701	8-719-101-23	(ICF-PRO80)...DIODE 1SS123
D702	8-719-941-25	(ICF-PRO80)...DIODE HSM2693
D703	8-719-118-32	(ICF-PRO80)...DIODE ND487C1-3R
D704	8-719-812-41	(ICF-PRO80)...DIODE TLR124
IC1	8-759-208-37	IC TA7761F
IC2	8-759-208-38	IC TA7758P
IC3	8-759-100-94	IC UPC358G2
IC201	8-759-801-65	IC LA4145
IC202	8-752-323-84	IC CXD1118M
IC203	8-759-801-15	IC LA5003M
IC301	8-759-140-45	(EXCEPT West Germany) ....IC UPD7508G-798-00
IC301	8-759-142-58	(West Germany).....IC UPD7508G-E64-00
IC302	8-759-140-41	(EXCEPT West Germany)..IC UPD7514G-296-12
IC302	8-759-142-57	(West Germany).....IC UPD7514G-423-12
IC303	8-759-208-13	IC TC4016BFHB
IC701	8-759-107-67	(ICF-PRO80)...IC UPC1651G
J201	1-507-921-00	JACK (EARPHONE)
J202	1-507-921-00	JACK (TAPE)
L1	1-426-308-11	TRANSFORMER, HIGH FREQUENCY
L2	1-459-720-11	COIL (WITH CORE)
L3	1-459-721-11	(EXCEPT West Germany)..COIL (WITH CORE)
L4	1-410-192-51	INDUCTOR CHIP 1UH
L5	1-410-188-51	INDUCTOR CHIP 0.47UH
L6	1-410-220-31	INDUCTOR CHIP 220UH
L7	1-410-184-51	(EXCEPT West Germany) ....INDUCTOR CHIP 0.22UH
L8	1-410-184-51	(EXCEPT West Germany) ....INDUCTOR CHIP 0.22UH
L9	1-410-184-51	(EXCEPT West Germany) ....INDUCTOR CHIP 0.22UH
L10	1-410-193-41	INDUCTOR CHIP 1.2UH
L11	1-410-192-51	INDUCTOR CHIP 1UH
L12	1-410-204-31	INDUCTOR CHIP 10UH
L13	1-410-208-41	INDUCTOR CHIP 22UH
L14	1-410-202-51	INDUCTOR CHIP 6.8UH
L15	1-404-725-11	TRANSFORMER, IF
L16	1-410-220-31	INDUCTOR CHIP 220UH
L17	1-410-204-31	INDUCTOR CHIP 10UH
L18	1-410-187-41	INDUCTOR CHIP 0.39UH
L19	1-406-232-11	COIL (OSC)
L20	1-404-728-11	TRANSFORMER, IF
L21	1-410-220-31	INDUCTOR CHIP 220UH
L22	1-410-188-51	INDUCTOR CHIP 0.47UH
L201	1-459-722-11	COIL (WITH CORE)
L202	1-459-716-11	COIL (WITH CORE)
L203	1-410-194-41	INDUCTOR CHIP 1.5UH
L204	1-459-723-11	COIL (WITH CORE)
L205	1-459-717-11	COIL (WITH CORE)

Ref.No.	Part No.	Description
L206	1-410-197-11	INDUCTOR CHIP 2.7UH
L501	1-410-220-31	INDUCTOR CHIP 220UH
L701	1-410-806-11	(ICF-PRO80)...INDUCTOR CHIP 0.08UH
L702	1-410-802-11	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
L703	1-410-797-11	(ICF-PRO80)...INDUCTOR CHIP 0.02UH
L704	1-410-732-21	(ICF-PRO80)...INDUCTOR CHIP 0.18UH
L705	1-410-802-11	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
L706	1-410-805-11	(ICF-PRO80)...INDUCTOR CHIP 0.07UH
L707	1-410-192-51	(ICF-PRO80)...INDUCTOR CHIP 1UH
L708	1-410-807-11	(ICF-PRO80)...INDUCTOR CHIP 0.1UH
L709	1-410-807-11	(ICF-PRO80)...INDUCTOR CHIP 0.1UH
L710	1-410-803-11	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
L711	1-410-734-11	(ICF-PRO80)...INDUCTOR CHIP 0.27UH
L712	1-410-803-11	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
L713	1-410-803-11	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
L714	1-410-802-11	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
L715	1-410-192-51	(ICF-PRO80)...INDUCTOR CHIP 1UH
ND1	1-807-822-11	DISPLAY PANEL, LIQUID CRYSTAL
Q1	8-729-304-13	TRANSISTOR 2SK360D
Q2	8-729-304-13	(EXCEPT West Germany) ...TRANSISTOR 2SK360D
Q3	8-729-102-07	TRANSISTOR 2SC2223-F13
Q4	8-729-116-64	TRANSISTOR 2SK508-K51
Q5	8-729-800-36	TRANSISTOR 2SD1048
Q6	8-769-401-59	TRANSISTOR 2SK613-3
Q7	8-729-116-64	TRANSISTOR 2SK508-K51
Q8	8-729-116-64	TRANSISTOR 2SK508-K51
Q9	8-729-800-68	TRANSISTOR 2SB815
Q10	8-729-901-02	TRANSISTOR DTC124XK
Q11	8-729-271-23	TRANSISTOR 2SC2712
Q12	8-729-107-45	TRANSISTOR 2SC3624A-L16
Q13	8-729-800-36	TRANSISTOR 2SD1048
Q21	8-729-801-08	TRANSISTOR 2SC2813Q4
Q22	8-729-800-68	TRANSISTOR 2SB815
Q23	8-729-901-02	TRANSISTOR DTC124XK
Q24	8-729-107-45	TRANSISTOR 2SC3624A-L16
Q26	8-729-901-02	TRANSISTOR DTC124XK
Q27	8-729-801-08	TRANSISTOR 2SC2813Q4
Q28	8-729-271-23	TRANSISTOR 2SC2712
Q29	8-729-800-68	TRANSISTOR 2SB815
Q30	8-729-800-68	TRANSISTOR 2SB815
Q31	8-729-102-07	TRANSISTOR 2SC2223-F13
Q32	8-729-801-08	TRANSISTOR 2SC2813Q4
Q33	8-729-800-68	TRANSISTOR 2SB815
Q35	8-729-901-02	TRANSISTOR DTC124XK
Q201	8-729-800-36	TRANSISTOR 2SD1048
Q202	8-729-800-68	TRANSISTOR 2SB815
Q203	8-729-800-68	TRANSISTOR 2SB815
Q204	8-729-800-68	TRANSISTOR 2SB815
Q205	8-729-800-68	TRANSISTOR 2SB815
Q206	8-729-800-68	TRANSISTOR 2SB815
Q207	8-729-800-68	TRANSISTOR 2SB815
Q208	8-729-800-68	TRANSISTOR 2SB815
Q209	8-729-271-23	TRANSISTOR 2SC2712
Q210	8-729-800-68	TRANSISTOR 2SB815
Q211	8-729-903-10	TRANSISTOR FMW1
Q212	8-729-800-68	TRANSISTOR 2SB815
Q214	8-729-800-68	TRANSISTOR 2SB815

Ref.No.	Part No.	Description
Q215	8-729-903-10	TRANSISTOR FMW1
Q216	8-729-800-68	TRANSISTOR 2SB815
Q218	8-729-800-68	TRANSISTOR 2SB815
Q219	8-729-271-23	TRANSISTOR 2SC2712
Q220	8-729-800-68	TRANSISTOR 2SB815
Q221	8-729-800-36	TRANSISTOR 2SD1048
Q222	8-729-102-07	TRANSISTOR 2SC2223-F13
Q223	8-729-208-47	TRANSISTOR 2SK210GR
Q224	8-729-800-68	TRANSISTOR 2SB815
Q225	8-729-102-07	TRANSISTOR 2SC2223-F13
Q226	8-729-208-47	TRANSISTOR 2SK210GR
Q227	8-729-800-68	TRANSISTOR 2SB815
Q228	8-729-220-93	TRANSISTOR 2SK209G
Q229	8-729-271-23	TRANSISTOR 2SC2712
Q230	8-729-220-93	TRANSISTOR 2SK209G
Q231	8-729-271-23	TRANSISTOR 2SC2712
Q232	8-729-901-02	TRANSISTOR DTC124XK
Q301	8-729-100-66	TRANSISTOR 2SC1623
Q302	8-729-100-66	TRANSISTOR 2SC1623
Q303	8-729-100-76	TRANSISTOR 2SA812
Q304	8-729-100-66	TRANSISTOR 2SC1623
Q305	8-729-107-45	TRANSISTOR 2SC3624A-L16
Q306	8-729-100-76	TRANSISTOR 2SA812
Q501	8-729-800-36	TRANSISTOR 2SD1048
Q502	8-729-271-23	TRANSISTOR 2SC2712
Q701	8-729-304-13	(ICF-PRO80)...TRANSISTOR 2SK360D
Q702	8-729-102-07	(ICF-PRO80)...TRANSISTOR 2SC2223-F13
Q703	8-729-162-45	(ICF-PRO80)...TRANSISTOR 2SB624-BV5
R1	1-216-081-00	METAL CHIP 22K 5% 1/10W
R2	1-216-105-00	METAL CHIP 220K 5% 1/10W
R3	1-216-085-00	METAL CHIP 33K 5% 1/10W
R7	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R8	1-216-049-00	METAL CHIP 1K 5% 1/10W
R9	1-216-097-00	METAL CHIP 100K 5% 1/10W
R10	1-216-013-00	METAL CHIP 33 5% 1/10W
R11	1-216-097-00	METAL CHIP 100K 5% 1/10W
R12	1-216-017-00	METAL CHIP 47 5% 1/10W
R13	1-216-013-00	METAL CHIP 33 5% 1/10W
R14	1-216-111-00	METAL CHIP 390K 5% 1/10W
R15	1-216-061-00	METAL CHIP 3.3K 5% 1/10W
R16	1-216-043-00	METAL CHIP 560 5% 1/10W
R17	1-216-049-00	(EXCEPT West Germany) ...METAL CHIP 1K 5% 1/10W
R18	1-216-097-00	(EXCEPT West Germany) ...METAL CHIP 100K 5% 1/10W
R19	1-216-033-00	(EXCEPT West Germany) ...METAL CHIP 220 5% 1/10W
R20	1-216-097-00	(EXCEPT West Germany) ...METAL CHIP 100K 5% 1/10W
R21	1-216-025-00	(EXCEPT West Germany) ...METAL CHIP 100 5% 1/10W
R22	1-216-073-00	METAL CHIP 10K 5% 1/10W
R23	1-216-049-00	METAL CHIP 1K 5% 1/10W
R24	1-216-073-00	METAL CHIP 10K 5% 1/10W
R25	1-216-017-00	METAL CHIP 47 5% 1/10W
R26	1-216-065-00	METAL CHIP 4.7K 5% 1/10W
R27	1-216-073-00	METAL CHIP 10K 5% 1/10W
R28	1-216-017-00	METAL CHIP 47 5% 1/10W
R29	1-216-065-00	METAL CHIP 4.7K 5% 1/10W
R30	1-216-049-00	METAL CHIP 1K 5% 1/10W

Ref.No.	Part No.	Description
R31	1-216-049-00	(EXCEPT West Germany) ...METAL CHIP 1K 5% 1/10W
R32	1-216-089-00	(EXCEPT West Germany) ...METAL CHIP 47K 5% 1/10W
R33	1-216-073-00	METAL CHIP 10K 5% 1/10W
R34	1-216-065-00	METAL CHIP 4.7K 5% 1/10W
R35	1-216-083-00	METAL CHIP 27K 5% 1/10W
R36	1-216-069-00	METAL CHIP 6.8K 5% 1/10W
R37	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R38	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R39	1-216-025-00	METAL CHIP 100 5% 1/10W
R40	1-216-025-00	METAL CHIP 100 5% 1/10W
R41	1-216-025-00	METAL CHIP 100 5% 1/10W
R42	1-216-037-00	METAL CHIP 330 5% 1/10W
R43	1-216-081-00	METAL CHIP 22K 5% 1/10W
R44	1-216-017-00	METAL CHIP 47 5% 1/10W
R45	1-216-089-00	METAL CHIP 47K 5% 1/10W
R46	1-216-073-00	METAL CHIP 10K 5% 1/10W
R47	1-216-089-00	METAL CHIP 47K 5% 1/10W
R48	1-216-073-00	METAL CHIP 10K 5% 1/10W
R49	1-216-133-00	METAL CHIP 3.3M 5% 1/10W
R50	1-216-025-00	METAL CHIP 100 5% 1/10W
R51	1-216-017-00	METAL CHIP 47 5% 1/10W
R52	1-216-073-00	METAL CHIP 10K 5% 1/10W
R53	1-216-081-00	METAL CHIP 22K 5% 1/10W
R54	1-216-748-11	METAL CHIP 39K 5% 1/10W
R56	1-216-103-00	METAL CHIP 180K 5% 1/10W
R57	1-216-049-00	METAL CHIP 1K 5% 1/10W
R58	1-216-065-00	METAL CHIP 4.7K 5% 1/10W
R59	1-216-049-00	METAL CHIP 1K 5% 1/10W
R60	1-216-077-00	METAL CHIP 15K 5% 1/10W
R61	1-216-073-00	METAL CHIP 10K 5% 1/10W
R62	1-216-089-00	METAL CHIP 47K 5% 1/10W
R63	1-216-073-00	METAL CHIP 10K 5% 1/10W
R64	1-216-107-00	METAL CHIP 270K 5% 1/10W
R65	1-216-053-00	METAL CHIP 1.5K 5% 1/10W
R66	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R67	1-216-097-00	METAL CHIP 100K 5% 1/10W
R68	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R69	1-216-057-00	METAL CHIP 2.2K 5% 1/10W
R70	1-216-069-00	METAL CHIP 6.8K 5% 1/10W
R71	1-216-075-00	METAL CHIP 12K 5% 1/10W
R72	1-216-121-00	METAL CHIP 1M 5% 1/10W
R73	1-216-049-00	METAL CHIP 1K 5% 1/10W
R74	1-216-097-00	METAL CHIP 100K 5% 1/10W
R75	1-216-133-00	METAL CHIP 3.3M 5% 1/10W
R76	1-216-089-00	METAL CHIP 47K 5% 1/10W
R77	1-216-105-00	METAL CHIP 220K 5% 1/10W
R78	1-216-069-00	METAL CHIP 6.8K 5% 1/10W
R79	1-216-089-00	METAL CHIP 47K 5% 1/10W
R80	1-216-049-00	METAL CHIP 1K 5% 1/10W
R81	1-216-107-00	METAL CHIP 270K 5% 1/10W
R82	1-216-069-00	METAL CHIP 6.8K 5% 1/10W
R83	1-216-065-00	METAL CHIP 4.7K 5% 1/10W
R84	1-216-069-00	METAL CHIP 6.8K 5% 1/10W
R85	1-216-069-00	METAL CHIP 6.8K 5% 1/10W
R86	1-216-117-00	METAL CHIP 680K 5% 1/10W
R87	1-216-059-00	METAL CHIP 2.7K 5% 1/10W
R88	1-216-061-00	METAL CHIP 3.3K 5% 1/10W

Ref.No.	Part No.	Description			
R89	1-216-037-00	METAL CHIP	330	5%	1/10W
R90	1-216-085-00	METAL CHIP	33K	5%	1/10W
R91	1-216-091-00	METAL CHIP	56K	5%	1/10W
R92	1-216-089-00	METAL CHIP	47K	5%	1/10W
R93	1-216-085-00	METAL CHIP	33K	5%	1/10W
R94	1-216-097-00	METAL CHIP	100K	5%	1/10W
R95	1-216-097-00	METAL CHIP	100K	5%	1/10W
R96	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R97	1-216-049-00	METAL CHIP	1K	5%	1/10W
R98	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R99	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R100	1-216-063-00	METAL CHIP	3.9K	5%	1/10W
R101	1-216-049-00	METAL CHIP	1K	5%	1/10W
R102	1-216-077-00	METAL CHIP	15K	5%	1/10W
R103	1-216-077-00	METAL CHIP	15K	5%	1/10W
R104	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R105	1-216-089-00	METAL CHIP	47K	5%	1/10W
R106	1-216-073-00	METAL CHIP	10K	5%	1/10W
R107	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R108	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R109	1-216-049-00	METAL CHIP	1K	5%	1/10W
R110	1-216-035-00	METAL CHIP	270	5%	1/10W
R111	1-216-049-00	METAL CHIP	1K	5%	1/10W
R112	1-216-089-00	METAL CHIP	47K	5%	1/10W
R113	1-216-073-00	METAL CHIP	10K	5%	1/10W
R114	1-216-089-00	METAL CHIP	47K	5%	1/10W
R115	1-216-105-00	METAL CHIP	220K	5%	1/10W
R116	1-216-037-00	METAL CHIP	330	5%	1/10W
R117	1-216-085-00	METAL CHIP	33K	5%	1/10W
R118	1-216-089-00	METAL CHIP	47K	5%	1/10W
R119	1-216-097-00	METAL CHIP	100K	5%	1/10W
R120	1-216-093-00	METAL CHIP	68K	5%	1/10W
R121	1-216-099-00	METAL CHIP	120K	5%	1/10W
R122	1-216-085-00	METAL CHIP	33K	5%	1/10W
R123	1-216-073-00	METAL CHIP	10K	5%	1/10W
R124	1-216-029-00	METAL CHIP	150	5%	1/10W
R125	1-216-037-00	METAL CHIP	330	5%	1/10W
R126	1-216-037-00	METAL CHIP	330	5%	1/10W
R127	1-216-057-00	(EXCEPT West Germany) ...METAL CHIP	2.2K	5%	1/10W
R129	1-216-295-00	(West Germany) ...METAL CHIP	0	5%	1/10W
R201	1-216-081-00	METAL CHIP	22K	5%	1/10W
R202	1-216-073-00	METAL CHIP	10K	5%	1/10W
R203	1-216-081-00	METAL CHIP	22K	5%	1/10W
R204	1-216-081-00	METAL CHIP	22K	5%	1/10W
R205	1-216-097-00	METAL CHIP	100K	5%	1/10W
R206	1-216-089-00	METAL CHIP	47K	5%	1/10W
R207	1-216-089-00	METAL CHIP	47K	5%	1/10W
R208	1-216-097-00	METAL CHIP	100K	5%	1/10W
R209	1-216-041-00	METAL CHIP	470	5%	1/10W
R210	1-216-049-00	METAL CHIP	1K	5%	1/10W
R211	1-216-079-00	METAL CHIP	18K	5%	1/10W
R212	1-216-073-00	METAL CHIP	10K	5%	1/10W
R213	1-216-045-00	METAL CHIP	680	5%	1/10W
R214	1-216-085-00	METAL CHIP	33K	5%	1/10W
R215	1-216-021-00	METAL CHIP	68	5%	1/10W

Ref.No.	Part No.	Description			
R216	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R217	1-216-081-00	METAL CHIP	22K	5%	1/10W
R218	1-216-073-00	METAL CHIP	10K	5%	1/10W
R219	1-216-073-00	METAL CHIP	10K	5%	1/10W
R220	1-216-081-00	METAL CHIP	22K	5%	1/10W
R221	1-216-081-00	METAL CHIP	22K	5%	1/10W
R222	1-216-081-00	METAL CHIP	22K	5%	1/10W
R223	1-216-081-00	METAL CHIP	22K	5%	1/10W
R224	1-216-097-00	METAL CHIP	100K	5%	1/10W
R225	1-216-073-00	METAL CHIP	10K	5%	1/10W
R226	1-216-081-00	METAL CHIP	22K	5%	1/10W
R227	1-216-081-00	METAL CHIP	22K	5%	1/10W
R228	1-216-089-00	METAL CHIP	47K	5%	1/10W
R229	1-216-091-00	METAL CHIP	56K	5%	1/10W
R230	1-216-089-00	METAL CHIP	47K	5%	1/10W
R231	1-216-073-00	METAL CHIP	10K	5%	1/10W
R232	1-216-049-00	METAL CHIP	1K	5%	1/10W
R233	1-216-097-00	METAL CHIP	100K	5%	1/10W
R234	1-216-097-00	METAL CHIP	100K	5%	1/10W
R235	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R236	1-216-081-00	METAL CHIP	22K	5%	1/10W
R237	1-216-049-00	METAL CHIP	1K	5%	1/10W
R238	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R239	1-216-073-00	METAL CHIP	10K	5%	1/10W
R240	1-216-049-00	METAL CHIP	1K	5%	1/10W
R241	1-216-113-00	METAL CHIP	470K	5%	1/10W
R242	1-216-097-00	METAL CHIP	100K	5%	1/10W
R243	1-216-097-00	METAL CHIP	100K	5%	1/10W
R244	1-216-005-00	METAL CHIP	15	5%	1/10W
R245	1-216-049-00	METAL CHIP	1K	5%	1/10W
R246	1-216-049-00	METAL CHIP	1K	5%	1/10W
R247	1-216-049-00	METAL CHIP	1K	5%	1/10W
R248	1-216-097-00	METAL CHIP	100K	5%	1/10W
R249	1-216-097-00	METAL CHIP	100K	5%	1/10W
R250	1-216-025-00	METAL CHIP	100	5%	1/10W
R251	1-216-073-00	METAL CHIP	10K	5%	1/10W
R252	1-216-031-00	METAL CHIP	180	5%	1/10W
R253	1-216-013-00	METAL CHIP	33	5%	1/10W
R254	1-216-017-00	METAL CHIP	47	5%	1/10W
R255	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R256	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R257	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R258	1-216-097-00	METAL CHIP	100K	5%	1/10W
R259	1-216-099-00	METAL CHIP	120K	5%	1/10W
R260	1-216-033-00	METAL CHIP	220	5%	1/10W
R261	1-216-073-00	METAL CHIP	10K	5%	1/10W
R262	1-216-031-00	METAL CHIP	180	5%	1/10W
R263	1-216-021-00	METAL CHIP	68	5%	1/10W
R264	1-216-017-00	METAL CHIP	47	5%	1/10W
R301	1-216-085-00	METAL CHIP	33K	5%	1/10W
R302	1-216-049-00	METAL CHIP	1K	5%	1/10W
R303	1-216-097-00	METAL CHIP	100K	5%	1/10W
R304	1-216-097-00	(ICF-PRO80)...METAL CHIP	100K	5%	1/10W
R305	1-216-049-00	METAL CHIP	1K	5%	1/10W
R306	1-216-049-00	METAL CHIP	1K	5%	1/10W
R307	1-216-049-00	METAL CHIP	1K	5%	1/10W
R308	1-216-097-00	METAL CHIP	100K	5%	1/10W

Ref.No.	Part No.	Description
R309	1-216-097-00	METAL CHIP 100K 5% 1/10W
R310	1-216-097-00	METAL CHIP 100K 5% 1/10W
R311	1-216-049-00	(ICF-PRO80)...METAL CHIP 1K 5% 1/10W
R312	1-216-049-00	METAL CHIP 1K 5% 1/10W
R313	1-216-097-00	METAL CHIP 100K 5% 1/10W
R314	1-216-049-00	METAL CHIP 1K 5% 1/10W
R315	1-216-099-00	METAL CHIP 120K 5% 1/10W
R316	1-216-037-00	METAL CHIP 330 5% 1/10W
R317	1-216-037-00	METAL CHIP 330 5% 1/10W
R318	1-216-017-00	METAL CHIP 47 5% 1/10W
R319	1-216-049-00	METAL CHIP 1K 5% 1/10W
R320	1-216-049-00	METAL CHIP 1K 5% 1/10W
R321	1-216-073-00	METAL CHIP 10K 5% 1/10W
R322	1-216-049-00	METAL CHIP 1K 5% 1/10W
R323	1-216-049-00	METAL CHIP 1K 5% 1/10W
R324	1-216-049-00	METAL CHIP 1K 5% 1/10W
R325	1-216-049-00	METAL CHIP 1K 5% 1/10W
R326	1-216-097-00	METAL CHIP 100K 5% 1/10W
R327	1-216-097-00	METAL CHIP 100K 5% 1/10W
R328	1-216-097-00	METAL CHIP 100K 5% 1/10W
R329	1-216-097-00	METAL CHIP 100K 5% 1/10W
R330	1-216-097-00	METAL CHIP 100K 5% 1/10W
R331	1-216-049-00	METAL CHIP 1K 5% 1/10W
R332	1-216-049-00	METAL CHIP 1K 5% 1/10W
R334	1-216-049-00	METAL CHIP 1K 5% 1/10W
R335	1-216-049-00	METAL CHIP 1K 5% 1/10W
R336	1-216-049-00	METAL CHIP 1K 5% 1/10W
R337	1-216-049-00	METAL CHIP 1K 5% 1/10W
R338	1-216-049-00	METAL CHIP 1K 5% 1/10W
R339	1-216-049-00	METAL CHIP 1K 5% 1/10W
R340	1-216-049-00	METAL CHIP 1K 5% 1/10W
R341	1-216-049-00	METAL CHIP 1K 5% 1/10W
R342	1-216-049-00	METAL CHIP 1K 5% 1/10W
R343	1-216-049-00	METAL CHIP 1K 5% 1/10W
R344	1-216-049-00	METAL CHIP 1K 5% 1/10W
R345	1-216-049-00	METAL CHIP 1K 5% 1/10W
R346	1-216-097-00	METAL CHIP 100K 5% 1/10W
R347	1-216-085-00	METAL CHIP 33K 5% 1/10W
R348	1-216-121-00	METAL CHIP 1M 5% 1/10W
R349	1-216-121-00	METAL CHIP 1M 5% 1/10W
R350	1-216-121-00	METAL CHIP 1M 5% 1/10W
R351	1-216-049-00	METAL CHIP 1K 5% 1/10W
R352	1-216-049-00	METAL CHIP 1K 5% 1/10W
R353	1-216-097-00	METAL CHIP 100K 5% 1/10W
R354	1-216-081-00	METAL CHIP 22K 5% 1/10W

Ref.No.	Part No.	Description
R355	1-216-049-00	METAL CHIP 1K 5% 1/10W
R356	1-216-097-00	METAL CHIP 100K 5% 1/10W
R357	1-216-099-00	METAL CHIP 120K 5% 1/10W
R358	1-216-113-00	METAL CHIP 470K 5% 1/10W
R359	1-216-073-00	METAL CHIP 10K 5% 1/10W
R360	1-216-097-00	METAL CHIP 100K 5% 1/10W
R361	1-216-101-00	METAL CHIP 150K 5% 1/10W
R362	1-216-085-00	METAL CHIP 33K 5% 1/10W
R363	1-216-017-00	METAL CHIP 47 5% 1/10W
R364	1-216-017-00	METAL CHIP 47 5% 1/10W
R365	1-216-017-00	METAL CHIP 47 5% 1/10W
R366	1-216-097-00	METAL CHIP 100K 5% 1/10W
R367	1-216-097-00	METAL CHIP 100K 5% 1/10W
R368	1-216-025-00	METAL CHIP 100 5% 1/10W
R369	1-216-049-00	METAL CHIP 1K 5% 1/10W
R370	1-216-049-00	METAL CHIP 1K 5% 1/10W
R401	1-216-295-00	METAL CHIP 0 5% 1/10W
R402	1-216-295-00	METAL CHIP 0 5% 1/10W
R403	1-216-295-00	METAL CHIP 0 5% 1/10W
R404	1-216-295-00	METAL CHIP 0 5% 1/10W
R405	1-216-295-00	METAL CHIP 0 5% 1/10W
R406	1-216-295-00	METAL CHIP 0 5% 1/10W
R407	1-216-295-00	METAL CHIP 0 5% 1/10W
R501	1-216-095-00	METAL CHIP 82K 5% 1/10W
R502	1-216-049-00	METAL CHIP 1K 5% 1/10W
R503	1-216-089-00	METAL CHIP 47K 5% 1/10W
R504	1-216-091-00	METAL CHIP 56K 5% 1/10W
R701	1-216-097-00	(ICF-PRO80)...METAL CHIP 100K 5% 1/10W
R702	1-216-018-00	(ICF-PRO80)...METAL CHIP 51 5% 1/10W
R703	1-216-056-00	(ICF-PRO80)...METAL CHIP 2K 5% 1/10W
R704	1-216-081-00	(ICF-PRO80)...METAL CHIP 22K 5% 1/10W
R705	1-216-029-00	(ICF-PRO80)...METAL CHIP 150 5% 1/10W
R706	1-216-081-00	(ICF-PRO80)...METAL CHIP 22K 5% 1/10W
R707	1-216-025-00	(ICF-PRO80)...METAL CHIP 100 5% 1/10W
R708	1-216-085-00	(ICF-PRO80)...METAL CHIP 33K 5% 1/10W
R709	1-216-025-00	(ICF-PRO80)...METAL CHIP 100 5% 1/10W
R710	1-216-049-00	(ICF-PRO80)...METAL CHIP 1K 5% 1/10W
R711	1-216-081-00	(ICF-PRO80)...METAL CHIP 22K 5% 1/10W
R712	1-216-049-00	(ICF-PRO80)...METAL CHIP 1K 5% 1/10W
R713	1-216-065-00	(ICF-PRO80)...METAL CHIP 4.7K 5% 1/10W
RT1	1-237-406-21	RES, ADJ, METAL GLAZE 22K
RV101	1-230-538-11	RES, VAR, CARBON (WITH SW S101)50K(SQL)
RV201	1-237-670-11	RES, VAR, CARBON (WITH SW S201) 20K (VOLUME,TONE)
RV202	1-237-651-11	RES, VAR, CARBON (WITH SW S202) 100K (FINE/SSB,PAGE)

Ref.No.	Part No.	Description
S203	1-554-957-11	SWITCH, PUSH (1 KEY)(POWER)
S301	1-554-956-11	SWITCH, LEAF (LIGHT)
S302	1-553-977-31	SWITCH, SLIDE (WM CH STEP)
S303	1-553-977-31	(ICF-PRO80)...SWITCH, SLIDE (FREQ DISPLAY)
S304	1-554-371-51	SWITCH, TACT (RESET)
S701	1-554-903-21	(ICF-PRO80)...SWITCH, SLIDE(ATTENUATOR)
S702	1-554-903-21	(ICF-PRO80)...SWITCH, SLIDE (FILTER)
SP1	1-503-374-11	SPEAKER
T1	1-459-718-11	COIL (WITH CORE)
T2	1-459-719-11	(EXCEPT West Germany)..COIL (WITH CORE)
T3	1-404-729-11	TRANSFORMER, IF
T4	1-426-309-11	TRANSFORMER, HIGH FREQUENCY
T5	1-426-311-11	TRANSFORMER, HIGH FREQUENCY
T6	1-426-308-11	TRANSFORMER, HIGH FREQUENCY
T7	1-426-310-11	TRANSFORMER, HIGH FREQUENCY
T8	1-404-731-11	TRANSFORMER, IF
T9	1-404-730-11	TRANSFORMER, IF
T10	1-404-727-11	TRANSFORMER, IF
T11	1-404-648-11	TRANSFORMER, IF
T12	1-404-726-11	TRANSFORMER, IF
T501	1-406-231-11	COIL (OSC)
T701	1-426-312-11	(ICF-PRO80) ...TRANSFORMER, HIGH FREQUENCY
T702	1-406-236-11	(ICF-PRO80)...COIL (OSC)
X1	1-567-841-11	VIBRATOR, CERAMIC
X2	1-567-843-11	VIBRATOR, CRYSTAL
X201	1-567-847-11	VIBRATOR, CRYSTAL
X701	1-567-871-11	(ICF-PRO80)...VIBRATOR, CRYSTAL
XF1	1-567-842-11	FILTER, CRYSTAL

ACCESSORY & PACKING MATERIAL

1-501-377-11	(EXCEPT West Germany)...ANTENNA, TELESCOPIC
1-501-412-11	(West Germany)...ANTENNA, TELESCOPIC
1-504-059-11	MAGNETIC EARPHONE(ME-20H)
1-566-456-11	(EXCEPT West Germany)...ADAPTOR, PLUG (TNC-BNC)
*3-764-869-11	(ICF-PRO70)...INSTRUCTION, DBP CAUTION
*3-701-616-00	BAG, POLYETHYLENE
3-890-830-00	BAG, POLYETHYLENE
*3-701-617-00	(ICF-PRO80)...BAG, POLYETHYLENE, STANDARD
3-887-285-07	(ICF-PRO70:Saudi Arabia) ...GUIDE BOOK, RADIO WAVE
3-893-708-01	BELT, CARRYING
3-893-761-01	(ICF-PRO70:E,Saudi Arebia,West Germany ICF-PRO80:US,Canadian,UK,E).....SPACER
3-893-771-01	(EXCEPT West Germany) ...HOLDER, TELESCOPIC ANTENNA
3-893-802-04	(EXCEPT Saudi Arebia)..GUIDE BOOK, RADIO WAVE
3-898-209-01	CUSHION
3-898-240-01	CASE, CARRYING
3-898-206-01	(ICF-PRO70)...CARTON, INDIVIDUAL
3-898-210-01	(ICF-PRO80)...CARTON, INDIVIDUAL
3-990-095-11	(ICF-PRO70:E,AEP,ICF-PRO80) ...MANUAL, INSTRUCTION
3-990-095-41	(ICF-PRO70:AEP,ICF-PRO80:AEP) ...MANUAL, INSTRUCTION
3-990-095-51	(ICF-PRO70:Saudi Arabia) ...MANUAL, INSTRUCTION
3-990-095-71	(ICF-PRO70:West Germany) ...MANUAL, INSTRUCTION

9-952-864-12

Sony Corporation
Audio Group

English
88E0596-1
Printed in Japan
© 1988. 5

Published by A/V Engineering Service Dept.

ICF-PRO70/PRO80

SONY®

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
ICF-PRO80
AEP Model
E Model
ICF-PRO70

SUPPLEMENT-1

File this supplement with the service manual.

Subject:
1. **Converter Frequency Adjustment is added.**
2. **Parts No. of C713 on converter main board are added.**
3. **French model is added in ICF-PRO80.**

1. Converter Frequency Adjustment (ICF-PRO80 only)

Note: Frequency converter
FRQ-80: Except French model
FRQ-81: French model only

Procedure:

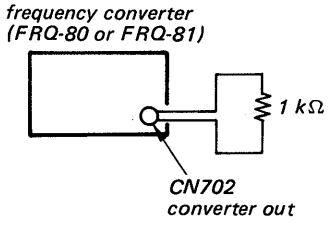

1) Connect a frequency counter to the point Ⓐ (output of the OSC frequency).
2) Terminate between signal line to ground of CN702 by 1 kΩ. (Refer to figure.)
3) Apply dc 3 V from battery terminal of frequency converter.
4) Adjust T702 so that the frequency is as shown below. If not, change the capacity of C713 and adjust again.

Frequency converter	Adjustment frequency
FRQ-80	115 MHz ±0.5 kHz
FRQ-81	100 MHz ±0.5 kHz

OSC frequency	C713
high	22pF
↕	24pF
low	27pF

Adjustment Location:

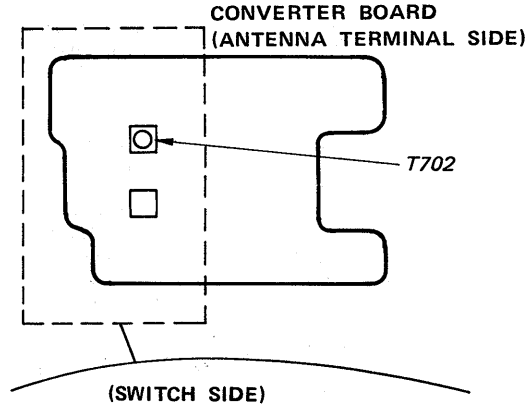

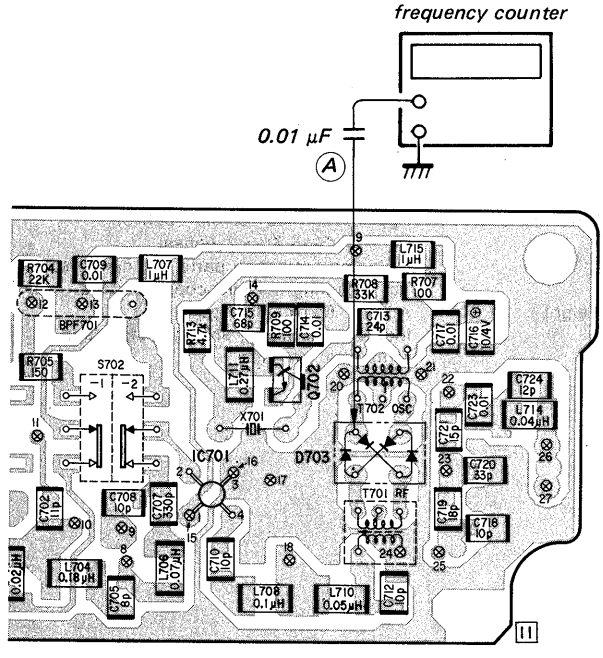

2. There are three types of capacitors as C713 in frequency converter of ICF-PRO80 because it is a capacitor for adjustment.

Ref. No.	Part No.	Description			
C713	1-163-101-00	CERAMIC CHIP	22pF	5%	50V
C713	1-163-102-00	CERAMIC CHIP	24pF	5%	50V
C713	1-163-103-00	CERAMIC CHIP	27pF	5%	50V

3. French model of ICF-PRO80 is the same as AEP model of ICF-PRO80 except for the following portions.

- Model Number Label
- Frequency Converter
- Instruction Manual, Individual Carton

SPECIFICATIONS (ICF-PRO80 French model only)

Circuit system: LW/MW/SW/VHF: Dual conversion superheterodyne
FM: Superheterodyne

Frequency coverage: 150 kHz - 108 MHz (without using the FRQ-81 frequency converter)
100.15 - 208 MHz (using the FRQ-81)

Antennas: SW/VHF/FM: Telescopic antenna
LW/MW: Built-in ferrite bar antenna
External antenna connector: TNC connector

Speaker: 7 × 3.5 cm

Power output: 400 mW (at 10% harmonic distortion)

Output jack: Earphone jack (minijack) (1)
8 ohm
Recording output jack (minijack) (1)
Output level 0.775 mV (−60 dB)
Output impedance 1 kilohm

Power requirements: 6 V DC (for radio/computer backup)
Four size AA (R6) batteries or BP-23 rechargeable battery pack (optional)
DC IN 6 V jack accepts:
AC-D4 AC power adaptor (optional) for use on 100, 120, 220 or 240 V AC depending on the model type of the AC-D4 available in your country
DCC-127A or DCC-120 car battery cord (optional) for use with 12 V car battery
DCC-240 car battery cord (optional) for use with 24 V car battery
EBP-6 battery case (optional) using four size C (R14) batteries

Battery life: Approx. 10 hours using Sony SUM-3(NS) batteries

Dimensions: Approx. 90 × 182 × 50 mm (w/h/d) ($3\frac{5}{8} \times 7\frac{1}{4} \times 2$ inches)
including projecting parts and controls, not including the telescopic antenna

Weight: Approx. 650 g (1 lb 7 oz)
including batteries, shoulder strap and telescopic antenna

FRQ-81 frequency converter

Shift frequency: 100 MHz

Attenuator: 0 dB/−30 dB

Power requirements: 3 V DC, two size AA (R6) batteries

Battery life: Approx. 80 hours using Sony SUM-3(NS) batteries

Dimensions: Approx. 40 × 98 × 31 mm (w/h/d) ($1\frac{5}{8} \times 3\frac{7}{8} \times 1\frac{1}{4}$ inches)
including projecting parts and controls

Weight: Approx. 120 g (4.2 oz)
including batteries

Accessories supplied

Telescopic antenna (1)
Earphone (1)
Shoulder strap (1)
Carrying case (1)
Antenna holder (1)
Antenna plug adaptor (BNC ↔ TNC) (1)
FRQ-81 frequency converter (1)
Wave Handbook (1)

Design and specifications subject to change without notice.

TO CONVERT THE FREQUENCY COVERAGE (ICF-PRO80 French model only)

The supplied FRQ-81 frequency converter shifts the frequency coverage of the receiver by 100 MHz, i.e. to 100.15-208 MHz, to allow reception of air band, PSB (Public Service Band) and TV VHF channels. etc.

INSTALLATION OF THE FREQUENCY CONVERTER

1 Insert the two optional size AA (R6) batteries into the converter.

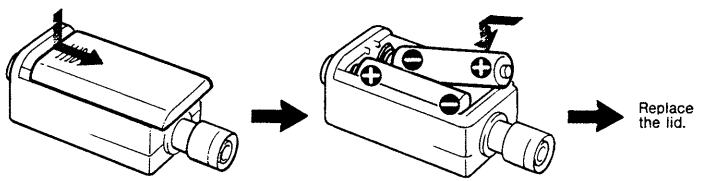

2 Detach the telescopic antenna from the receiver.

3 Attach the telescopic antenna to the frequency converter, and then the converter to the antenna connector.

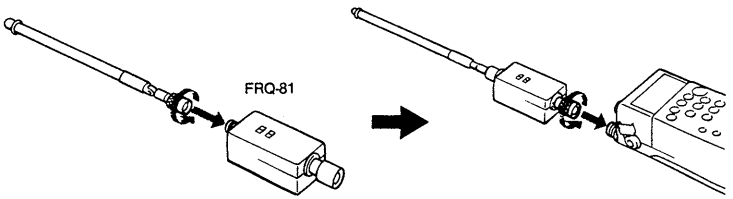

TO SHIFT THE FREQUENCY DISPLAY

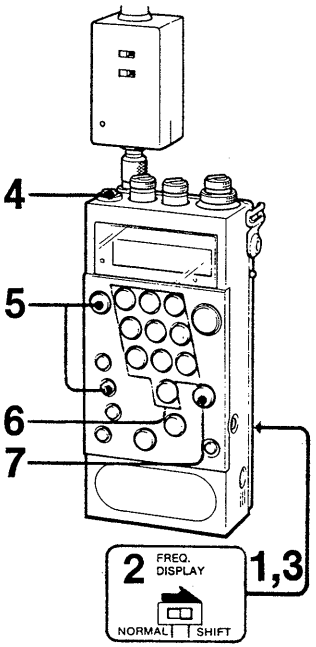

1 Remove the battery case from the battery compartment of the receiver.

2 Set FREQ.DISPLAY inside the battery compartment to SHIFT.

3 Replace the battery case.

4 Depress POWER.
The [S] (shift) indicator and a frequency shifted by 100 MHz will appear in the window.



5 Keeping PROGRAM pressed, press DIRECT.
The [S] indicator will blink.



6 While the [S] indicator is blinking, input the frequency to be shifted by the converter, 100 MHz, with the number buttons.



7 Press EXECUTE.



Now the frequencies 100.150-208.000 MHz can be displayed to match the received station frequencies.

Battery life
Approximately 80 hours of converter operation can be expected with the Sony SUM-3(NS) batteries.
When the POWER indicator on the converter becomes dim, replace both batteries.

Note
When the converter is not be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.

To check the shifted frequency
Keeping FUNCTION pressed, press KEY/MEMORY PROTECT. While the buttons are pressed, the shifted frequency is displayed in the window.

TO CONVERT THE FREQUENCY COVERAGE

TUNING

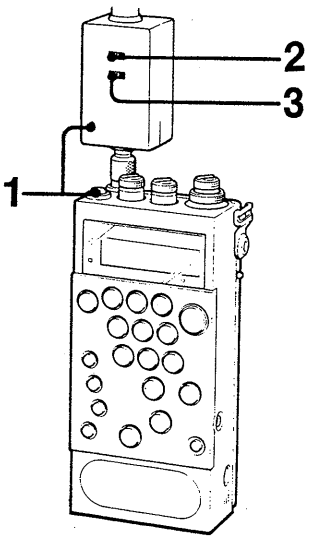

1 Depress POWER on the receiver.
The converter will be turned on automatically and the POWER indicator on the converter will light.

2 Set the ATTENUATOR selector on the converter to 0 dB.

3 Set the FILTER selector on the converter according to the frequency of the station to be tuned in.
100.15–174 MHz: for 100.15–174 MHz reception (air band, PSB, etc.)
174–208 MHz: for 174–208 MHz reception (TV channels, etc.)

4 Tune in the desired station with any of the tuning methods on pages 16–28.
If necessary, select the appropriate detection mode. See "To select the detection mode" on page 35.

After listening, press to turn off POWER.

Special notes on tuning in the shifted frequency coverage

Direct tuning

With the converter installed, always input 6 digits of the frequency for direct tuning. Righthand 000 cannot be omitted.

Memory tuning and memory scan tuning

Store the stations in the 100.15–174 MHz range and those in the 174–208 MHz range on separate memory pages. If they are stored in a mixed manner on one page, memory scanning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

Program memory scan tuning

Do not program the stations in the 100.15–174 MHz range and those in the 174–208 MHz range in a mixed manner. Otherwise, program memory scan tuning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

To select the detection mode
The selectable detection modes in the 100.15–208 MHz range are as follows:

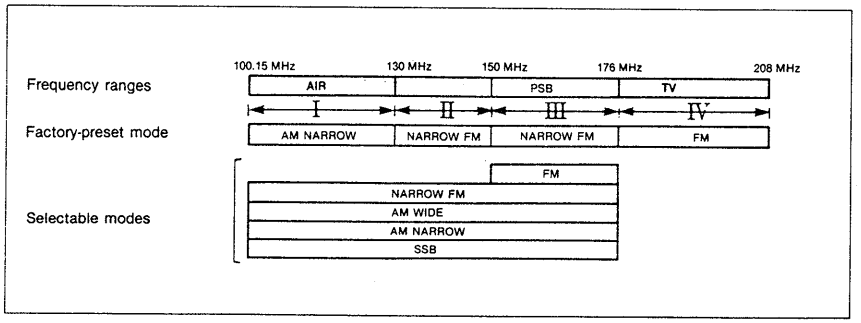

- When tuning in airband, PSB and TV stations, set to the following detection modes.
  Air band (118–136 MHz) → AM NARROW
  PSB (146–174 MHz) → NARROW FM
  TV (174–208 MHz) → FM
- For other types of broadcasts and radio communications, set to the appropriate detection mode.

Notice
When using the supplied converter, reception of the signals around 200 MHz may be difficult because of internal spurious signals generated by the built-in oscillators.

To resume the original frequency coverage of the receiver
Detach the converter from the antenna connector and replace the telescopic antenna. Set FREQ. DISPLAY inside the battery compartment to NORMAL.

For improved reception
If the received sound is distorted or noisy due to interference from an adjacent station, set ATTENUATOR on the converter to –30 dB.

Tuning intervals in the 100.15–208 MHz range

Frequency coverage	Interval
100.150–100.528 MHz	3 kHz
100.531–101.602 MHz	9 kHz*
101.605–149.995 MHz	5 kHz
150.000–175.995 MHz	5 kHz**
176–208 MHz	50 kHz

* The tuning interval can be changed to 10 kHz. See page 14.
** When the detection mode is FM, the interval of this range will be 50 kHz.

CONVERTER BOARD SCHEMATIC DIAGRAM (ONLY FOR ICF-PRO80)

: different portion

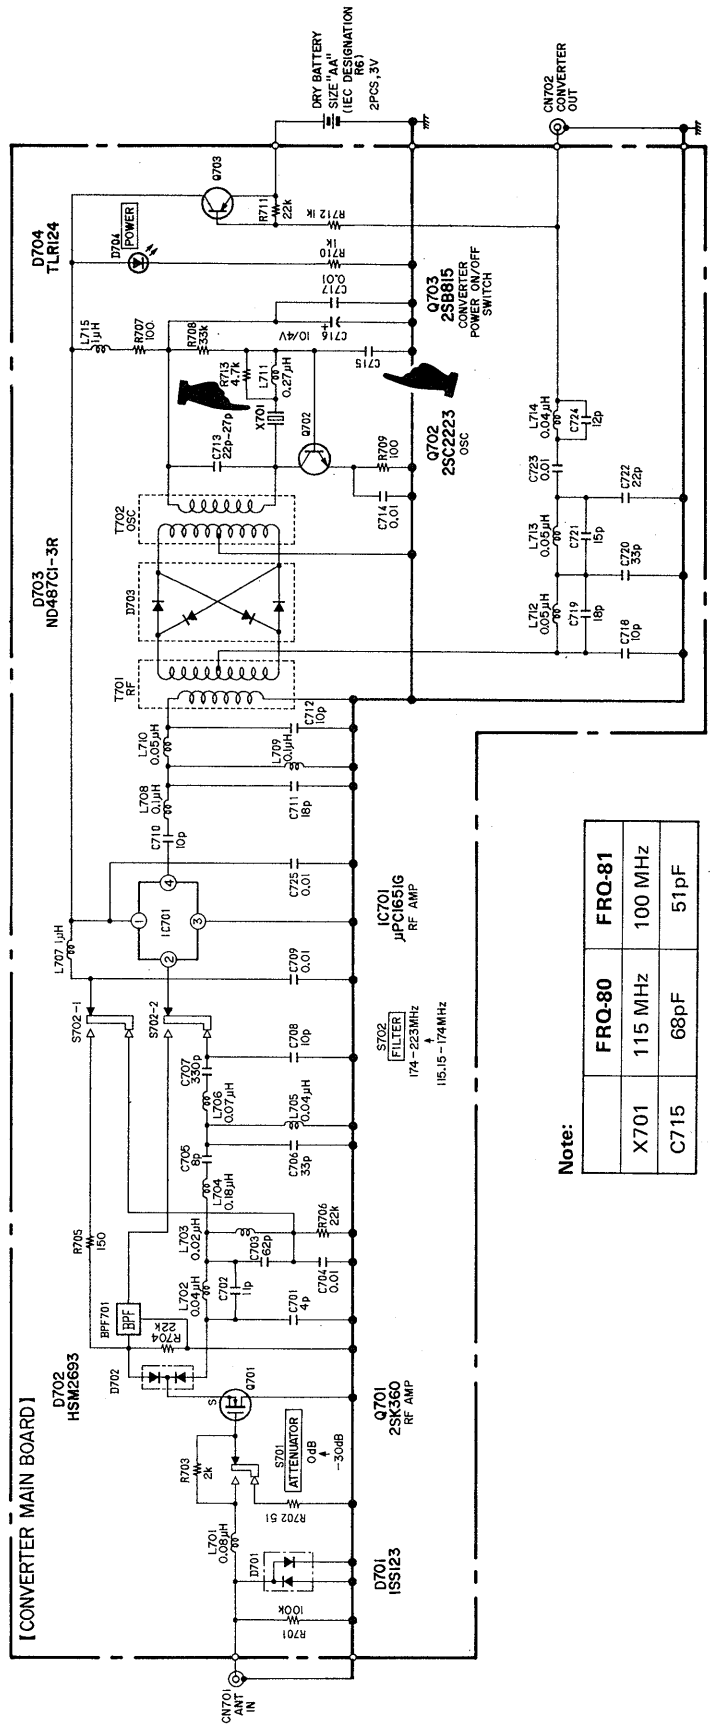

Note:

	FRQ-80	FRQ-81
X701	115 MHz	100 MHz
C715	68pF	51pF

- Only the following parts are different from that of AEP model.

	AEP model			French model	
Page	No.	Part No.	Description	Part No.	Description
33	35	*3-898-202-01	LABEL, MODEL NUMBER (U)	*3-897-860-01	LABEL, MODEL NUMBER (AE)
35	101	3-898-234-01	LID, BATTERY CASE	3-898-234-21	LID, BATTERY CASE
35	109	3-898-241-01	COVER (A)	3-898-241-21	COVER (A)
35, 36	918	A-3665-026-A	MOUNTED PCB, CONVERTER	A-3665-031-A	MOUNTED PCB CONVERTER
38	C715	1-163-113-00	CERAMIC CHIP 68pF 5% 50V	1-163-110-00	CERAMIC CHIP 51pF 5% 50V
43	X701	1-567-871-11	VIBRATOR, CRYSTAL (115MHz)	1-577-211-11	VIBRATOR, CRYSTAL (100MHz)
43		3-898-210-01	CARTON, INDIVIDUAL	*3-893-786-01	CARTON, INDIVIDUAL
43		3-990-095-11	MANUAL, INSTRUCTION (ENGLISH/FRENCH/SPANISH)	3-786-591-11	MANUAL, INSTRUCTION (ENGLISH/FRENCH/SPANISH)
43		3-990-095-41	MANUAL, INSTRUCTION (GERMAN/DUTCH/SWEDISH)	————	

9-952-864-81

Sony Corporation
Audio Group

English
89A0583-1
Printed in Japan
© 1989. 1
Published by A/V Engineering Service Dept.

ICF-PRO70/PRO80

SONY

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
ICF-PRO80
AEP Model
E Model
ICF-PRO70

SUPPLEMENT-2

File this supplement with the Service Manual.

Subject : Frequency converter supplied with ICF-PRO80 has been supplied for assembly.

Destination	Part No.	description
Except French model	A-3614-013-A	Frequency Converter Ass'y (FRQ-80)
French model	A-3614-016-A	Frequency Converter Ass'y (FRQ-81)

9-952-864-82

Sony Corporation
Audio Group

English
89 I 0584-1
Printed in Japan
© 1989.9
Published by Customer Relations and Service Group